



RAZER RAIJU ULTIMATE FIRMWARE  
UPDATE

VERSION 1.03

---

## RAZER RAIJU ULTIMATE FIRMWARE UPDATE VERSION 1.03

This document is a step by step process on how to update the Razer Raiju Ultimate to firmware version 1.03.

Please note you will need a Windows PC to install the update your Razer Raiju Ultimate Edition controller


### **Firmware Official Release Notes:**

- Improve the response time (lag) over Bluetooth connection
- Implement the new pairing indicator.


---

## INSTALLATION PROCESS


1. If you have not already done so, download the firmware update to your PC at the link below:  
<http://rZR.to/MTloz>
2. Close Razer Synapse and other applications before launching the firmware update.

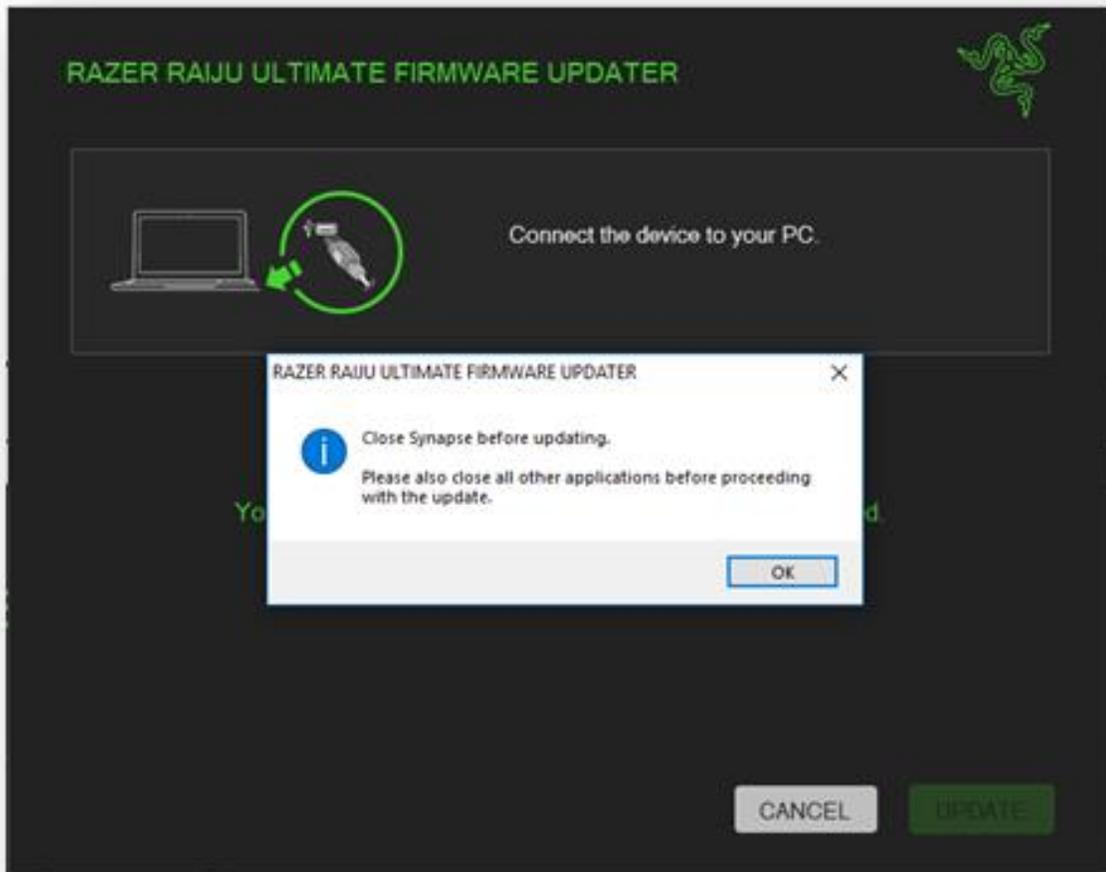


3. Connect the Razer Raiju Ultimate to a USB port on your PC. Please note you will need a Windows PC to install the update your Razer Raiju Ultimate controller.
4. Launch the downloaded file and left click the "**Update**" button.

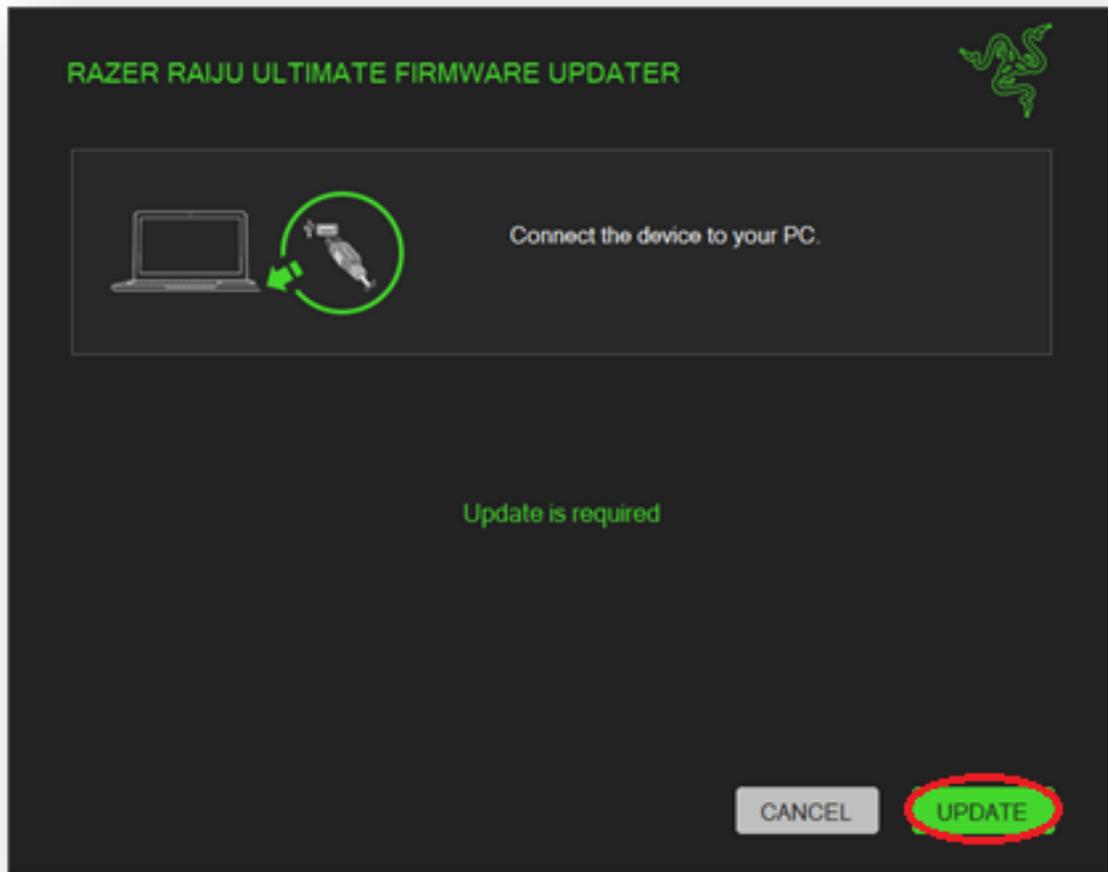

5. Wait for the firmware updater to complete the update process.

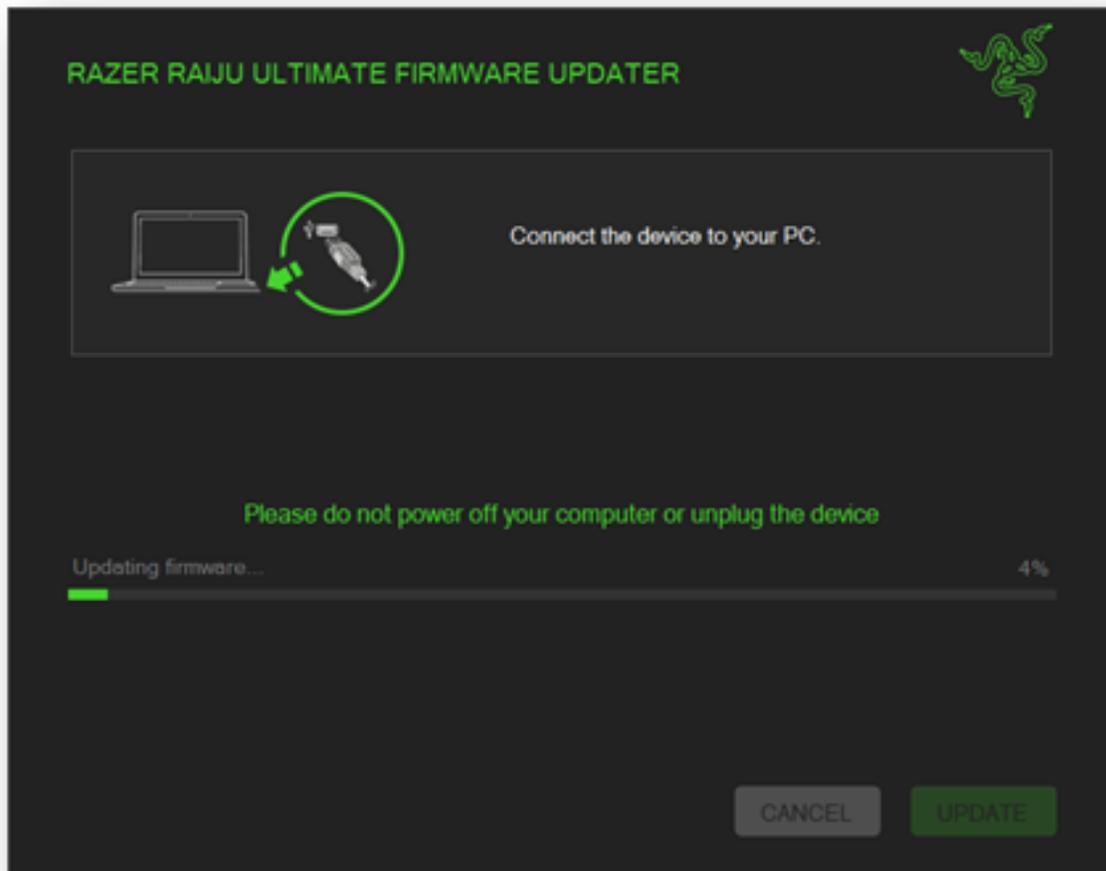

6. You should see a confirmation message once the firmware update has been successfully applied. **Close** to exit the updater. Your firmware has now been updated.

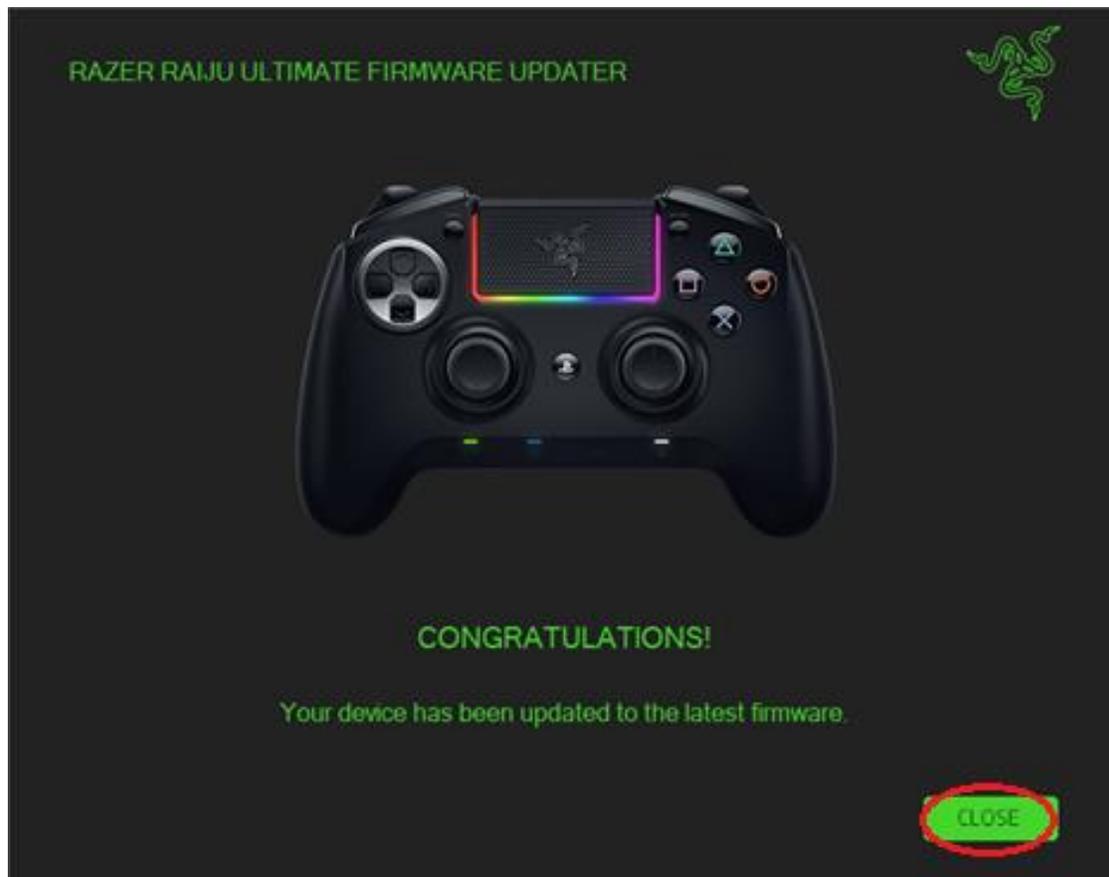

7. End.