



RAZER HUNTSMAN V3 X TENKEYLESS

MASTER GUIDE

 
Get leaner and fight meaner with the **Razer Huntsman V3 X Tenkeyless**.
Sporting a streamlined form factor for unrestricted play, get the edge for esports with our latest optical switches engineered for ultra-fast inputs and zero debounce delay.

CONTENTS

1. WHAT'S INSIDE.....	3
2. WHAT'S NEEDED	4
3. LET'S GET YOU COVERED	4
4. TECHNICAL SPECIFICATIONS	5
5. SETTING UP YOUR KEYBOARD	6
6. USING YOUR RAZER KEYBOARD.....	7
7. CONFIGURING YOUR RAZER KEYBOARD	10
8. SAFETY AND MAINTENANCE	22
9. LEGALESE.....	24

1. WHAT'S INSIDE


- Razer Huntsman V3 X Tenkeyless

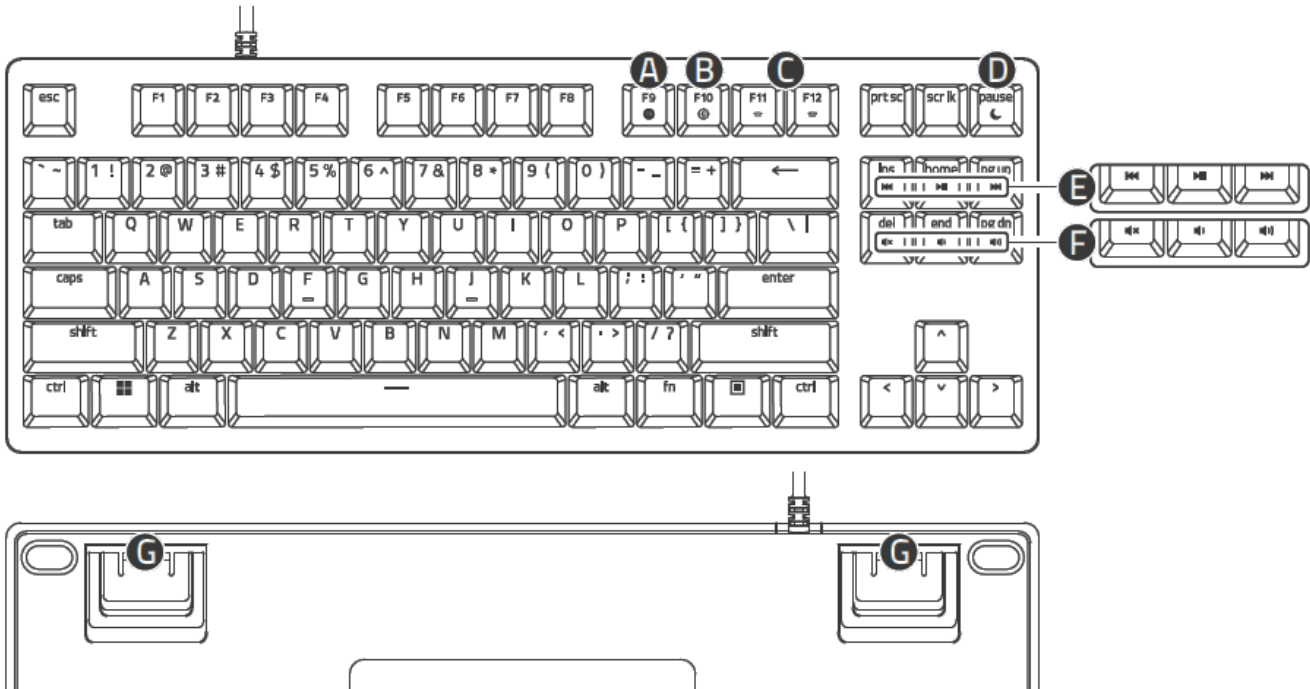


- A. On-The-Fly Macro record key
- B. Gaming mode key
- C. Backlight control keys
- D. Sleep mode key
- E. Media control keys
- F. Volume control keys
- G. Kickstand

- Important Product Information Guide

 2. WHAT'S NEEDED

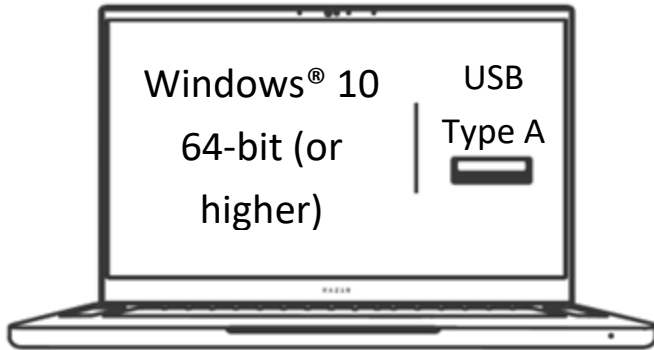

 3. LET'S GET YOU COVERED

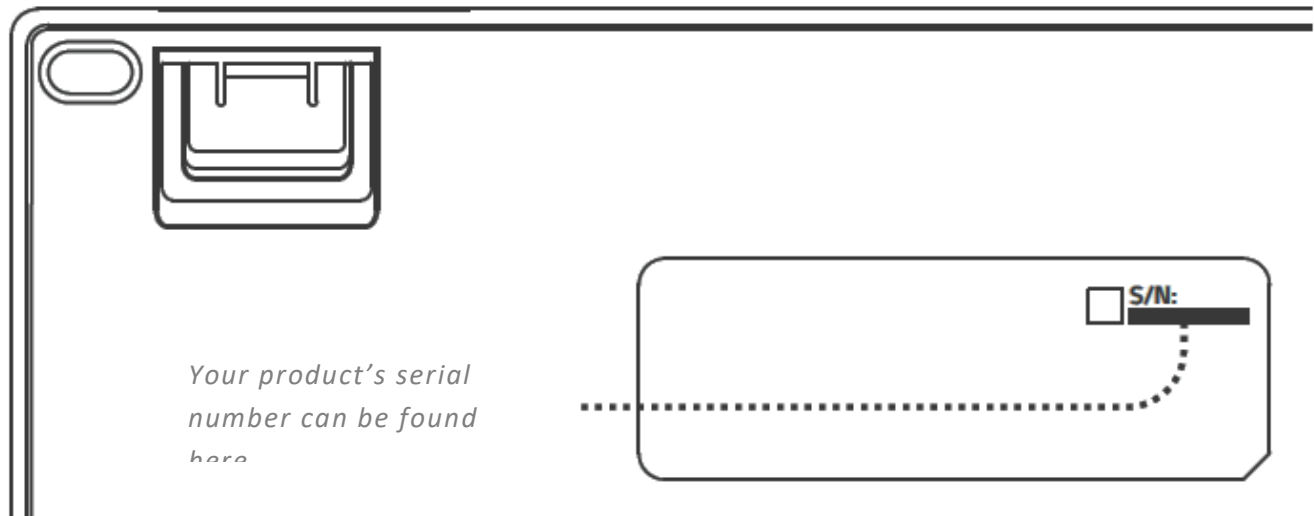

Register your product and score exclusive benefits
[razerid.razer.com/warranty](https://www.razerid.razer.com/warranty)

4. TECHNICAL SPECIFICATIONS

FEATURES

- Switch Type: **Razer™ Box Optical Switch (Clicky/Linear)**
- Size: **Tenkeyless**
- Lighting: **Razer Chroma™ RGB**
- Wrist Rest: **None**
- Onboard Memory: **None**
- Media Keys: **None**
- Connectivity: **Wired**
- Keycaps: **Doubleshot ABS Keycaps**

 
Others:

- Razer™ Synapse enabled
- N-key Rollover with Anti-ghosting
- 1000 Hz Polling Rate
- 5052 Brushed Aluminum Alloy Top Plate
- Fully programmable keys with on-the-fly macro recording
- Gaming Mode
- Lubricated Stabilizers

APPROXIMATE SIZE & WEIGHT

- Length: 359 mm / 14.1 in
- Width: 136.5 mm / 5.4 in
- Height: 38.5 mm / 1.5 in
- Weight: 755 g / 1.7 lbs

5. SETTING UP YOUR KEYBOARD

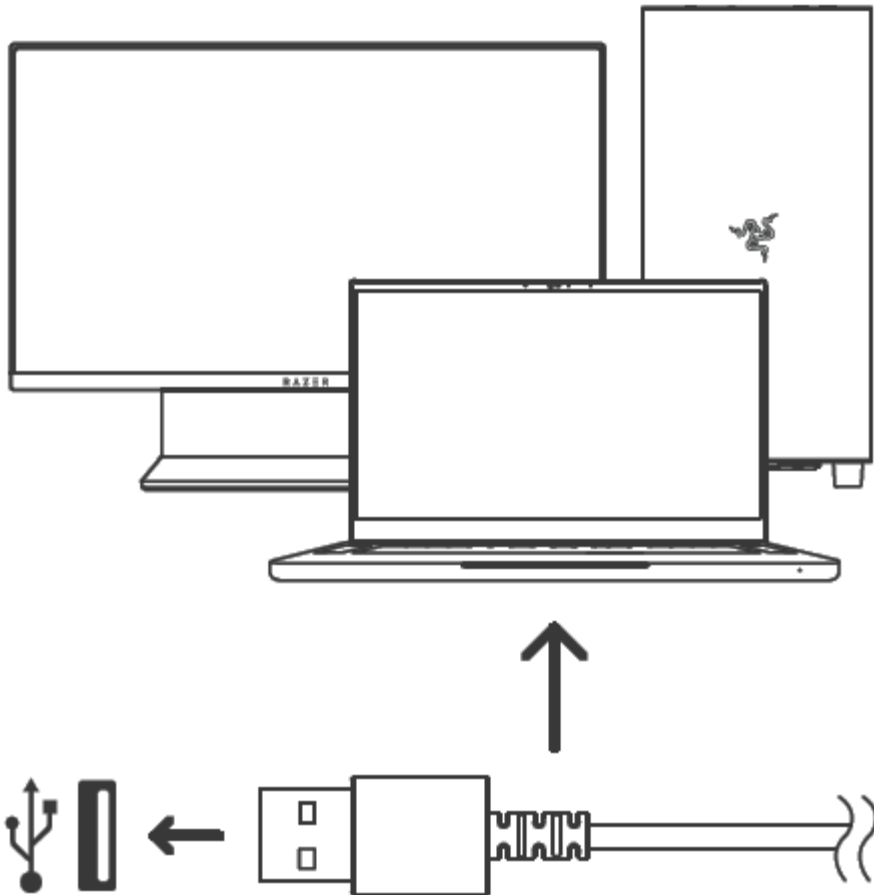

i Install Razer Synapse when prompted or download the installer from razer.com/synapse.

6. USING YOUR RAZER KEYBOARD

MEDIA CONTROLS

Hotkey	Description
fn + ins	Return to the previous track (⏮)
fn + home	Play or pause the current track (⏮⏪)
fn + pg up	Skip to the next track (⏮⏩)
fn + del	Mute or unmute (🔊✖)
fn + end	Volume down (🔊)
fn + pg dn	Volume up (🔊)

KEYBOARD FUNCTIONS

Hotkey	Description
fn + F10	Disable the Windows Key, Menu/Apps Key, Alt + Tab, and Alt + F4 functions (customize options using Razer Synapse)
fn + F11	Decrease (🔼) the keyboard LEDs' brightness
fn + F12	Increase (🔽) the keyboard LEDs' brightness
fn + pause	Suspend all operating system activities and conserve power

ON-THE-FLY MACRO RECORDING

 








Follow these steps to create an OTF Macro Recording:

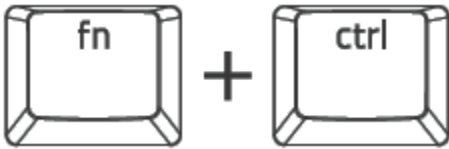



1. Press the key combination to start recording.

2. Type the keys you want to record.
3. Press the key combination to stop the recording or the ESC key to cancel the recording.
4. Wait for the OTF Macro record key to start blinking.
5. Press the desired Macro key to bind your recording.

CHROMA EFFECTS



Hotkey	Chroma Effect
fn + ctrl + 1	 Off
fn + ctrl + 2	 Static*
fn + ctrl + 3	 Breathing*
fn + ctrl + 4	 Spectrum cycling
fn + ctrl + 5	 Wave**
fn + ctrl + 6	 Reactive*

fn + ctrl + 7	 Starlight*
fn + ctrl + 8	 Ripple*
fn + ctrl + 9	 Wheel**
fn + ctrl + 0	 Radiate*

**Press again to change color*

***Press again to change direction*

i Use the Razer Synapse app to customize your keyboard's lighting effects further and access other features available on your keyboard.

Find out more about your gaming-grade keyboard at support.razer.com

7. CONFIGURING YOUR RAZER KEYBOARD

 
i *Disclaimer: Internet connection is required for installation, updates and cloud-based features. Registering for a Razer ID account is recommended, but optional. All listed features are subject to change based on the current software version, connected device(s), and supported apps and software.*

SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse.


Dashboard

The Dashboard subtab is an overview of your Razer Synapse where you can access all your Razer devices, modules, and online services.

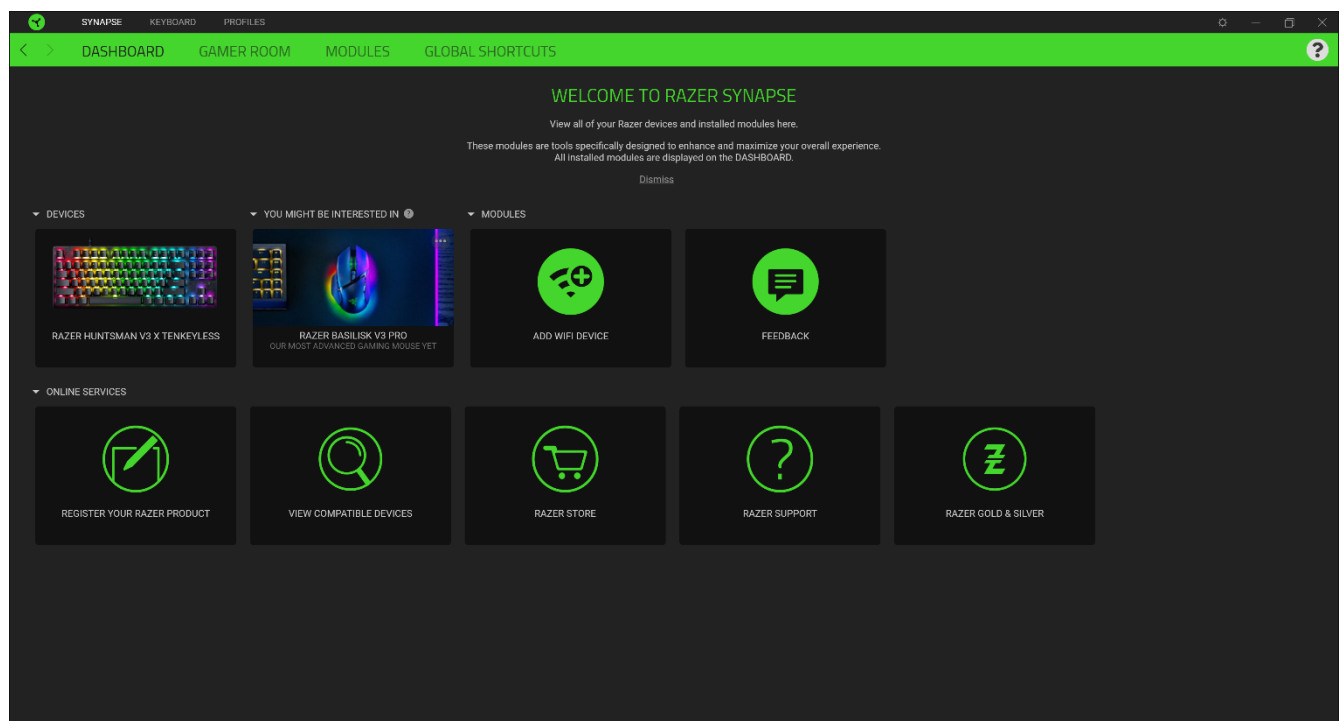

Modules

 
The Modules subtab displays all installed and available modules for installation.

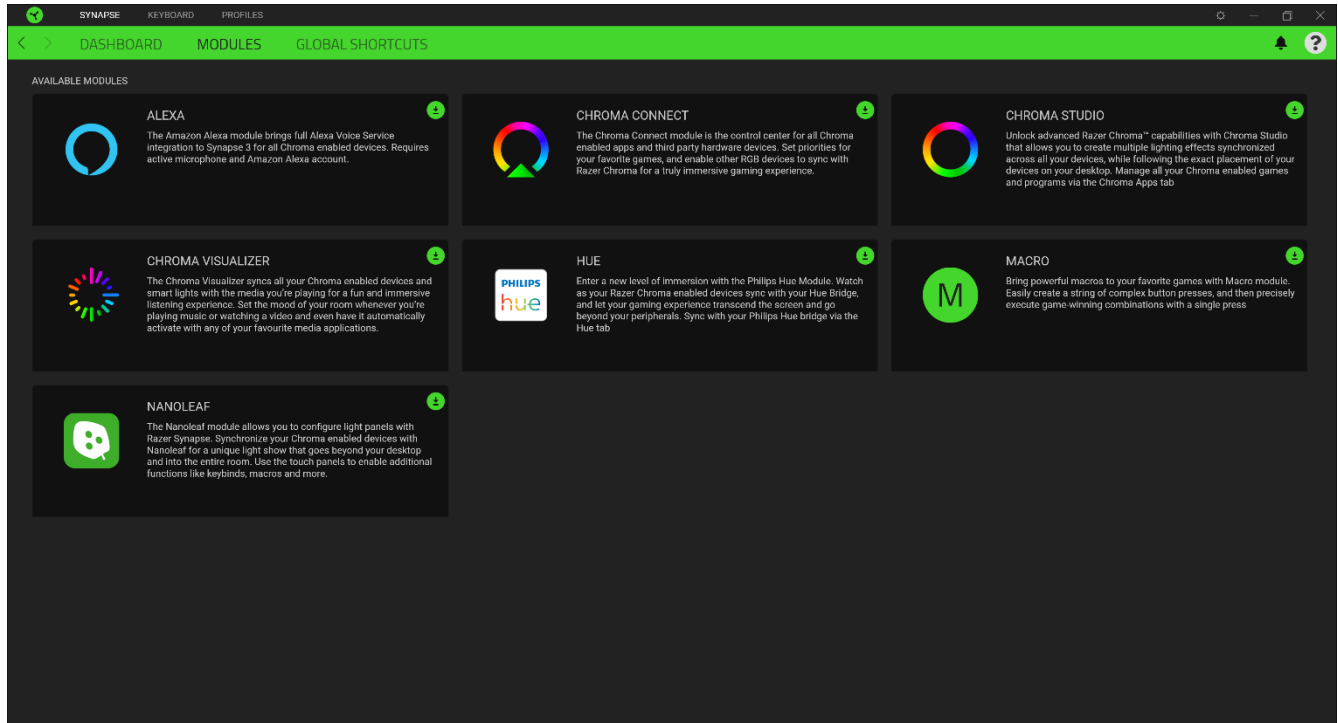

Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs which apply across all device profiles. [Learn more about Profiles](#)

  *Only Razer Synapse-enabled device inputs will be recognized.*

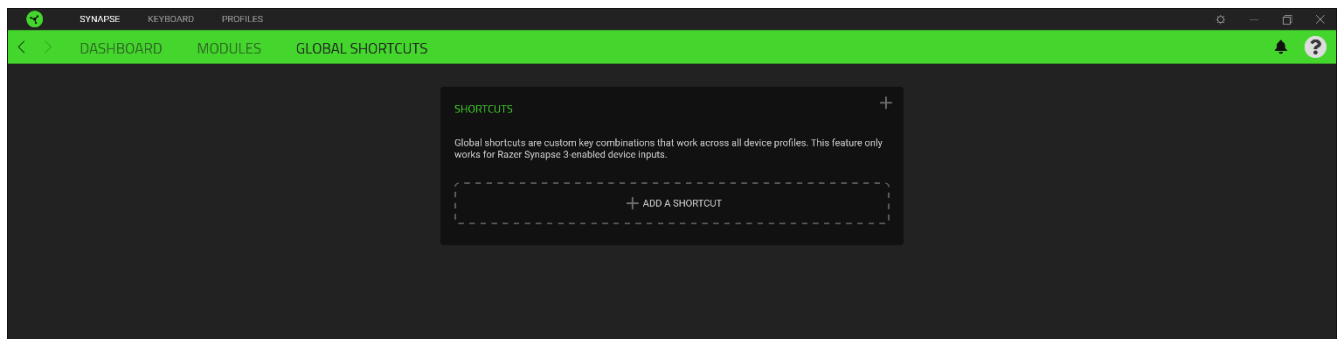


KEYBOARD

The Keyboard tab is the main tab for your Razer Huntsman V3 X Tenkeyless. From here, you can change your device settings such as key assignments and your device's lighting. Changes made under this tab are automatically saved to your system and cloud storage.

Customize

 The Customize subtab is for modifying your keyboard's key assignments.

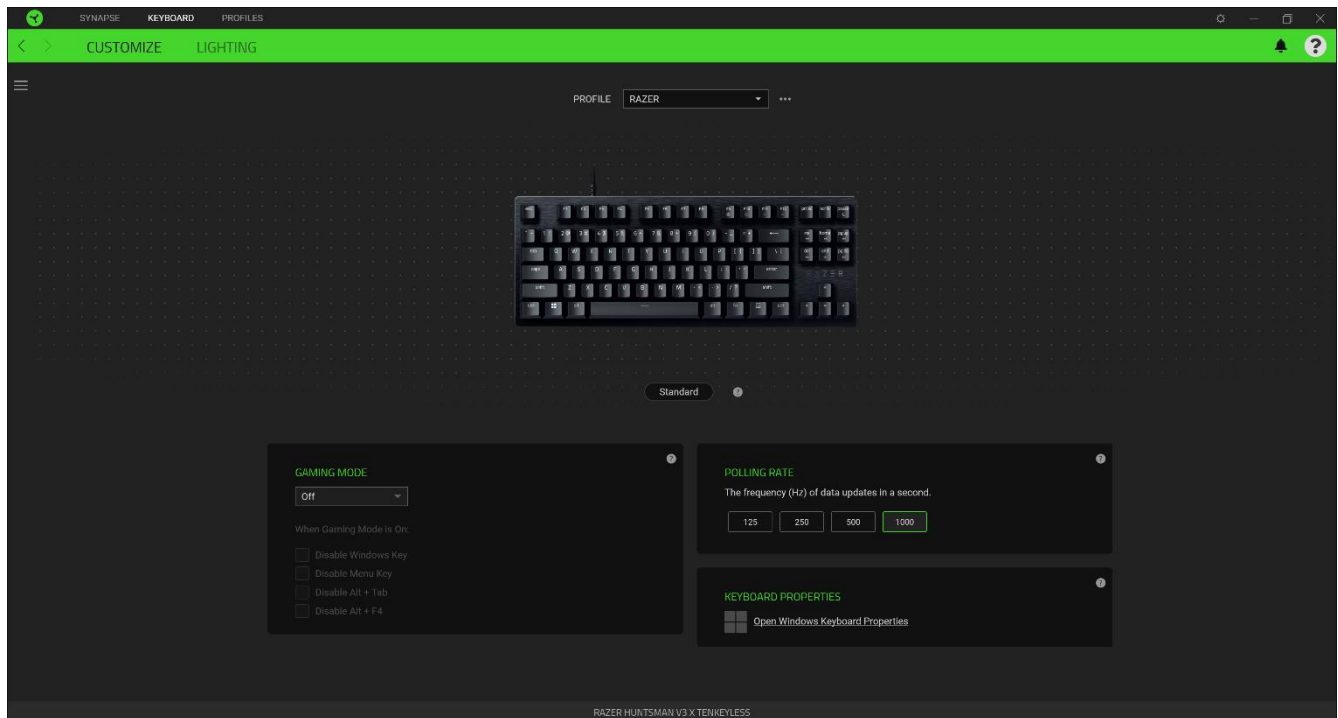

Profile

Profile is a data storage for keeping all your Razer peripheral's settings. By default, the profile name is based on your system's name. To add, import, rename, duplicate, export, or delete a profile, simply press the profile's corresponding Miscellaneous button (●●●).

Gaming Mode

Gaming Mode enables you to customize which keys to disable when Gaming Mode is activated. Depending on your settings, you may choose to disable the Windows key, Alt + Tab and Alt + F4.

Polling Rate

The higher the polling rate, the more frequently the computer receives information about the status of your keyboard; thereby reducing the keyboard's input latency. You can select from 125Hz all the way to 8000Hz.

Keyboard Properties

 
Allows you to open the Windows Keyboard Properties where you can modify other keyboard settings such as Repeat delay, Repeat Rate, and Cursor blink rate, or view all keyboard drivers installed in your PC.

Hypershift


Hypershift mode is a secondary set of key assignments that is activated when the Hypershift key is held down. By default, the Hypershift key is assigned to the fn key of your Razer Synapse-supported keyboard; however, you can also assign any key as a Hypershift key.

Sidebar

Clicking the Sidebar button (☰) will reveal all current key assignments for your Razer Huntsman V3 X Tenkeyless.

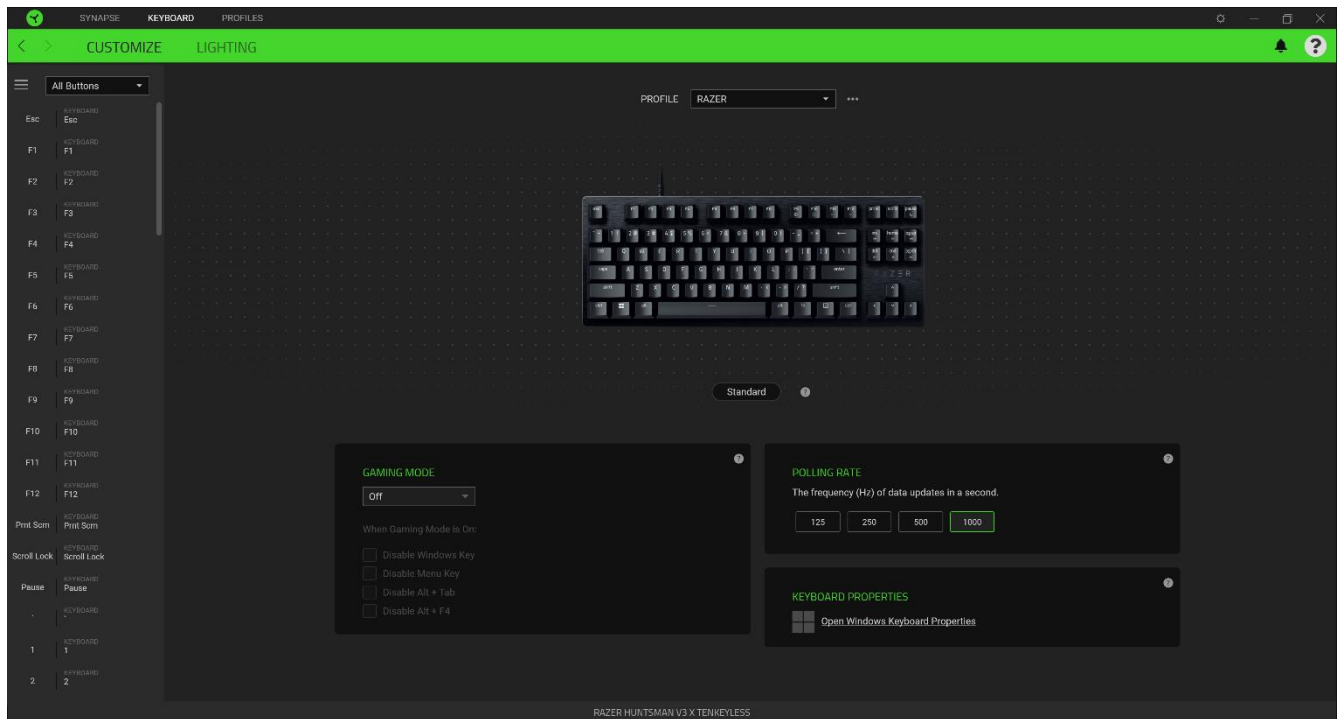

 Alternatively, you can skip to a specific key assignment by selecting it on the Customize tab.

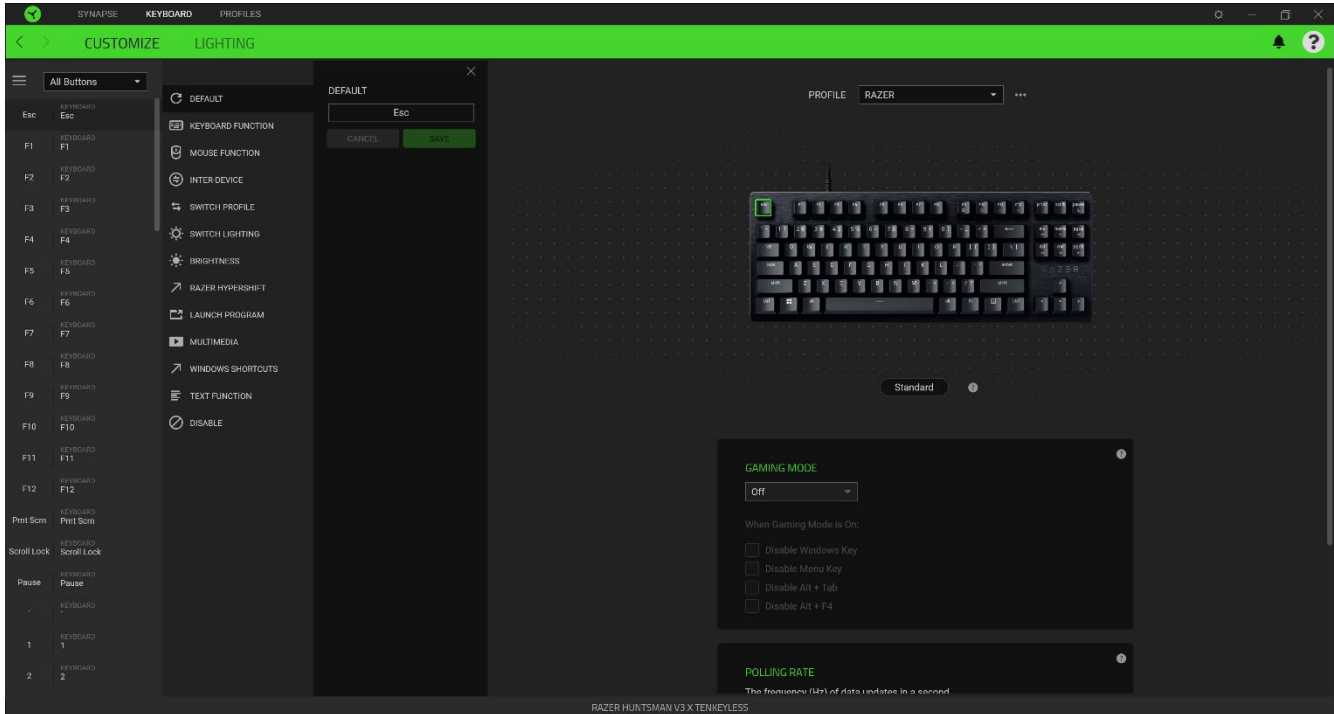

Upon selecting a key assignment, you may then change it to one of the following functions:

Default

This option enables you to return the selected key to its original setting. For analog keyboards, this option also allows you to set the actuation and release point for each key or apply the same settings for all analog keys.

Keyboard Function

This option changes the key assignment into a keyboard function. You can also choose enable Turbo mode which allows you to emulate repeatedly pressing the keyboard function while the key is held down.

Mouse Function

This option allows you to change any key into a mouse function. Listed below are the functions which you can choose from:

- Left Click - Performs a left mouse click using the assigned button.
- Right Click - Performs a right mouse click using the assigned button.
- Scroll Click - Activates the universal scrolling function.

- Double Click - Performs a double left click using the assigned button.
- Mouse Button 4 - Performs a “Backward” command for most internet browsers.
- Mouse Button 5 - Performs a “Forward” command for most internet browsers.
- Scroll Up - Performs a “Scroll Up” command using the assigned button.
- Scroll Down - Performs a “Scroll Down” command using the assigned button.
- Scroll Left - Performs a “Scroll Left” command using the assigned button.
- Scroll Right - Performs a “Scroll Right” command using the assigned button.

You can also choose to enable Turbo mode in some of the mouse functions which allow you to emulate repeatedly pressing and releasing said function while the key is held down.

Inter-device

Inter-device allows you to change the functionality of other Razer Synapse-enabled devices. Some of these functionalities are device-specific such as using your Razer gaming keyboard to change the Sensitivity Stage of your Razer gaming mouse.

Switch Profile

Switch Profile enables you to quickly change profiles and load a new set of key assignments. An on-screen notification will appear whenever you switch profiles.

Brightness

Assign the chosen key to turn your device’s LED lighting bright, dim, or to toggle them on/off.

M Macro

A Macro is a prerecorded sequence of keystrokes and button presses that is executed with precise timing. By setting the key function to Macro, you can conveniently execute a chain of commands. This function will only be visible when the Macro module is installed.

Switch Lighting

Switch Lighting allows you to easily switch between all advanced lighting effects. This function will only be visible when the Chroma Studio module is installed.

Razer Hypershift

Setting the key to Razer Hypershift will allow you to activate Hypershift mode if the key is held down.

Launch Program

Launch Program enables you to open an app or a website using the assigned key. When you select Launch Program, two choices will appear, which require you to search for a specific app you want to open or write the address of the website you want to visit.

Multimedia

This option allows you to assign multimedia controls to your Razer device. Listed below are the multimedia controls you can choose from:

- Volume Down - Decreases the audio output.
- Volume Up - Increases the audio output.
- Mute Volume - Mutes the audio.
- Mic Volume Up - Increases the microphone volume.
- Mic Volume Down - Decreases the microphone volume.
- Mute Mic - Mutes the microphone.
- Mute All - Mutes both microphone and audio output.
- Play / Pause - Play, pause, or resume playback of the current media.
- Previous Track - Play the previous media track.
- Next Track - Play the next media track.

Windows Shortcuts

This option allows you to assign your preferred key into a Windows Operating System shortcut command. For more information, please visit: support.microsoft.com/kb/126449

Text Function

 
Text Function enables you to type a prewritten text with a touch of a key. Simply write your desired text on the given field, and your text will be typed whenever the assigned key is pressed. This function has full Unicode support, and you can also insert special symbols from character maps.

Disable

This option renders the assigned key unusable. Use Disable if you do not want to use the selected key or if it interferes with your gaming.

Lighting

The Lighting subtab enables you to modify your Razer device's light settings.

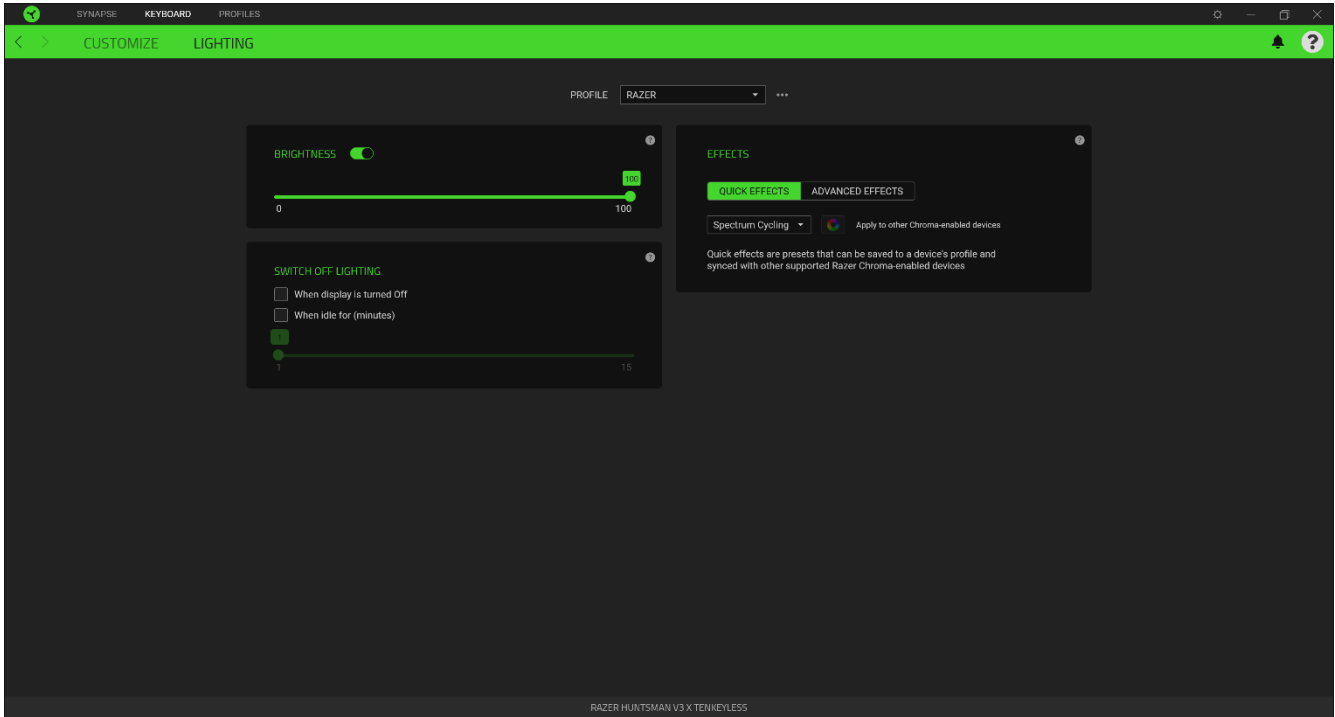

Brightness

You can turn off your Razer device's lighting by toggling the Brightness option or increase/decrease the luminance using the slider.


Switch Off Lighting








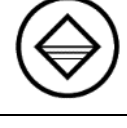 
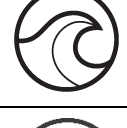 

This is a power saving tool which allows you to disable your device's lighting in response to your system's display turning off and/or automatically power down when your Razer Huntsman V3 X Tenkeyless has been idle for a set amount of time.


Quick Effects

A number of quick effects can be selected and applied to your device's lighting, as listed here:


i Only devices that support the selected lighting effect will synchronize. LED indicators are not customizable.

	Name	Description	How to set up
	Ambient awareness	The lighting on the keyboard will reflect the averaged color on the selected screen region	Select or customize a screen region

	Audio meter	The keyboard will light up according to the audio level with a default spectrum of colors	Select a Color Boost level
	Breathing	The keyboard fades in and out of the selected color(s)	Select up to 2 colors or randomize colors
	Fire	The keyboard lights up in warm colors to mimic the motion of flames	No further customization required
	Reactive	The LEDs will light up when a key is pressed. The light will fade off after a specified period of time	Select a color and a duration
	Ripple	On key press, light will ripple away from the pressed key	Select a color
	Spectrum cycling	The lighting will cycle between 16.8 million colors indefinitely	No further customization required
	Starlight	Each LED will have a chance of fading in and out at a random time and duration	Select up to 2 colors or randomize colors and select a duration
	Static	The LEDs will remain lit in the selected color	Select a color
	Wave	The lighting will scroll in the direction selected	Select either left-to-right or right-to-left wave direction
	Radiate	The deeper a key is pressed, the brighter and bigger its glow radius becomes	Select a color

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button ().

Studio Effects

 
The Studio Effects option allows you to choose a Chroma Effect you want to use on your Razer Chroma-enabled peripheral. To start making your own Chroma Effect, simply press the Chroma Studio button (). [Click here to learn more about the Chroma Studio](#)




PROFILES TAB

The Profiles tab is a convenient way of managing all your profiles and linking them to your games and applications.

Devices

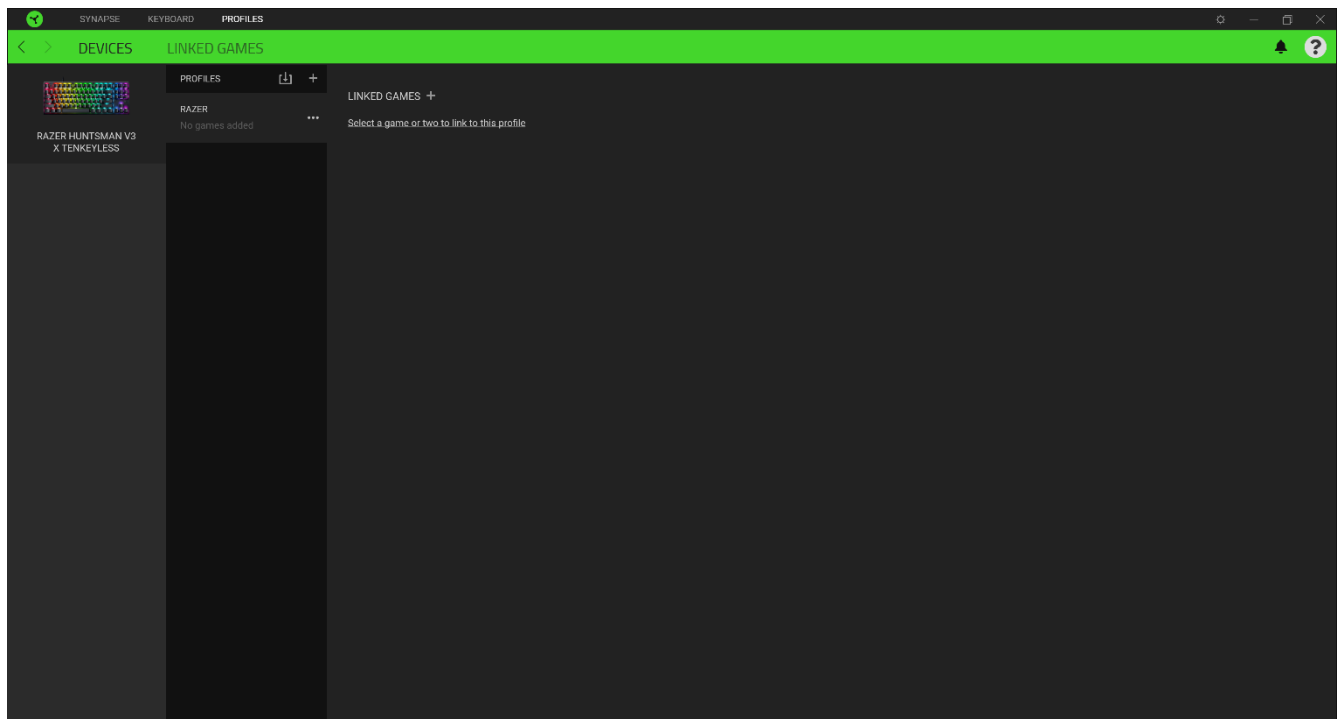 
View which Razer device is using a specific profile using the Devices subtab.



You can import Profiles from your computer or from the cloud through the import button () or create new profiles within the selected device using the add button (). To rename, duplicate, export, or delete a profile, simply press the Miscellaneous button (). Each profile can be set to automatically activate when you run an application using the Linked Games option.

Linked Games

 
The Linked Games subtab gives you the flexibility to add games, view peripherals that are linked to games, or search for added games. You can also sort games based on alphabetical order, last played, or most played. Added games will still be listed here even if it is not linked to a Razer device.

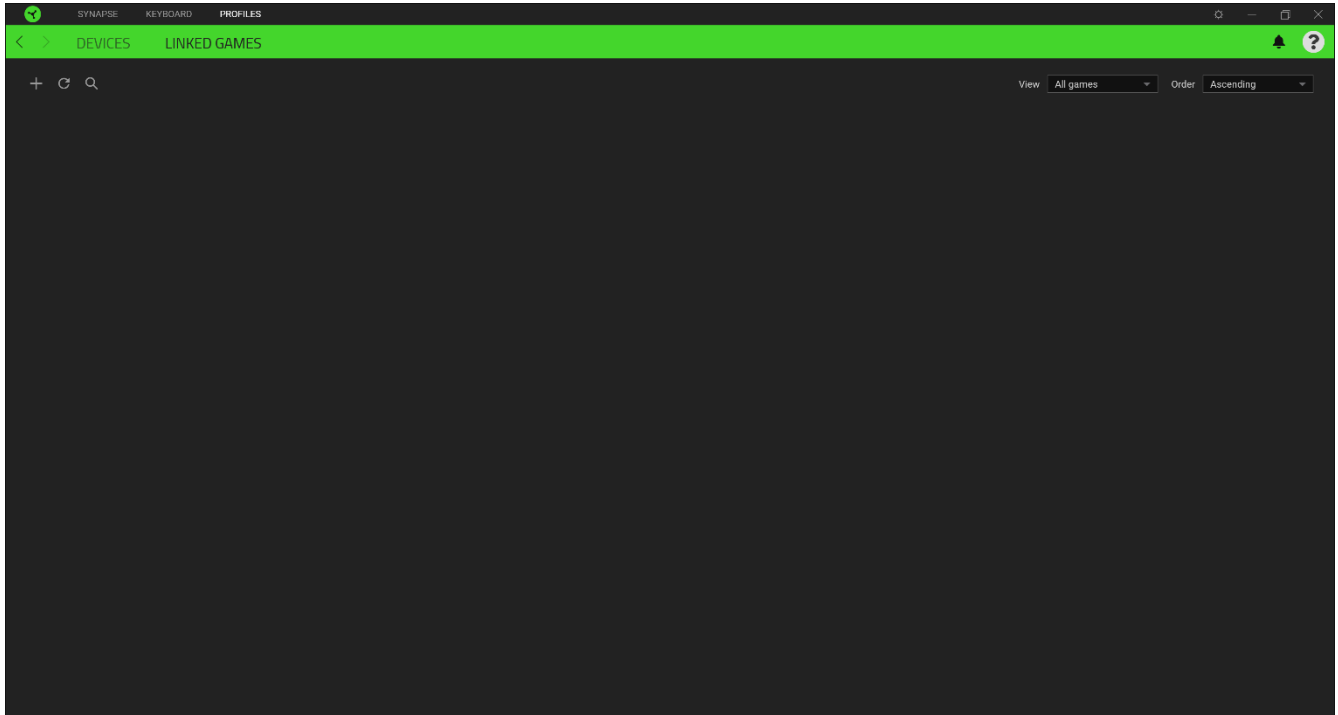


To link games to connected Razer devices, simply click on a game from the list, and then click **Select a device and its profile to launch automatically during gameplay** link to select the Razer device it will link with.


Once linked, you may click on the Miscellaneous button (●●●) of the corresponding device to select a specific profile.

SETTINGS WINDOW

 The Settings window, accessible by clicking the () button on Razer Synapse, enables you to configure the startup behavior and display language of Razer Synapse, view the master guides of each connected Razer device, or perform factory reset on any connected Razer device.

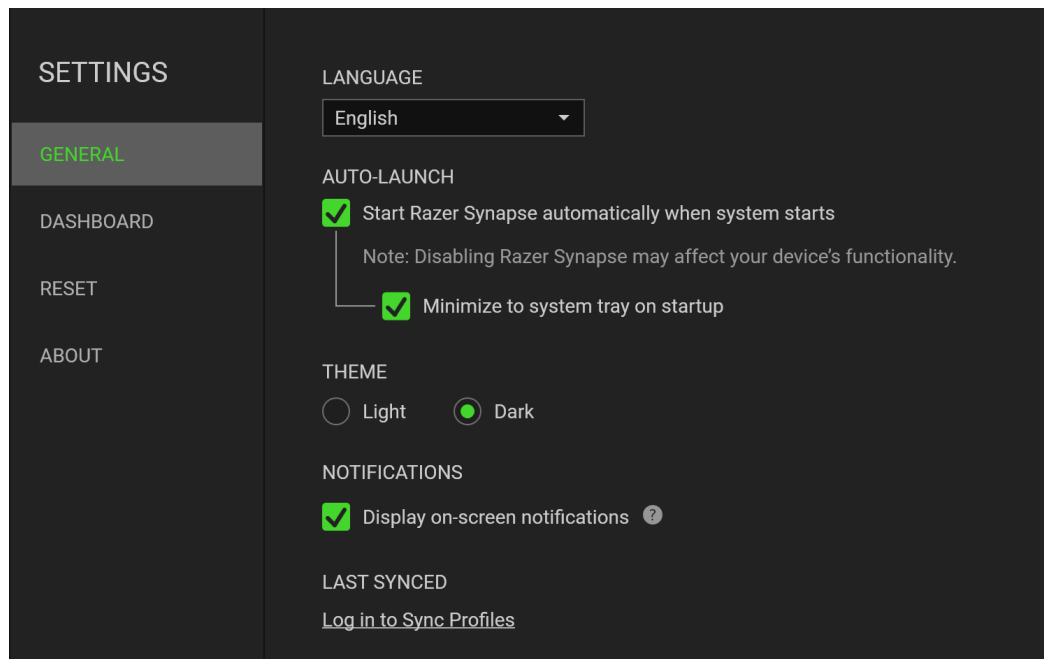

General tab

The default tab of the Settings window. The General tab enables you to change the software's display language, start-up behavior, and display theme. You may also manually sync your profiles to the cloud () or view the master guide of all connected Razer devices and installed modules.

Reset tab

The Reset tab allows you to perform a factory reset on any connected Razer device and/or reset Razer Synapse tutorials to acquaint yourself again with Razer Synapse's new features on its next launch.



By resetting a Razer device, all profiles on the selected device and its on-board memory (if present) will be erased.

About tab

The About tab displays brief software information and copyright statement and provides relevant links for its terms of use. You may also use this tab to check for software updates, or as a quick access to Razer's social communities.

8. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Huntsman V3 X Tenkeyless, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for assistance.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

COMFORT

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Razer Huntsman V3 X Tenkeyless.

1. Position your keyboard and monitor directly in front of you with your mouse next to it. Place your elbows next to your side, not too far away, and your keyboard within easy reach.
2. Adjust the height of your chair and table so that the keyboard and mouse are at or below elbow height.
3. Keep your feet well supported, posture straight, and your shoulders relaxed.
4. While typing, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
5. Do not rest your wrists on hard surfaces for long periods.
6. Use the provided wrist rest to support your wrist while using your keyboard.
7. Customize the keys on your keyboard to suit your style of work to minimize repetitive or awkward motions while typing.
8. Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck, and legs.

If you should experience any physical discomfort while using your keyboard, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

MAINTENANCE AND USE

The Razer Huntsman V3 X Tenkeyless requires minimum maintenance to keep it in optimum condition. Once a month, we recommend you unplug the device from the computer and gently clean each component using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

9. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2024 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and “For Gamers. By Gamers.”, are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Huntsman V3 X Tenkeyless (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.