RAZER **LEVIATHAN MINI**

Presenting uncompromising audio power packed within an ultra-compact body - the Razer Leviathan Mini. Powered by Bluetooth with aptX® technology for CD-like audio quality, this sleek portable speaker delivers stellar sound quality through powerful lows and crystal clear highs at volumes belying its size. With a play time of up to 10 hours on a single charge or Combo Play with two speakers to experience a true wireless stereo sound stage. Regardless of whether you're out on the beach or hosting a house party, the sheer power of the Razer Leviathan Mini delivers mightily.

CONTENTS

1. PACKAGE CONTENTS / HARDWARE & SYSTEM REQUIREMENTS	3
2. REGISTRATION / TECHNICAL SUPPORT	4
3. TECHNICAL SPECIFICATIONS	5
4. DEVICE LAYOUT	6
5. SETTING UP YOUR RAZER LEVIATHAN MINI	7
6. USING THE RAZER LEVIATHAN MINI	12
7. SAFETY AND MAINTENANCE	19
8. LEGALESE	22

1. PACKAGE CONTENTS / HARDWARE & SYSTEM REQUIREMENTS

PACKAGE CONTENTS

- Razer Leviathan Mini Portable Bluetooth® speaker
- Charging Cable
- 3.5 mm analog audio cable
- Carrying case
- Power adapter with interchangeable plugs
- Important Product Information Guide

HARDWARE REQUIREMENTS

Wired Connectivity

Devices with 3.5 mm analog audio jack

Wireless Connectivity

Devices with Bluetooth 2.0 (or higher) / NFC capability


2. REGISTRATION / TECHNICAL SUPPORT

REGISTRATION

Visit www.razerzone.com/razer-id to sign up for a Razer ID now to get a wide range of Razer benefits. For example, get real-time information on your product's warranty status via Razer Synapse. To learn more about Razer Synapse and all its features, visit www.razerzone.com/synapse.

If you already have a Razer ID, register your product by clicking on your email address within the Razer Synapse application and select Warranty Status from the dropdown list.

To register your product online, visit www.razerzone.com/registration. Please note that you will not be able to view your warranty status if you register via the website.

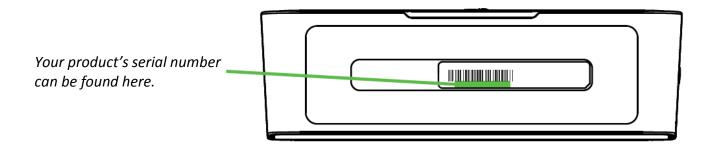

TECHNICAL SUPPORT

What you'll get:

- 1 year limited manufacturer's warranty.
- Free online technical support at www.razersupport.com.

3. TECHNICAL SPECIFICATIONS


TECHNICAL SPECIFICATIONS

- Battery:
 - Battery type: 2600 mAH rechargeable Lithium-ion battery
 - o Battery life: Up to 10 hours
 - Charge time : 5 hours
- Range:
 - Bluetooth wireless range: 10 m / 30 ft
 Combo Play wireless range: 4 m / 13 ft
- Speakers
 - o Total power output: 24 W (12 W x 2)
 - o Frequency response rate: 20 Hz 20,000 KHz
 - o Drivers: 2 x 45 mm / 1.77" neodymium magnets
 - o Passive Radiators: 2 x 40 mm / 1.57" x 70 mm / 2.75"
 - \circ Impedance : 4 Ω
- Microphone
 - Omnidirectional microphone with Clear Voice Capture Technology
 - o Size: 4mm / 0.15"

APPROXIMATE SIZE & WEIGHT

Length 54 mm / 2.12 in
 Width 185 mm / 3.44 in
 Height 55 mm / 2.16 in
 Weight 538 g / 1.18 lbs

4. DEVICE LAYOUT

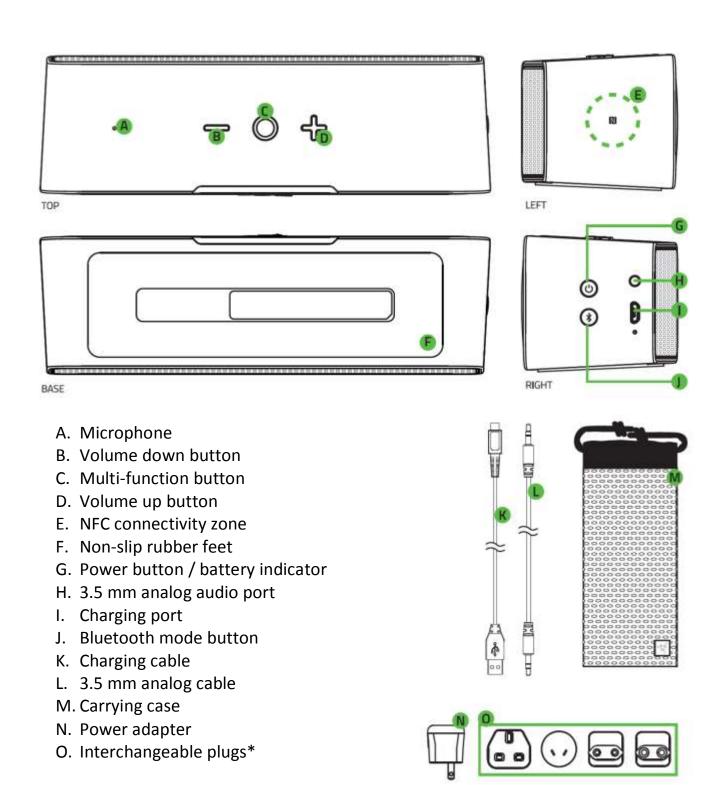


^{*}Use the appropriate adapter plug for your region


5. SETTING UP YOUR RAZER LEVIATHAN MINI

CHARGING YOUR SPEAKERS

1. Select the appropriate power plug for your region and attach it to the power adapter.

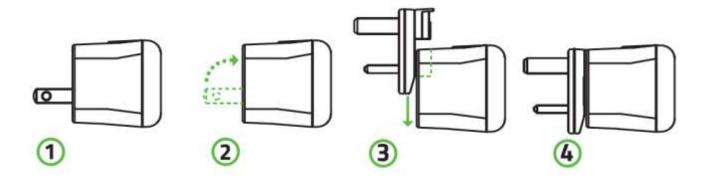


2. Connect your speaker to an appropriate power source.

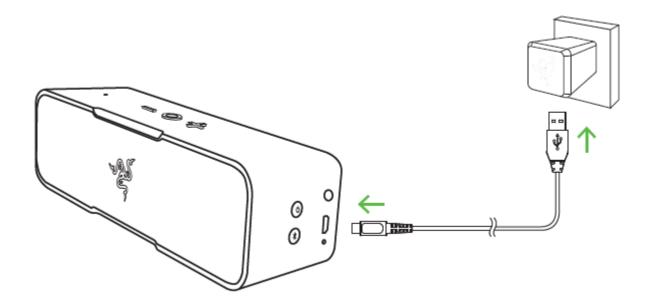

For best results, please charge the battery fully before using your Razer Leviathan Mini for the first time. A depleted battery will fully charge in about 4 hours.

POWERING ON / OFF

To power on the speaker, press and hold the power button until you hear the power on tone. To power off the speaker, simply press the power button once and the power off tone will be played.

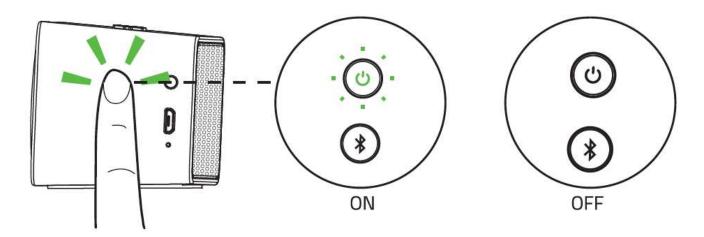

Understanding The Battery Indicator

The battery indicator will change color depending on its current status as shown below.


(4)	Battery is charged
Static Green	
U	Battery is low
Static Amber	
Blinking Red	Battery is critically low
	Battery is charging
Breathing Red	

CONNECTING TO AN AUDIO SOURCE

Note: When connected to an audio device with a built-in speaker system, the audio may continue to play on the built-in speaker system. In such case, please switch your device's audio output to the Razer Leviathan Mini.

Connecting via NFC


Make sure that the 3.5mm analog cable is not plugged into the speaker. If you have previously connected to a Bluetooth device, you will need to press and hold the Bluetooth button for at least 3 seconds until you hear the search mode tone. To pair, simply activate the NFC function on your device and place it on the speaker's NFC connectivity region. The device will automatically go to pairing mode with the speaker upon contact. The Bluetooth indicator will change to static blue when successfully paired. Once your Leviathan Mini has paired via NFC, it will automatically connect to the device every time the speaker is powered on.

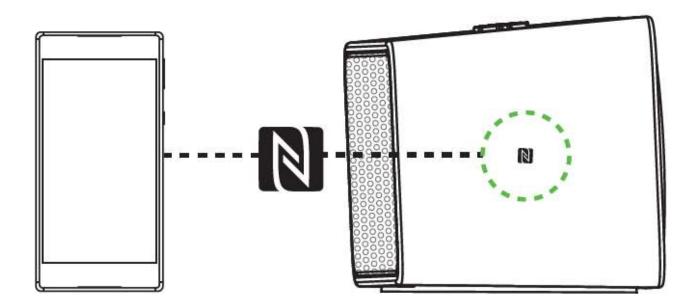


Connecting via Bluetooth®


Make sure that the 3.5mm analog cable is not plugged into the speaker. If this is the first time you are connecting to a Bluetooth device, the speaker will automatically enter search mode when powered on. If you have previously connected to a Bluetooth device, you will need to press and hold the Bluetooth button for at least 3 seconds until you hear the search mode tone.

1. Set your speaker to search mode and enable Bluetooth on your device. While the speaker is in search mode, the Bluetooth indicator will blink.

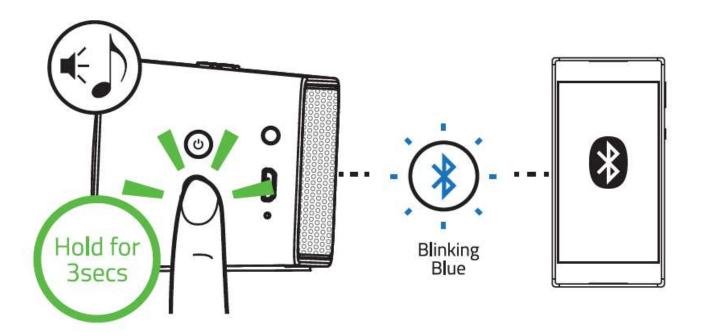


2. Start pairing by selecting "Razer Leviathan Mini" from the list of devices found.

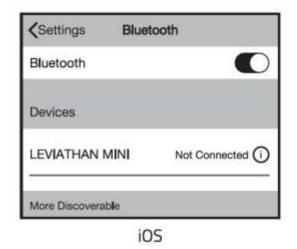

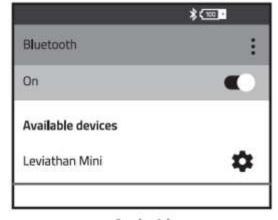

Android


3. Wait for pairing to complete. The Bluetooth indicator will change to static once successfully paired.

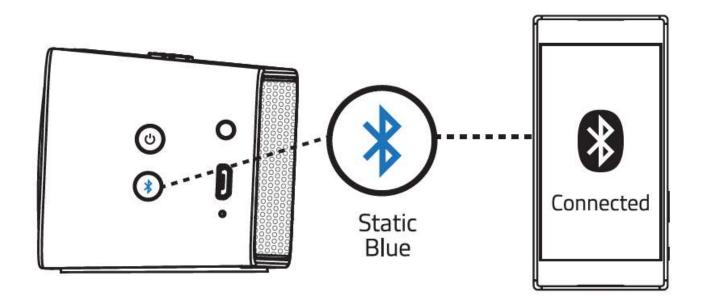

Once your Leviathan Mini has paired with a Bluetooth device it will automatically connect to the device every time the speaker is powered on.

Connecting via the analog cable

Connect your device to the Razer Leviathan Mini's 3.5 mm audio analog port using a 3.5 mm analog cable. When connected, the 3.5 mm audio analog port takes priority over devices paired via Bluetooth.

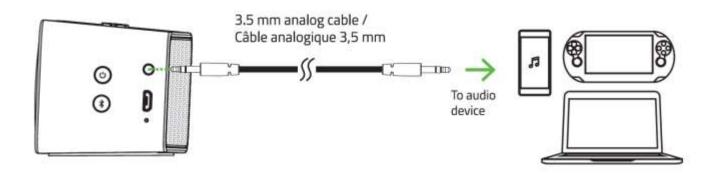

6. USING THE RAZER LEVIATHAN MINI

You can use the buttons on the speaker to manually control various functions including audio playback and call features. You can also link 2 Razer Leviathan Mini speakers together using the Multi-Function Button (MFB).

PLAYING MUSIC

You can use the following button functions to control music playback from the connected audio source.

Button	Action	Effect
Π	Single press /	Increase the volume. Each press is followed by
	Press and hold	a beep to indicate the current volume. You will
U		hear two beeps when the speaker has reached
(Volume Up)		the maximum volume.
	Single press	Play / pause the current track.
(())	Double press	Play the next track.
	Triple press	Play the previous track.
(Multi-Function)		
	Single press /	Decrease the volume. Each press is followed by
	press and hold	a beep to indicate the current volume. You will
(Volume Down)		hear two beeps when the speaker has reached
		the minimum volume.

ANSWERING CALLS

You can receive calls with the Razer Leviathan Mini by connecting it to a call-enabled mobile device. If music is playing through the speaker when a call is received, the current audio track will fade off into the device's ringtone. When the call ends, the speaker will resume playing the audio track.


The MFB can be used to control the speaker during a call. The following table explains the button presses and LED indicator. An audio tone will be played for each of the actions below.

Action	Light indicator	Effect
None	(Blinking Green)	There is an incoming call on the mobile device. The speaker will play the device's ringtone.
Press once	(Static Green)	Answers the call.
Press once while the call is ongoing	(Static Red)	Mutes the call. Press the button again to unmute. The LED indicator will switch to green.
Press and hold for at least 3 seconds	(No light)	Rejects / ends the call.


USING COMBO PLAY

Wirelessly link 2 Razer Leviathan Mini speakers using the Combo Play function to play audio from a single source onto both speakers simultaneously. To link your speakers:


1. Turn on the primary speaker and connect it to an audio source via Bluetooth. Ensure that the speaker is not connected to the analog cable.

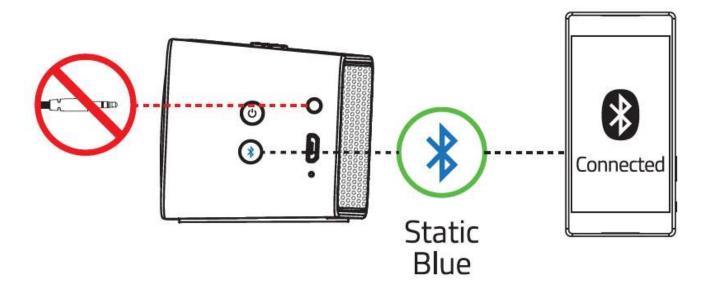


2. Press and hold the MFB for at least 3 seconds until it starts to blink slowly in white. The Leviathan Mini will start to search for other speakers within 4 meters of its current location.

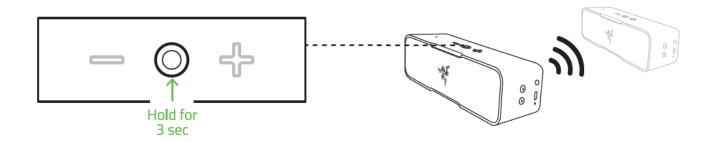


3. Turn on your 2nd speaker and ensure that it is not connected to the analog cable or paired to any device via Bluetooth. If you have previously connected to a Bluetooth device, you will need to press and hold the Bluetooth button for at least 3 seconds to disconnect the speaker.

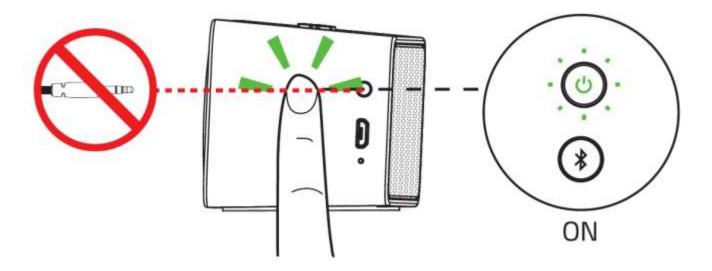


4. On the 2nd speaker, press and hold the MFB for at least 3 seconds until it starts to blink slowly in white.

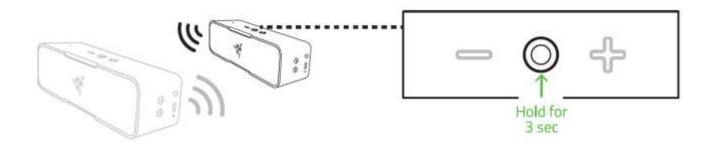

5. Once the speakers have linked, both will have a static white MFB. An audio tone will be played upon linking the speakers.

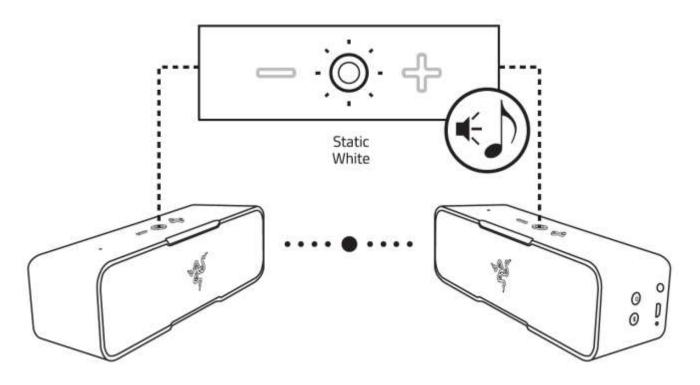

To unlink the speakers, simply press and hold the MFB for at least 3 seconds on either speaker until the button starts to blink rapidly. The speakers are unlinked when the LED indicator on the button turns off.

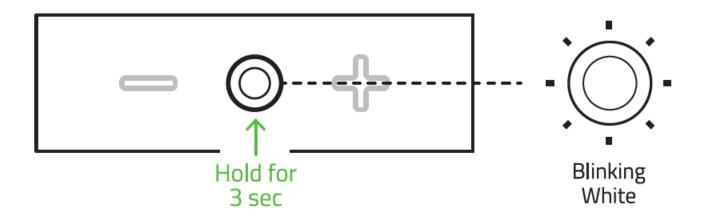


Changing the playback modes


Combo Play gives you the flexibility of using your linked speakers in two modes: Mono and Stereo mode. When you first use Combo Play, the speakers are automatically set to Mono mode. In Mono mode, both speakers use their respective left and right channels to playback audio.




In Stereo mode, the primary speaker acts as the left channel while the secondary speaker acts as the right channel. To change to Stereo mode, press and hold both the volume up and volume down buttons for at least 3 seconds on either speaker until you hear a beep.

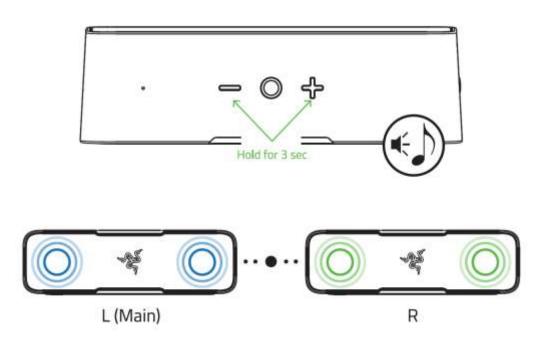

To switch channels, press and hold both the volume up and volume down buttons again on either speaker for at least 3 seconds until you hear a beep.

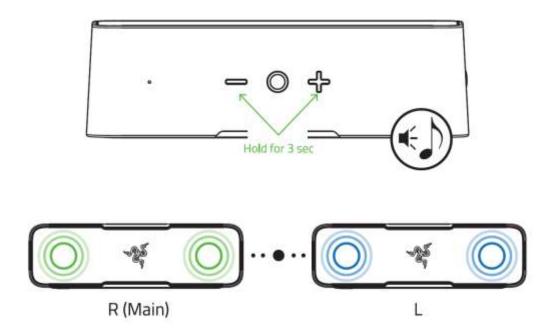

To switch back to Mono mode, press and hold both the volume up and volume down buttons for the third time on either speaker for at least 3 seconds until you hear a beep.

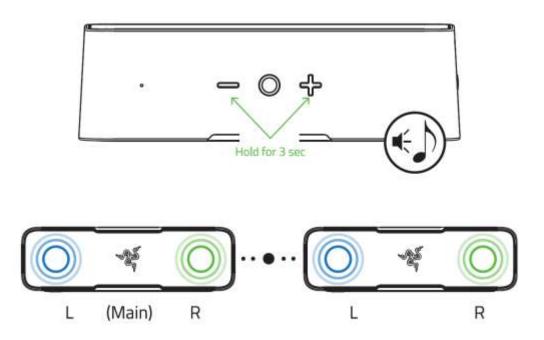

7. SAFETY AND MAINTENANCE

IMPORTANT SAFETY & MAINTENANCE INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

Please follow these safety rules for handling your Razer Leviathan Mini and for working more comfortably. Keep this guide handy for future reference by you and others. To operate your Razer Leviathan Mini safely and reduce the possibility of heat-related injuries, follow these guidelines:

- 1. Set up your Razer Leviathan Mini and power adapter on a stable work surface that allows for adequate air circulation.
- 2. Do not use or install near water, moisture, or other wet surfaces.
- 3. Do not use or install near any heat or naked flame sources. Do not use around radiators, stoves, fire places, candles or other hot surfaces.
- 4. Do not block ventilation grills or openings. Install the apparatus in a cool, dry place.
- 5. Clean only with a dry or damp cloth. Unplug the apparatus before cleaning and do not use aerosol or liquid cleaning agents.
- 6. Do not insert or push any objects into openings on the product.
- 7. Refer all servicing to qualified service personnel. Do not attempt to service this apparatus yourself. Removing the covers will expose you to dangerous electric currents.

POWER ADAPTER FOR THE RAZER LEVIATHAN MINI

NOTICE: Incorrect storage or use of your power adapter may void the manufacturer's warranty. This power adapter complies with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

This apparatus should only be operated from the type of power source indicated on the label. If you are unsure of the power source in the location you intend to operate the apparatus please consult the local power company or a qualified technician. The use of AC Plug Adapters is cautioned because it can allow the product to be plugged into voltages in which the product was not designed to operate. If you are unsure of the correct operational voltage, please contact your local distributor and/or retailer.

- 1. Use only the power adapter that came with your Razer Leviathan Mini, or the Razer-authorized power adapter that is compatible with this product.
- 2. The power adapter is equipped with exchangeable adapter plug, use only the appropriate adapter plug for your region.
- 3. Make sure the exchangeable adapter plug is fully inserted into the power adapter before plugging the adapter into a power outlet.
- 4. The power adapter may become very warm during normal use. Never place anything over the power adapter when operating your apparatus.
- 5. Unplug this apparatus during lightning storms or when unused for extended periods of time to further protect the apparatus.
- 6. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, or the point where they exit from the apparatus.
- 7. Do not overload wall electricity outlets, extension cords and plugs. This may result in fire or electrical shock.
- 8. Disconnect the power adapter and disconnect any other cables if any of the following conditions exists:
 - You want to clean the case
 - The power cord or plug becomes frayed or otherwise damaged.
 - Your Razer Leviathan Mini or power adapter is exposed to rain, excessive moisture, or liquid spilled into the case.
 - Your Razer Leviathan Mini or power adapter has been dropped, the case has been damaged, or you suspect that service or repair is required.

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Leviathan Mini, we suggest that you adopt the following guidelines:

- 1. Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to www.razersupport.com for support. Do not attempt to service or fix the device yourself at any time.
- 2. Do not take the device apart (doing so will void your warranty) and do not attempt to service it yourself or operate it under abnormal current loads.
- 3. Keep your device away from liquid, humidity or moisture. Operate your device only within the specified temperature range of 0°C (32°F) to 40°C (104°F). Should you operate it in a temperature that is beyond this range, unplug and switch off the device in order to let the temperature stabilize within the optimal temperature range.
- 4. Listening to excessively loud volumes over extended periods of time can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86dB to affect your hearing for 8 hours a day. We therefore recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time. Please, take good care of your hearing.

MAINTENANCE AND USE

The Razer Leviathan Mini requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton swab with a bit of warm water to prevent dirt buildup. Do not use soap or harsh cleaning agents.

8. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2016 Razer Inc. All Rights Reserved. Razer[™], the Razer Triple-Headed Snake logo, the Razer "distressed word" logo and other trademarks set out herein are owned or controlled by Razer Inc. and/or its affiliated companies, pending or registered in the United States and other countries.

Razer Inc. and its affiliate companies ("Razer") may own or control copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Leviathan Mini (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

Copyright © 2015 Apple Inc. All rights reserved. Apple, the Apple logo, iPod, iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android is a trademark of Google Inc.

The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

The aptX® mark and the aptX logo are trademarks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.



LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit www.razerzone.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

COSTS OF PROCUREMENT

For the avoidance of doubt, in no event will Razer be liable for any costs of procurement unless it has been advised of the possibility of such damages, and in no case shall Razer be liable for any costs of procurement liability exceeding the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.