



RAZER HEAD CUSHION CHROMA

MASTER GUIDE

 
If you're looking to round out your support, then top off your gaming chair with the **Razer Head Cushion**—made of thick memory foam for comfort that truly conforms to you.

CONTENTS

1. WHAT'S INSIDE	3
2. WHAT'S NEEDED	4
3. LET'S GET YOU COVERED	4
4. TECHNICAL SPECIFICATIONS.....	5
5. GETTING STARTED	5
6. USING YOUR RAZER HEAD CUSHION CHROMA	9
7. CUSTOMIZING YOUR RAZER HEAD CUSHION CHROMA VIA RAZER SYNAPSE	10
8. SAFETY AND MAINTENANCE	17
9. LEGALESE	18

1. WHAT'S INSIDE

- Razer Head Cushion Chroma

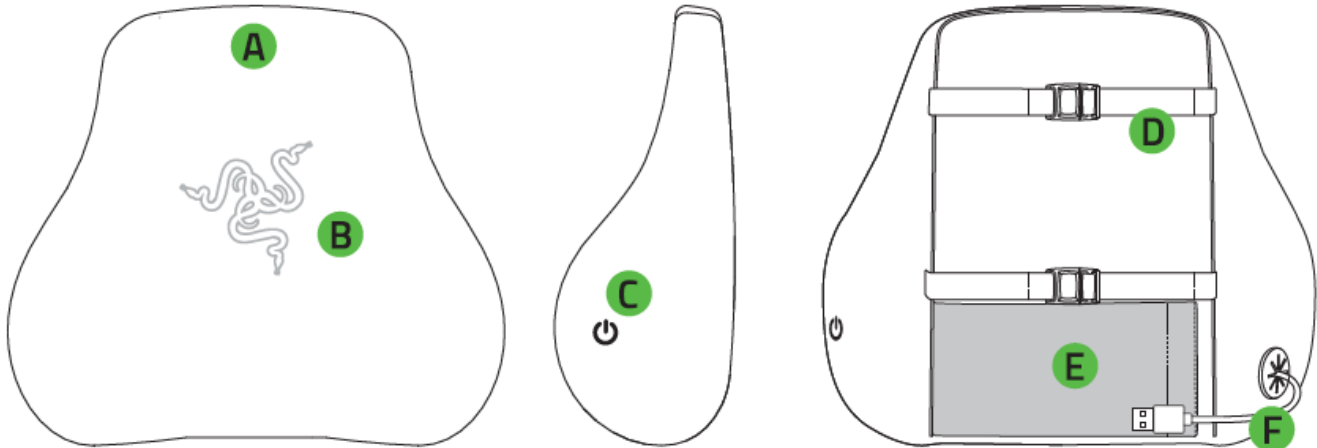

- A. Ergonomic memory foam padding
- B. Razer THS logo with Chroma RGB lighting
- C. Multifunction button
 - Power (on/off)
 - Bluetooth pairing
 - Chroma lighting effects
- D. Elastic buckle straps
- E. Portable charger pouch
- F. USB-A power cable

- Important Product Information Guide

2. WHAT'S NEEDED

PRODUCT REQUIREMENTS

 
- A portable charger with a USB-A port to power up your Razer Head Cushion Chroma
- A mobile device with Bluetooth capability to use with Razer Chroma RGB App (Mobile)
- A PC with Bluetooth connectivity to use with Razer Synapse

RAZER SYNAPSE REQUIREMENTS

- Windows® 10 64-bit (or higher)
- Internet connection for software installation

3. LET'S GET YOU COVERED

You've got a great device in your hands complete with a 1-year limited warranty coverage. Now, maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

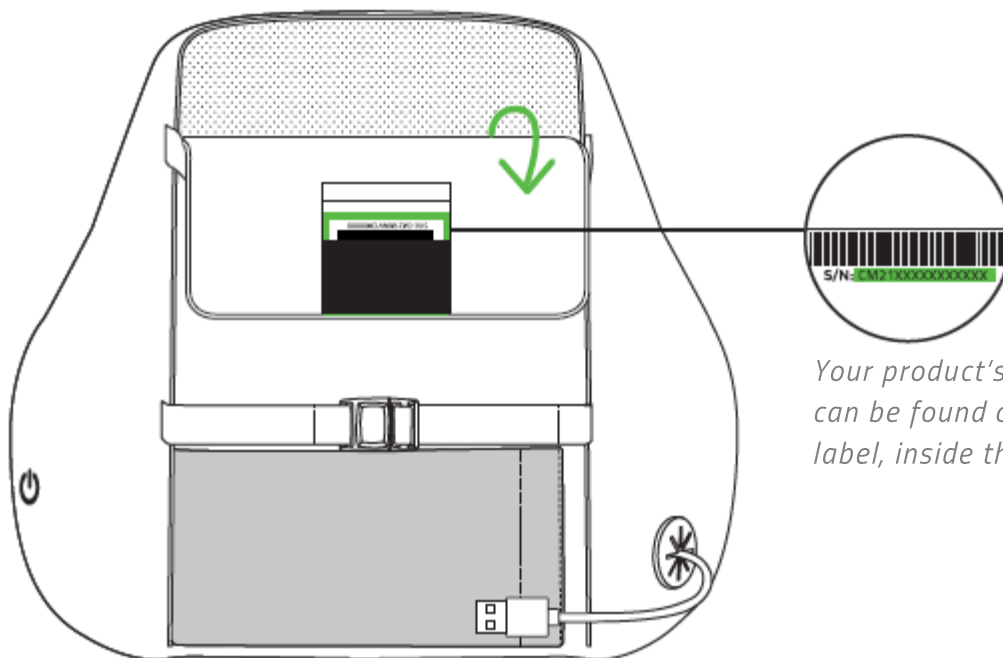

Your product's serial number can be found on the sewn label, inside the cover.

4. TECHNICAL SPECIFICATIONS

 
APPROXIMATE SIZE & WEIGHT

- Length: 110 mm / 4.33 in
- Width: 265 mm / 10.43 in
- Height: 275 mm / 10.83 in
- Weight: 330. g / 0.78 lbs


5. GETTING STARTED

CONNECTING TO A PORTABLE CHARGER


1. Plug in the power cable to your portable charger.

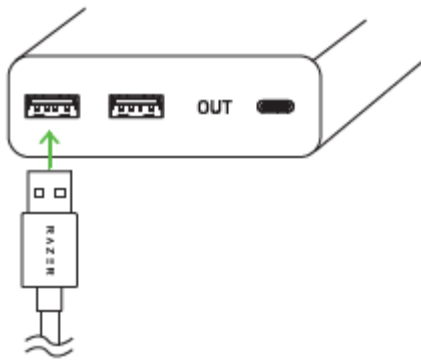

 2. Power on your portable charger.

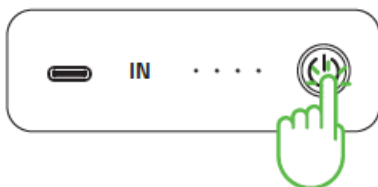

 
3. Store your portable charger inside the pouch.

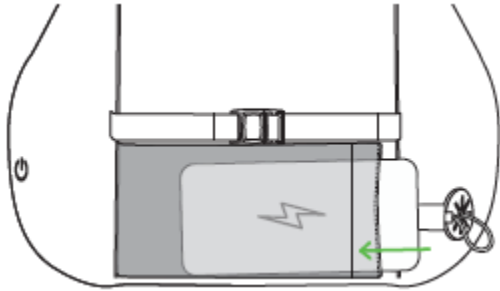


i It is recommended that you use a fully charged portable charger on your Razer Head Cushion Chroma. Portable charger not included.

POWER ON/OFF

 To power on your head cushion, press and hold the multifunction button for at least 2 seconds until the Razer THS logo lights up.

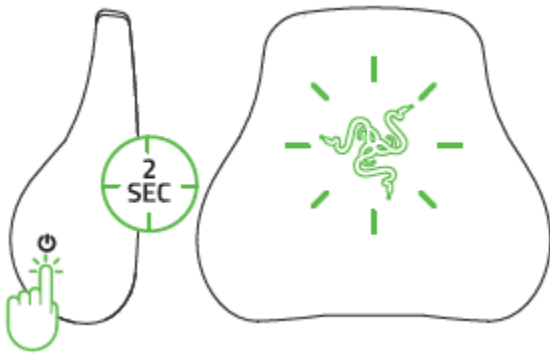

 
To power off your head cushion, press and hold the multifunction button for at least 5 seconds until the Razer THS logo becomes unlit.

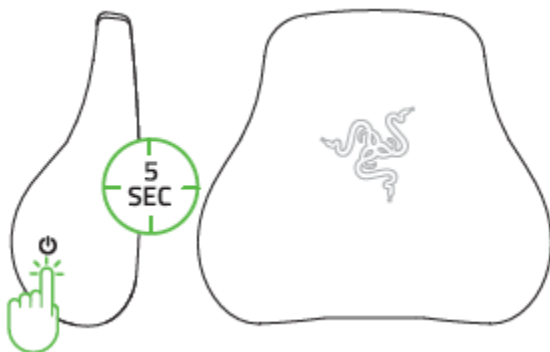


PAIRING TO A PC OR MOBILE DEVICE

When trying to connect your Razer Head Cushion Chroma, remember to keep it within 1 meter of your PC or mobile device.

 
1. If your head cushion is powered off, press and hold the multifunction button for at least 5 seconds until the Razer THS logo starts blinking blue.

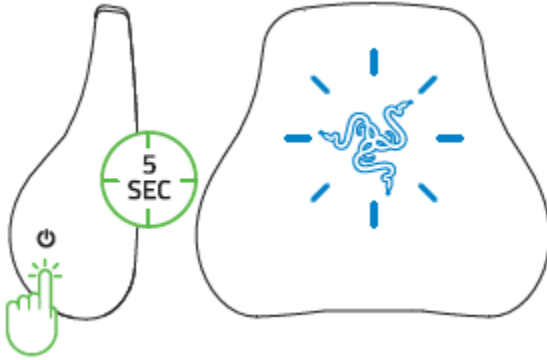

 
If your head cushion is powered on, quickly press the multifunction button and then press and hold for at least 5 seconds until the Razer THS logo starts blinking blue.

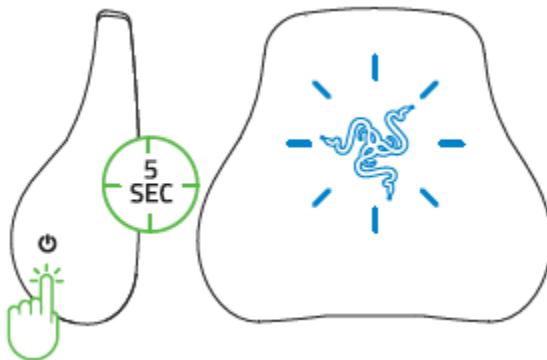

 
2. Enable Bluetooth on your PC or mobile device and select "Razer Head Cushion Chroma" from the list of devices found.

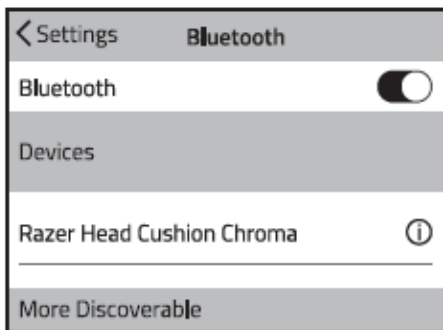

iOS

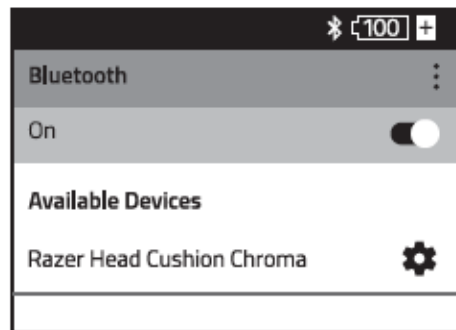 


Android

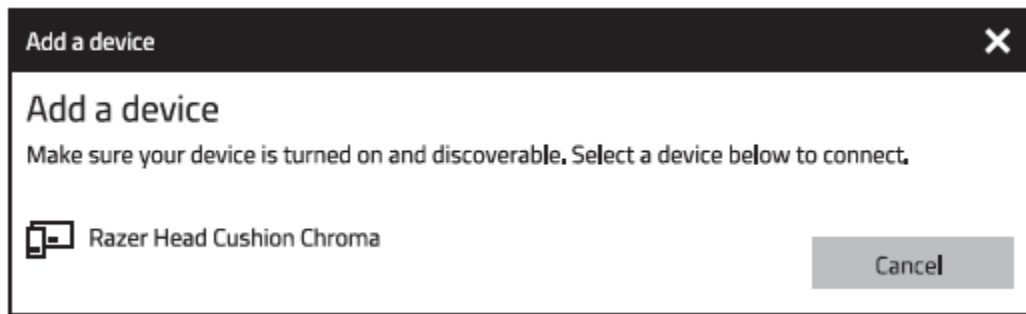 

PC

 3. Wait for the pairing to complete. You'll see the Razer THS logo return to its previous lighting if it is successfully paired and connected with your PC or mobile device.

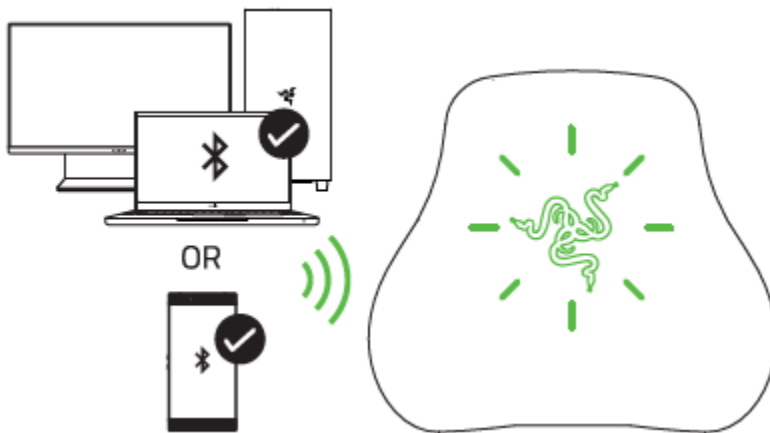


Should your Razer Head Cushion Chroma fail to connect to your PC or mobile device, it will return to its previous settings. If you wish to retry, simply repeat the pairing steps. Once your head cushion is paired, it will automatically try to connect to that paired PC or mobile device every time it is powered on. Your Razer Head Cushion Chroma can only connect to one PC or mobile device at a time.

i Install Razer Synapse when prompted or download the installer from [razer.com/synapse](https://www.razer.com/synapse).

6. USING YOUR RAZER HEAD CUSHION CHROMA

CHROMA LIGHTING EFFECTS

 To change the lighting effects, simply press the multifunction button and the lighting will cycle between Breathing, Spectrum Cycling, and Static. You can further customize these Chroma lighting effects using Razer Synapse or Razer Chroma RGB App.

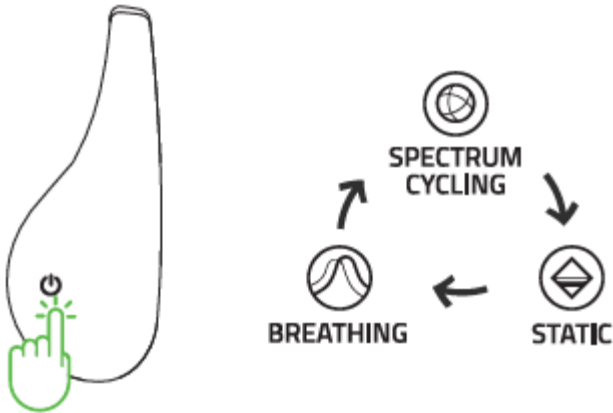

RAZER SYNAPSE

 


DOWNLOAD:
razer.com/synapse

RAZER CHROMA RGB APP (MOBILE)



OR



RZR.TO/CHROMAAPP
(For China only)

Got a question? Ask the Razer Support Team at support.razer.com

7. CUSTOMIZING YOUR RAZER HEAD CUSHION CHROMA VIA RAZER SYNAPSE

 
i Internet connection is required for installation, updates and cloud-based features. Registering for a Razer ID account is recommended, but optional. All listed features are subject to change based on the current software version, connected device(s), and supported apps and software.

SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse 3.


Dashboard

The Dashboard subtab is an overview of your Razer Synapse 3 where you can access all your Razer devices, modules, and online services.

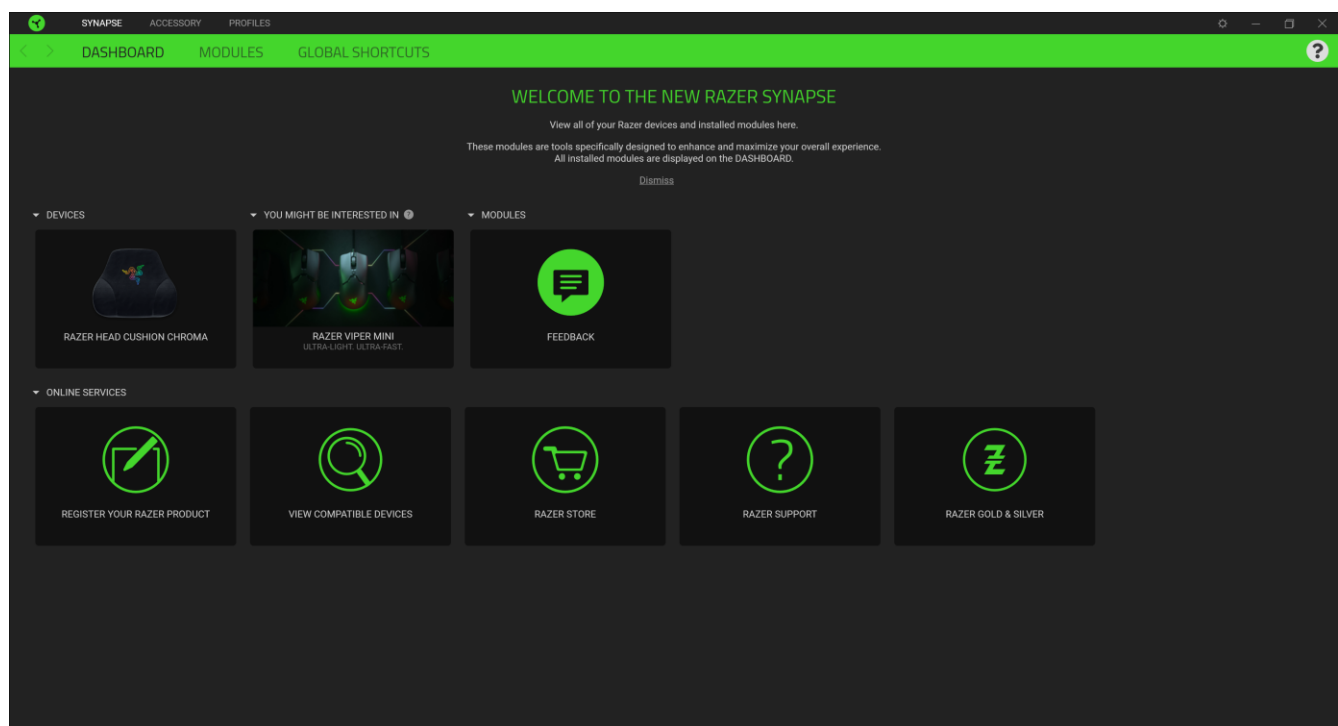

Modules

 
The Modules subtab displays all installed and available modules for installation.

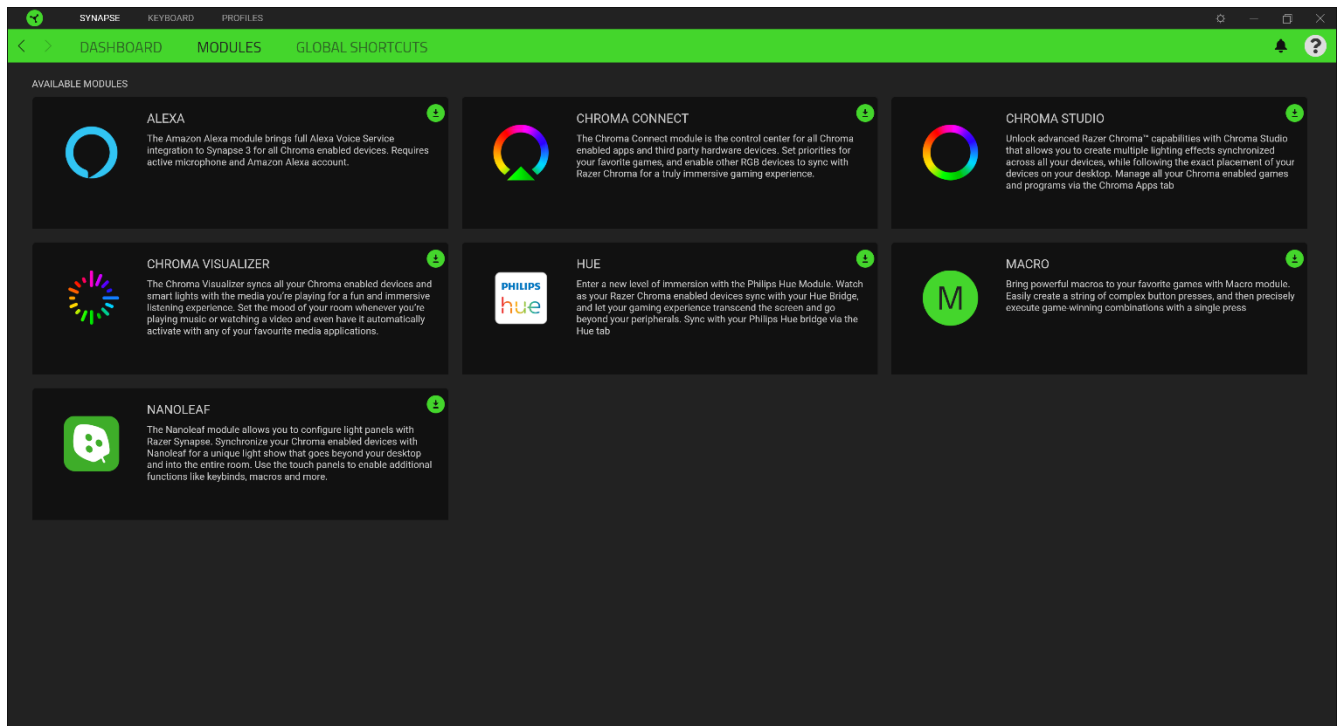

Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs which apply across all device profiles.

  *Only Razer Synapse-enabled device inputs will be recognized.*

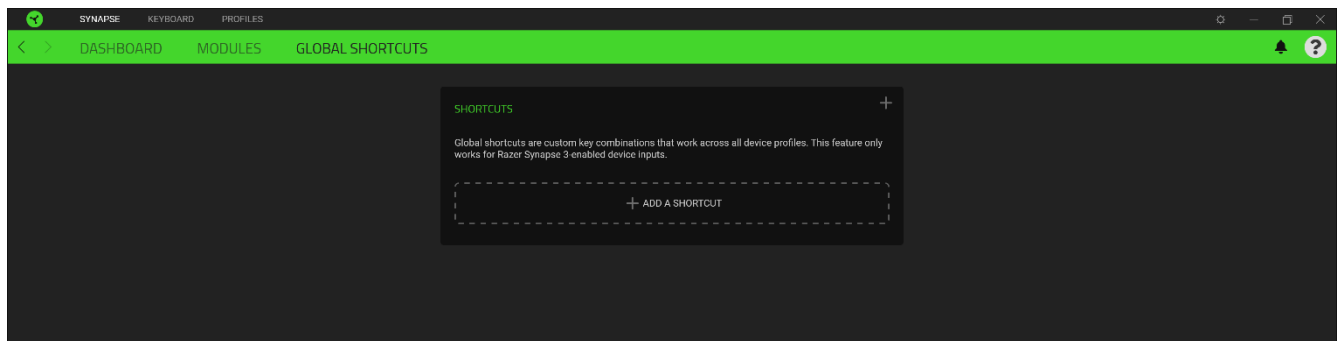


ACCESSORY TAB

The Accessory tab is the main tab for your Razer Head Cushion Chroma where you'd be able to adjust its volume and customize its lighting. Changes made under this tab are automatically saved to your system and cloud storage.

Lighting

 The Lighting subtab enables you to customize the lighting of your Razer device.

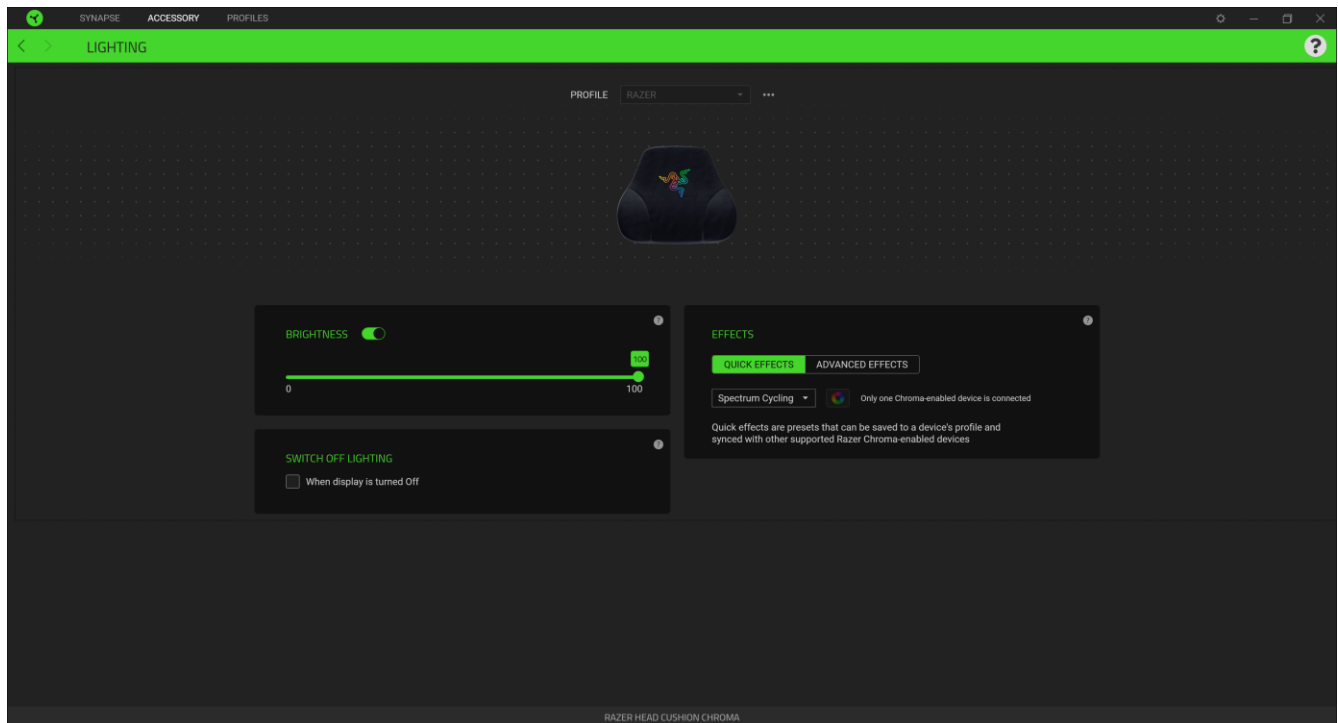

Brightness

You can turn off your Razer device's lighting by toggling the Brightness option or increase/decrease the luminance using the slider.






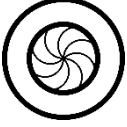 
Switch Off Lighting


This is a power saving tool which allows you to disable your device's lighting in response to your system's display turning off and/or automatically power down when your Razer Head Cushion Chroma has been idle for a set amount of time.

Quick Effects


A number of quick effects can be selected and applied to your device's lighting, as listed here:

i Only devices that support the selected lighting effect will synchronize. LED indicators are not customizable.

	Name	Description	How to set up
	Audio meter	The LEDs will light up according to the audio level with a default spectrum of colors	Select a Color Boost level
	Breathing	The lighting fades in and out of the selected color(s)	Select up to 2 colors or randomize colors
	Spectrum cycling	The lighting will cycle between 16.8 million colors indefinitely	No further customization required
	Starlight	Each LED will have a chance of fading in and out at a random time and duration	Select up to 2 colors or randomize colors and select a duration
	Static	The LEDs will remain lit in the selected color	Select a color
	Wheel	The lighting will rotate in the direction selected with a default spectrum of colors	Select either counter-clockwise or clockwise wheel direction

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button ().

Studio Effects

 
The Studio Effects option allows you to choose a Chroma Effect you want to use on your Razer Chroma-enabled peripheral. To start making your own Chroma Effect, simply press the Chroma Studio button (). [Click here to learn more about the Chroma Studio](#)




PROFILES TAB

The Profiles tab is a convenient way of managing all your profiles and linking them to your games and applications.

Devices

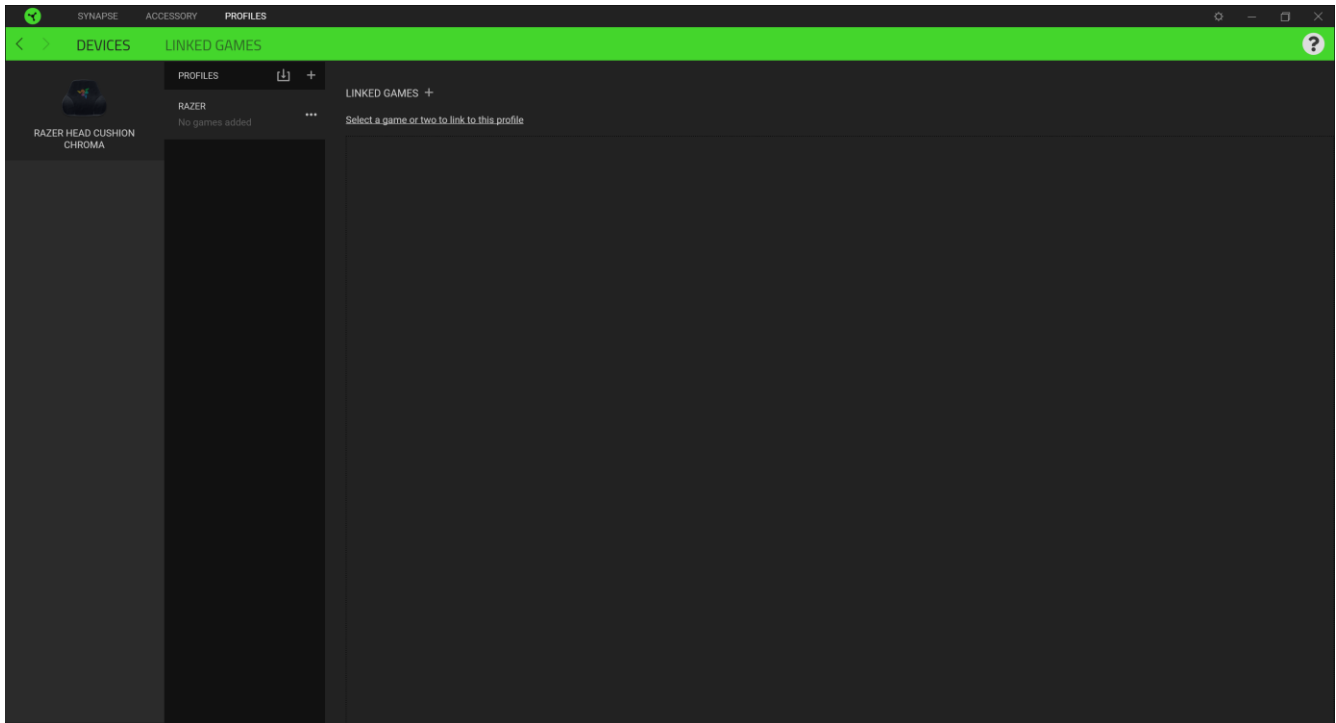
View which games are linked to each device's profiles or which Chroma Effect is linked to specific games using the Devices subtab.



You can import Profiles / Chroma Effects from your computer or from the cloud through the import button (), or create new profiles within the selected device or new Chroma Effects for specific games using the add button (). To rename, duplicate, export, or delete a profile, simply press the Miscellaneous button (). Each profile and/or Chroma Effect can be set to automatically activate when you run an application using the Linked Games option.

Linked Games

 
The Linked Games subtab gives you the flexibility to add games, view peripherals that are linked to games, or search for added games. You can also sort games based on alphabetical order, last played, or most played. Added games will still be listed here even if it is not linked to a Razer device.

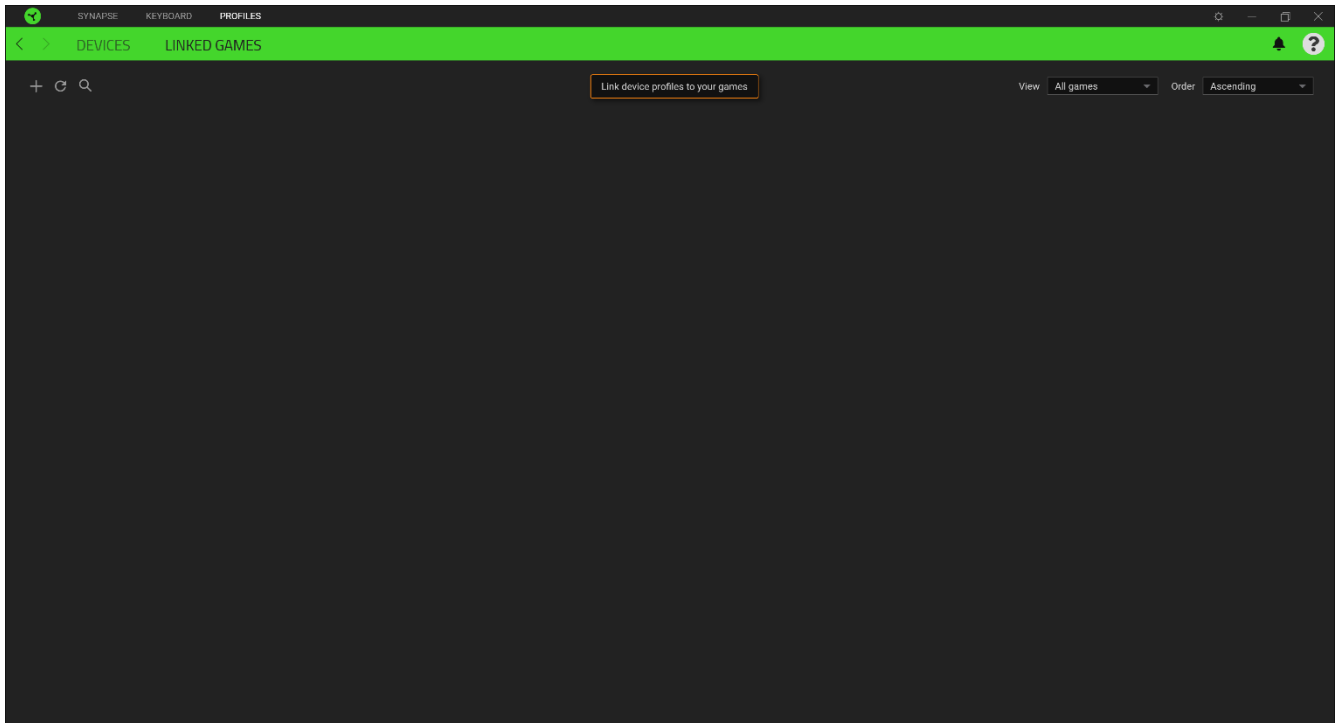


To link games to connected Razer devices or Chroma Effects, simply click on any game from the list, and then click **Select a device and its profile to launch automatically during gameplay** to select the Razer device or Chroma Effect it will link with.


Once linked, you may click on the Miscellaneous button (●●●) of the corresponding Chroma Effect or device to select a specific Chroma Effect or profile.

SETTINGS WINDOW

 The Settings window, accessible by clicking the () button on Razer Synapse 3, enables you to configure the startup behavior and display language of Razer Synapse 3, view the master guides of each connected Razer device, or perform factory reset on any connected Razer device.

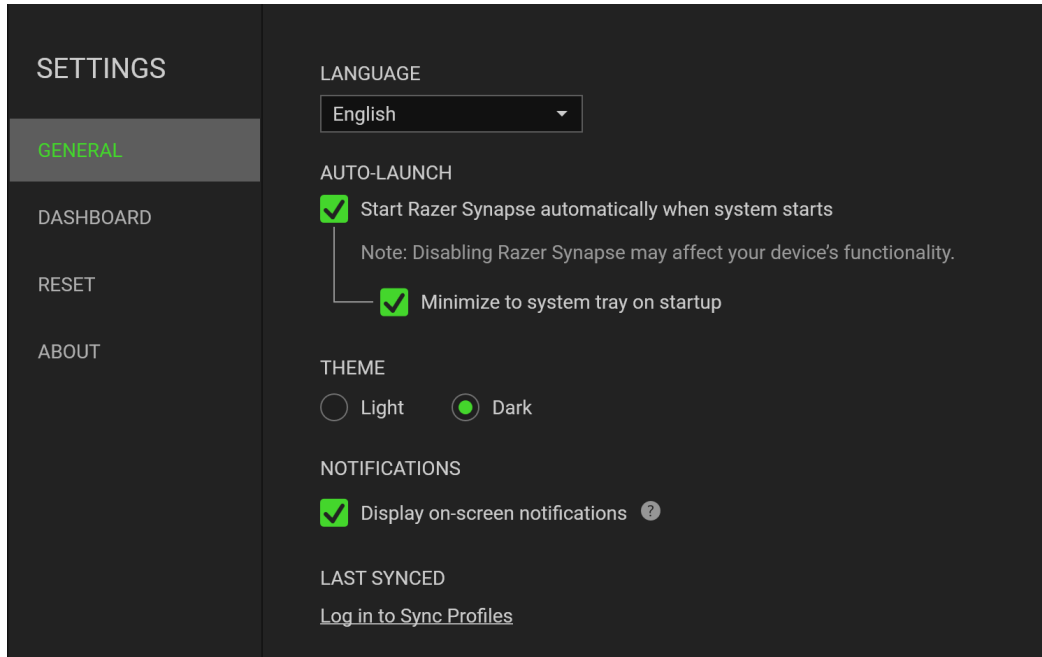


General tab

 The default tab of the Settings window. The General tab enables you to change the software's display language, start-up behavior, and display theme. You may also manually sync your profiles to the cloud () or view the master guide of all connected Razer devices and installed modules.

Reset tab

The Reset tab allows you to perform a factory reset on any connected Razer device and/or reset Razer Synapse tutorials to acquaint yourself again with Razer Synapse's new features on its next launch.

 *By resetting a Razer device, all profiles on the selected device and its on-board memory (if present) will be erased.*

About tab

The About tab displays brief software information and copyright statement and provides relevant links for its terms of use. You may also use this tab to check for software updates, or as a quick access to Razer's social communities.

8. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Head Cushion Chroma, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for assistance.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

MAINTENANCE

The Razer Head Cushion Chroma requires minimum maintenance to keep it in optimum condition. It is recommended to follow these tips to keep your product pristine:

- Once a month we recommend you unplug the device from the computer and clean it using a soft cloth or cotton swab to prevent dirt buildup.
- Prolonged use of the product can cause uncomfortable heat and may lead to product damage or bodily harm. Should this occur, power off the device, and let it cool down before powering on again.
- Disconnect the product from the portable charger when not in use.
- Store the product inside a box or an airtight bag when not in use to keep it dust free
- Keep it in a cool, dry location, away from sources of water or heat when not in use for prolonged periods of time.
- Keep away from sharp or pointed objects which might cut or snag the fabric's surface.
- Do not wash or soak the cushion or any of the electronic parts.
- Do not use detergent or other harsh cleaning agents.
- Do not immerse it in any liquid.
- Do not use abrasive cleaners or brushes.

9. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2025 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.” and “Razer Chroma” are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States and other countries. Actual product may differ from pictures. All other trademarks are the property of their respective owners. Warranty not valid outside of product’s intended region.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Razer is under license.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Head Cushion Chroma (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit: [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.