



RAZER HUNTSMAN MINI ANALOG

MASTER GUIDE

 
With the **Razer Huntsman Mini Analog**, the highest level of control now competes on a different scale. Meet our first 60% gaming keyboard with Razer Analog Optical Switches—a compact, portable weapon that offers the finest degree of execution.

CONTENTS

| | |
|--|----|
| 1. WHAT'S INSIDE..... | 3 |
| 2. WHAT'S NEEDED..... | 4 |
| 3. LET'S GET YOU COVERED..... | 4 |
| 4. TECHNICAL SPECIFICATIONS..... | 5 |
| 5. SETTING UP YOUR RAZER HUNTSMAN MINI ANALOG..... | 6 |
| 6. USING YOUR RAZER HUNTSMAN MINI ANALOG | 7 |
| 7. CONFIGURING YOUR RAZER HUNTSMAN MINI ANALOG | 10 |
| 8. SAFETY AND MAINTENANCE..... | 22 |
| 9. LEGALESE | 24 |


1. WHAT'S INSIDE

- Razer Huntsman Mini Analog

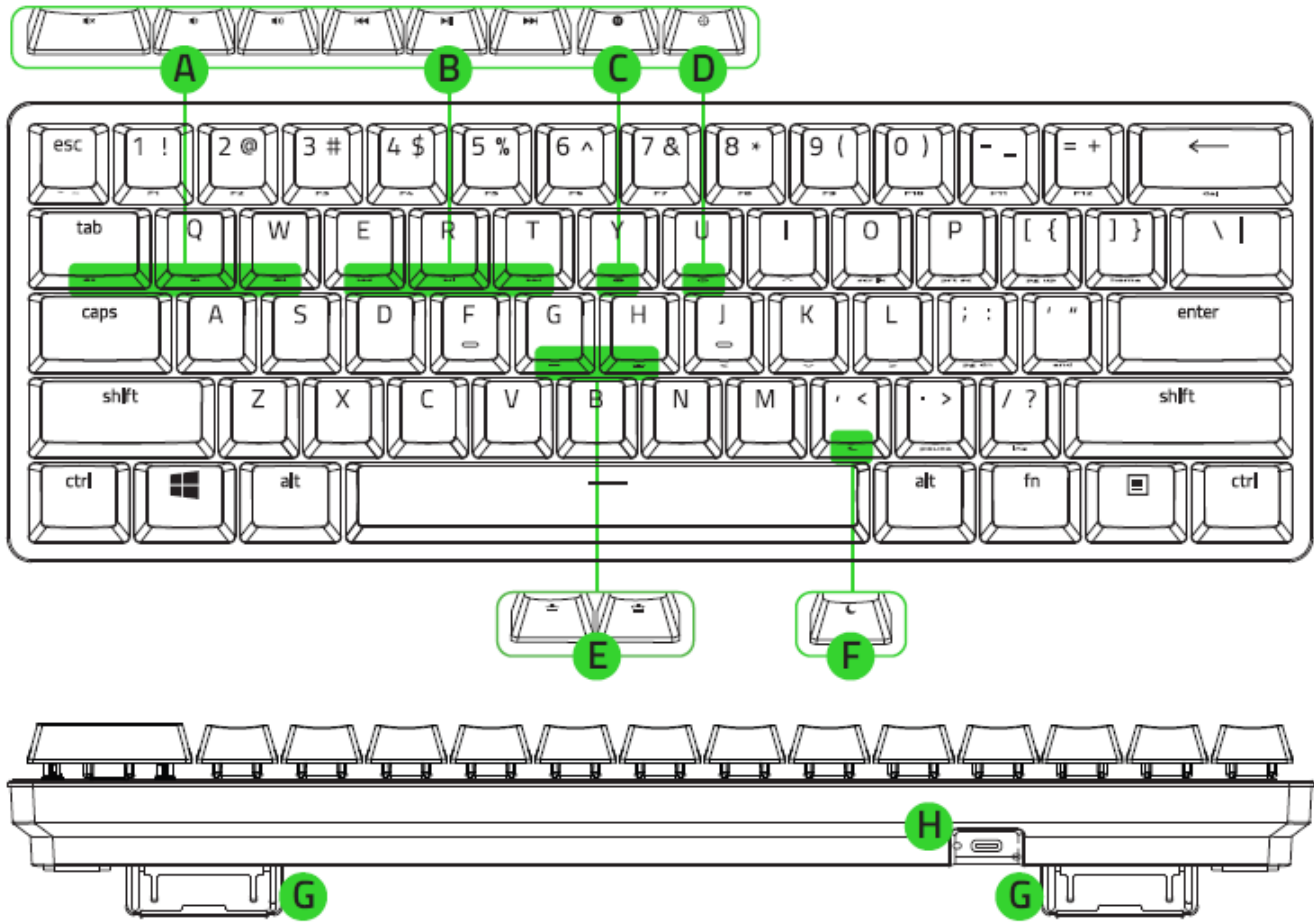

- A. Volume control keys
- B. Media keys
- C. On-The-Fly macro record key
- D. Gaming mode key
- E. Backlight control keys
- F. Sleep mode key
- G. Kickstand
- H. Type C por

 - Detachable Type C to Type A cable



- Important Product Information Guide

2. WHAT'S NEEDED

PRODUCT REQUIREMENTS

 
- PC with a free USB port

RAZER SYNAPSE 3 REQUIREMENTS

- Windows® 10 64-bit (or higher)
- Internet connection for software installation

3. LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 2-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

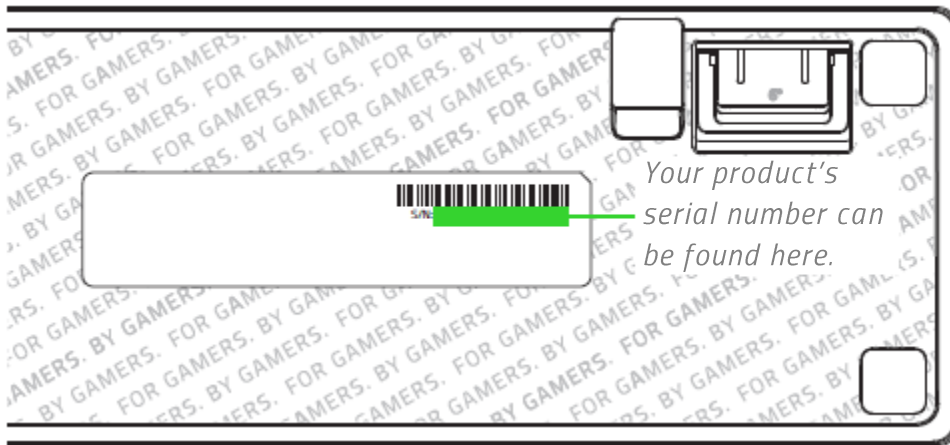

Got a question? Ask the Razer Support Team at support.razer.com

 
4. TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS

- Razer™ Analog Optical Switches
- 100 million keystroke lifespan
- Razer Doubleshot PBT Keycaps
- Standard Bottom Row Layout
- Aluminum construction
- 60% Compact form factor
- Detachable USB-C Braided Fiber Cable
- Hybrid onboard storage – up to 5 keybinding profiles
- Onboard lighting presets
- Individually backlit keys with Razer Chroma RGB backlighting featuring 16.8 million customizable color options
- Razer Synapse 3 enabled
- Fully programmable keys with on-the-fly macro recording
- N-key roll-over with built-in anti-ghosting
- Gaming mode option
- 1000 Hz Ultrapolling

5. SETTING UP YOUR RAZER HUNTSMAN MINI ANALOG

1. Connect the keyboard to your computer using the detachable Type C to Type A cable.

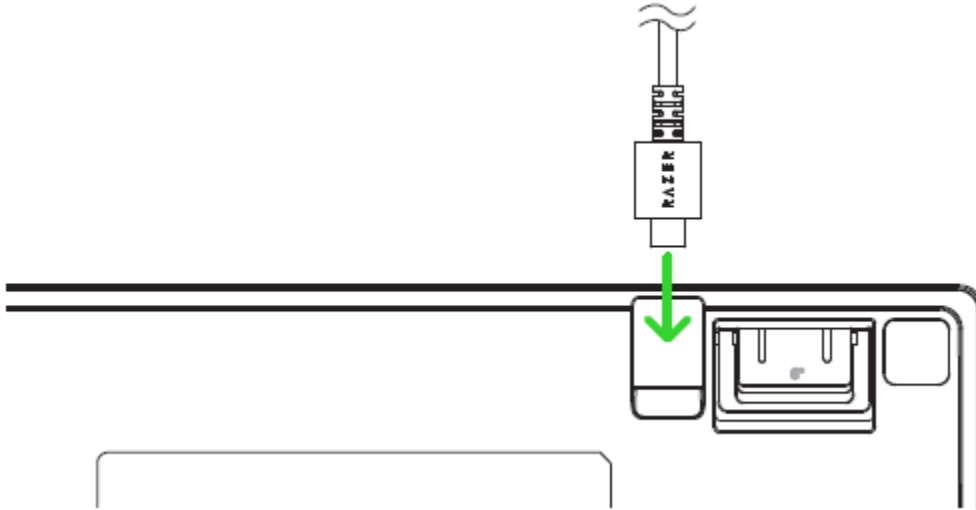

2. Use the Razer Synapse* app to customize its lighting and even create various profiles suited for different playstyles. Up to 5 of these profiles can be stored on your keyboard from the Razer Synapse app, allowing you to use these profiles even on systems without the app installed.

i *Install Razer Synapse when prompted or download the installer from razer.com/synapse.*

6. USING YOUR RAZER HUNTSMAN MINI ANALOG



When the "fn" key is held down, all function keys with secondary functions including other keys which you can combine with the "fn" key will light up. Pressing the "fn" key in combination with the function keys will activate their secondary features on your PC.

| Function Keys | Features Description |
|---|---|
| Three keyboard keys: 'tab' with a speaker icon and a mute symbol, 'Q' with a speaker icon and a volume down symbol, and 'W' with a speaker icon and a volume up symbol. | The audio volume controls allow you to mute (), decrease () and increase () the audio output. |
| Three keyboard keys: 'E' with a play/pause symbol, 'R' with a play/pause symbol, and 'T' with a skip backward and skip forward symbol. | The media keys allow you to play/pause () a track or skip tracks backward () and forward (). |
| Two keyboard keys: 'G' with a crown icon and a downward arrow, and 'H' with a crown icon and an upward arrow. | The backlight control keys allow you to decrease () or increase () the brightness of your keyboard's LEDs. |
| A keyboard key with a crescent moon icon. | The sleep key allows you to suspend all operating system activities. This function allows you to save electricity while the computer is idle. |

ON-THE-FLY MACRO RECORDING



 
Follow these steps to create an OTF Macro Recording:

i Razer Synapse must be installed and running when recording macros.

1. Press the key combination to start recording.


2. The Macro Recording Indicator will light up to show that the device is ready to record.
3. Type in the keys you want to record.
4. Press the key combination to stop the recording or the ESC key to cancel recording. The Macro Recording Indicator will start blinking to show that the device has stopped recording and is ready to save the macro.
5. Press the desired key where you want to save your macro.

GAMING MODE

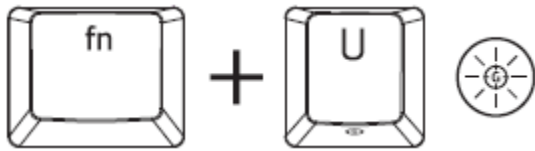

The Gaming Mode disables the Windows Key function to avoid accidental usage. Furthermore, you can maximize the effect of Anti-Ghosting by activating the Gaming Mode function. You can also choose to disable the Alt + Tab and Alt + F4 functions by changing the Gaming Mode settings in Razer Synapse 3. An indicator will light up when Gaming Mode is active.

 CHROMA EFFECTS

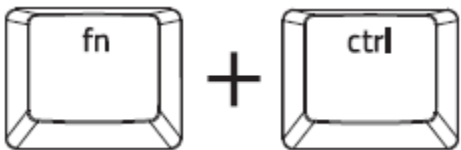


Holding down the "fn" modifier key, control key, and then pressing any of the listed number keys will change the lighting on your keyboard. Below are the corresponding Chroma effects you'll get for each hotkey.

| Hotkey | Chroma Effect | Additional settings |
|---------------|------------------|--|
| Fn + ctrl + 1 | Off | N/A |
| Fn + ctrl + 2 | Static | Press the number key again to cycle through different colors |
| Fn + ctrl + 3 | Breathing | Press the number key again to cycle through different colors |
| Fn + ctrl + 4 | Spectrum cycling | N/A |
| Fn + ctrl + 5 | Wave | Press the number key again to change direction |

| | | |
|---------------|-----------|--|
| Fn + ctrl + 6 | Reactive | Press the number key again to cycle through different colors |
| Fn + ctrl + 7 | Starlight | Press the number key again to cycle through different colors |

RAZER ANALOG OPTICAL SWITCHES

 With Razer Analog Optical Switches, each key can state its current position from at rest (0%) to fully pressed (100%). Combined with Razer Synapse, you can customize the actuation point to increase or decrease the key's sensitivity to touch, emulate joystick movement for games with controller support, and add a secondary function to each key.

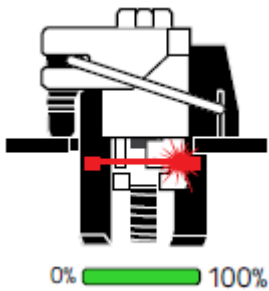

7. CONFIGURING YOUR RAZER HUNTSMAN MINI ANALOG

 
! *Disclaimer: The features listed here require you to log into Razer Synapse 3. These features are also subject to change based on the current software version and your Operating System.*

SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse 3.


Dashboard

The Dashboard subtab is an overview of your Razer Synapse 3 where you can access all your Razer devices, modules, and online services.

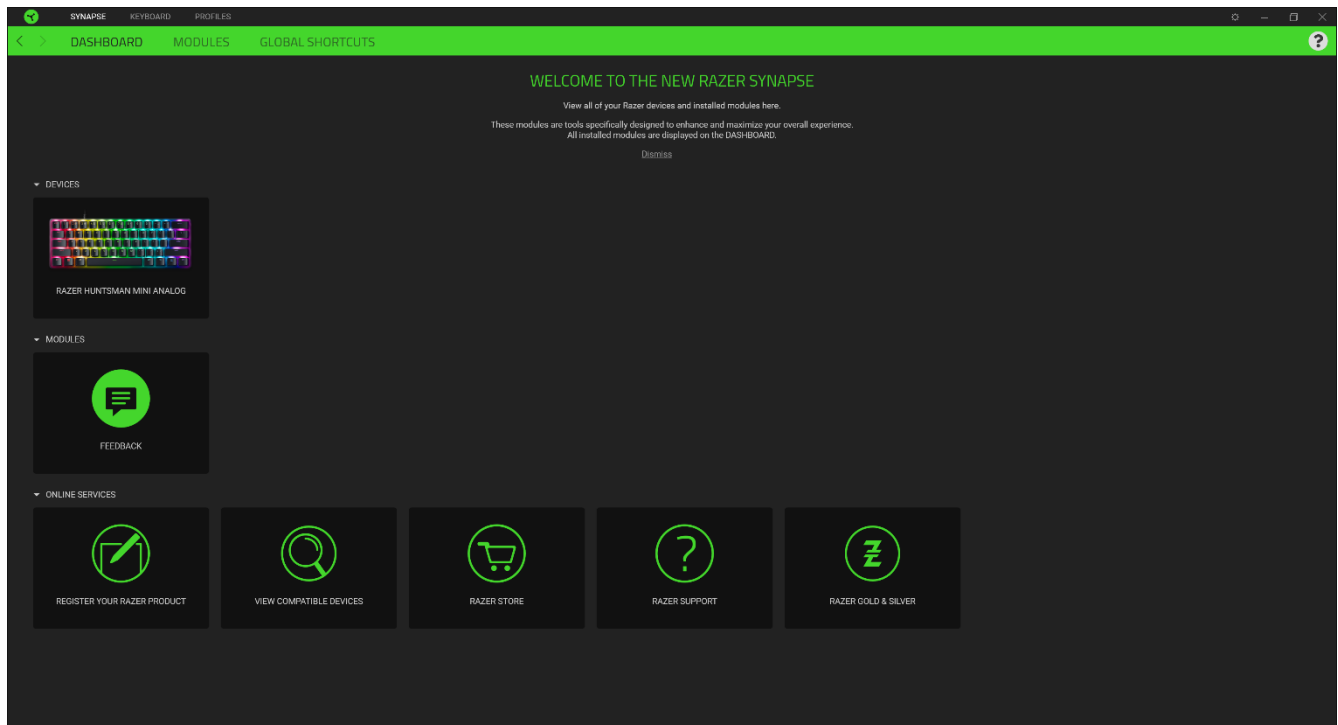

Modules

 
The Modules subtab displays all installed and available modules for installation.

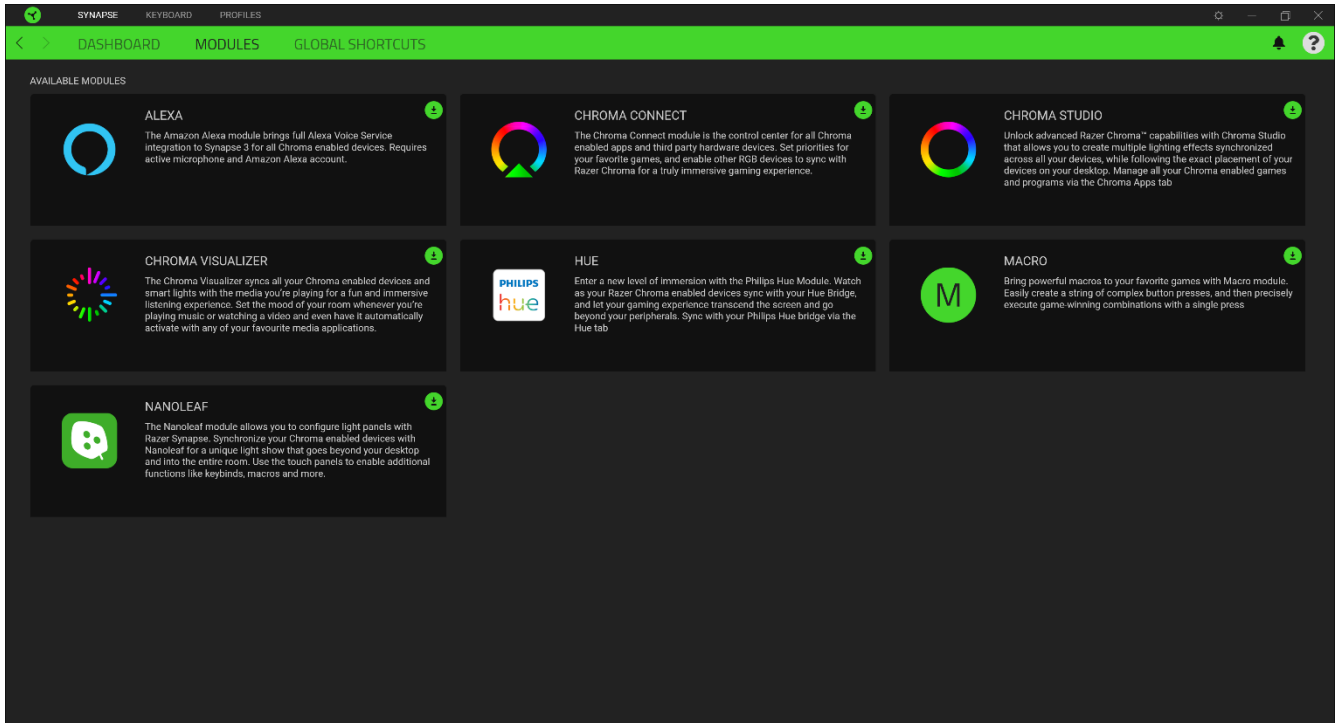

Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs which apply across all device profiles.

  *Only Razer Synapse-enabled device inputs will be recognized.*

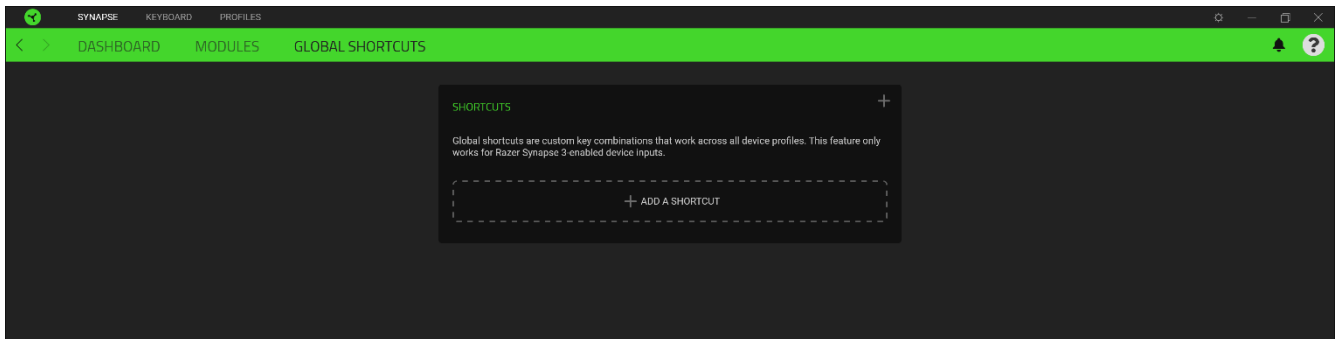


KEYBOARD

The Keyboard tab is the main tab for your Razer Huntsman Mini Analog. From here, you can change your device settings such as key assignments, gaming mode settings, and your device's lighting. Changes made under this tab are automatically saved to your system and cloud storage.

Customize

 The Customize subtab is for modifying your keyboard's key assignments and gaming mode settings.

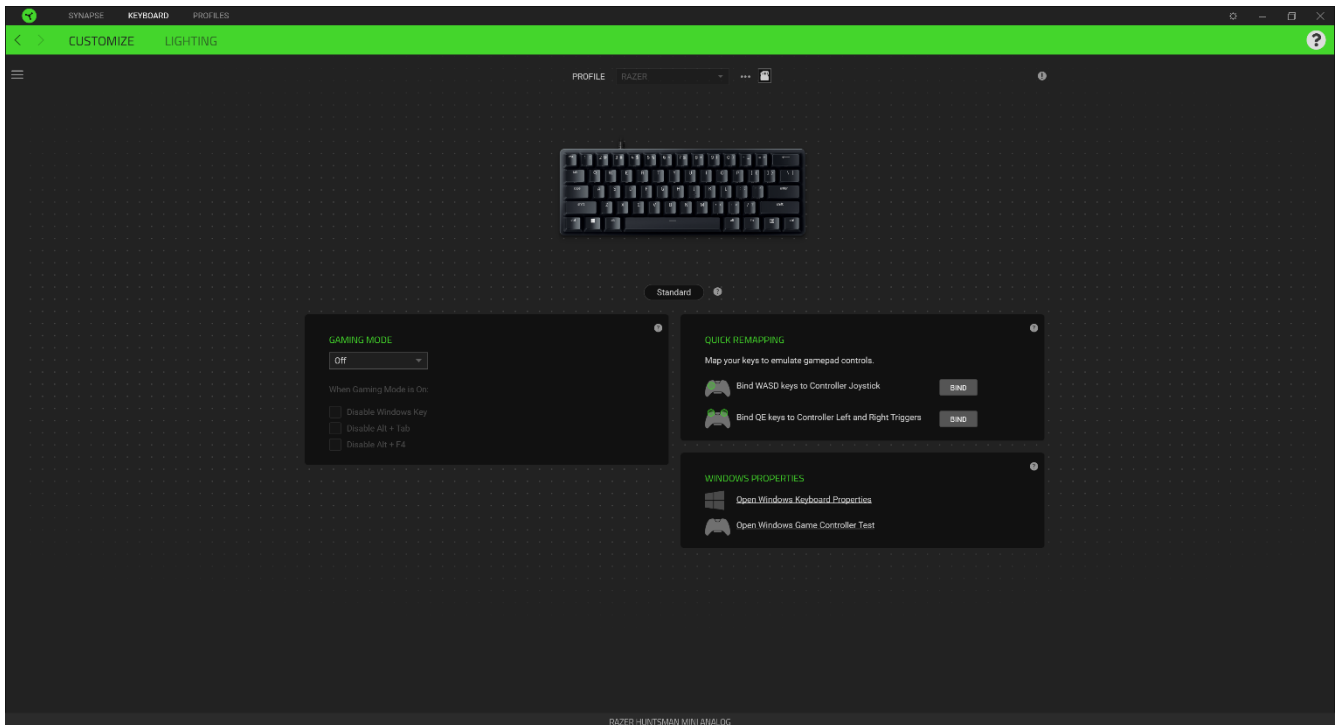

Profile

Profile is a data storage for keeping all your Razer peripheral's settings. By default, the profile name is based on your system's name. To add, import, rename, duplicate, export, or delete a profile, simply press the profile's corresponding Miscellaneous button (●●●).

Hypershift

Hypershift mode is a secondary set of key assignments that is activated when the Hypershift key is held down. By default, the Hypershift key is assigned to the fn key of your Razer Synapse 3 supported keyboard however, you can also assign any key as a Hypershift key.

Gaming Mode

Gaming Mode enables you to customize which keys to disable when Gaming Mode is activated. Depending on your settings, you may choose to disable the Windows key, Alt + Tab and Alt + F4.

Quick Remapping

 
Quick Remapping enables you to easily emulate gamepad controls by changing your keyboard's key bindings to that of a controller's joystick and shoulder buttons.

Keyboard Properties


Allows you to open the Windows Keyboard Properties where you can modify other keyboard settings such as Repeat delay, Repeat Rate, and Cursor blink rate, or view all keyboard drivers installed in your PC.

Sidebar

Clicking the Sidebar button (☰) will reveal all current key assignments for your Razer Huntsman Mini Analog.

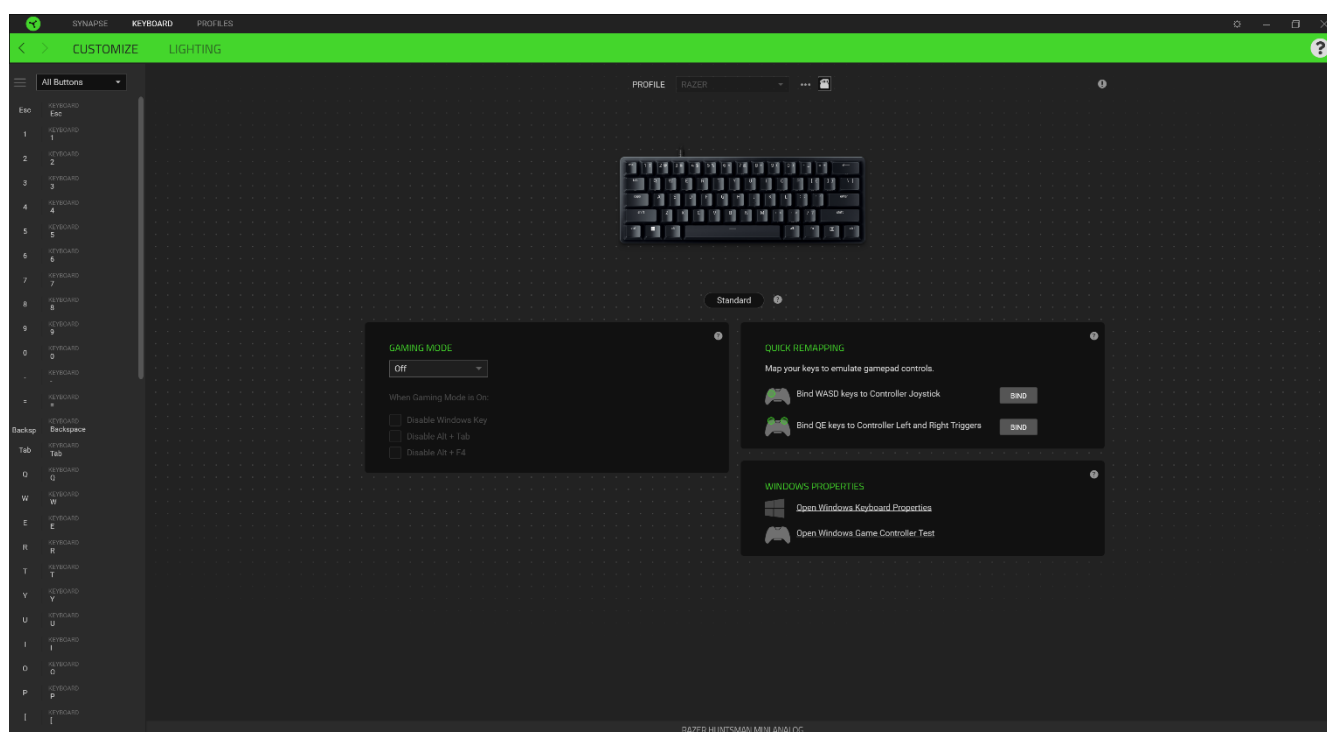

 Alternatively, you can skip to a specific key assignment by selecting it on the Customize tab.

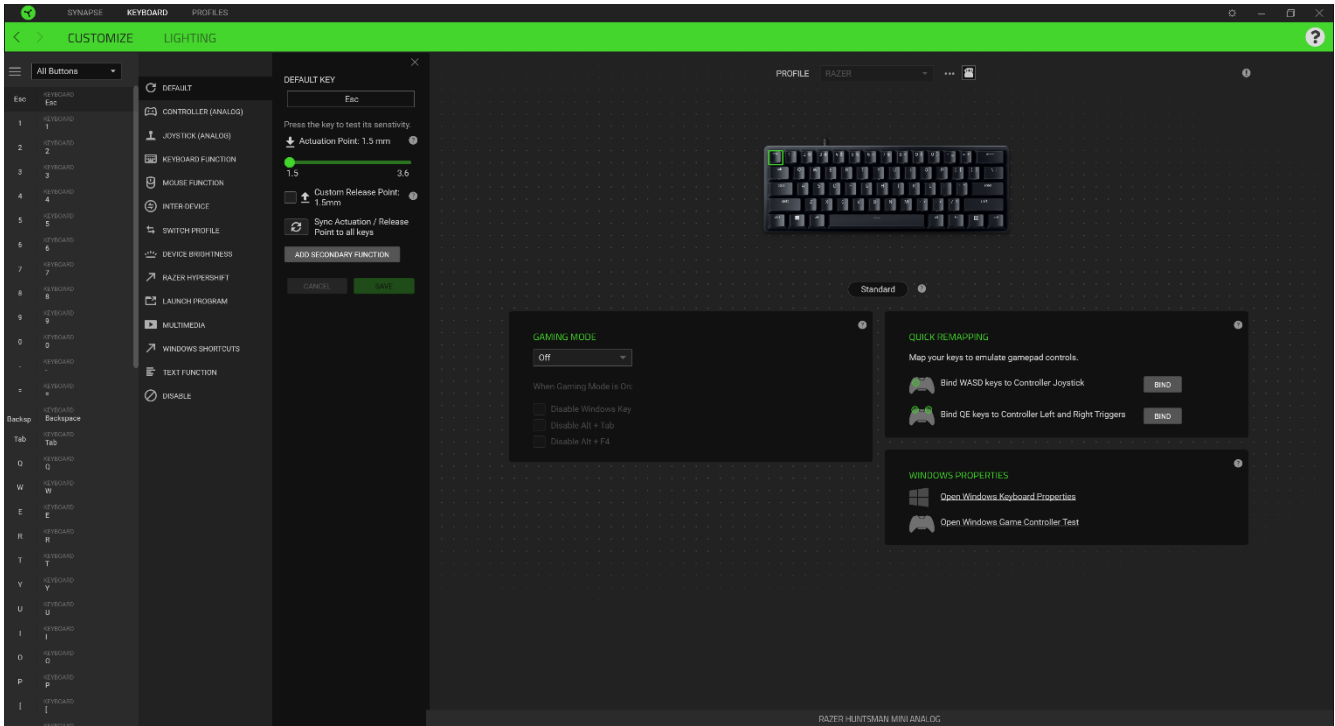

Upon selecting a key assignment, you may then change it to one of the following functions:

 Default

This option enables you to return the selected key to its original setting.

 Controller

This option allows you to change the functionality of any key into a controller button, bumper or trigger.

 Joystick

This option enables you to change the functionality of any key into a joystick button or an analog stick direction.

 Keyboard Function

This option changes the key assignment into a keyboard function. You can also choose enable Turbo mode which allows you to emulate repeatedly pressing the keyboard function while the key is held down.

 Mouse Function

This option allows you to change any key into a mouse function. Listed below are the functions which you can choose from:

- Left Click - Performs a left mouse click using the assigned button.
- Right Click - Performs a right mouse click using the assigned button.
- Scroll Click - Activates the universal scrolling function.
- Double Click - Performs a double left click using the assigned button.
- Mouse Button 4 - Performs a "Backward" command for most internet browsers.
- Mouse Button 5 - Performs a "Forward" command for most internet browsers.
- Scroll Up - Performs a "Scroll Up" command using the assigned button.
- Scroll Down - Performs a "Scroll Down" command using the assigned button.
- Scroll Left - Performs a "Scroll Left" command using the assigned button.
- Scroll Right - Performs a "Scroll Right" command using the assigned button.

You can also choose to enable Turbo mode in some of the mouse functions which allow you to emulate repeatedly pressing and releasing said function while the key is held down.

Inter-Device

Inter-device allows you to change the settings of other Razer Synapse 3-enabled devices. Some of these functionalities are device-specific such as using your Razer gaming keyboard to change the Sensitivity Stage of your Razer gaming mouse.

M Macro

A Macro is a prerecorded sequence of keystrokes and button presses that is executed with precise timing. By setting the key function to Macro, you can conveniently execute a chain of commands. Do take note that this function will only be visible if you have installed the Macro module from the Modules tab. [Click here to learn more about Macros](#)

Switch Profile

Switch Profile enables you to quickly change profiles and load a new set of key assignments. An on-screen notification will appear whenever you switch profiles.

Switch Lighting

Switch Lighting allows you to easily switch between all advanced lighting effects. Do take note that this function will only be visible if you have installed the Chroma module from the Modules tab.

[Click here to learn more about Advanced Chroma Effects](#)

Razer Hypershift

Setting the key to Razer Hypershift will allow you to activate Hypershift mode as long as the key is held down.

Launch Program

Launch Program enables you to open an app or a website using the assigned key. When you select Launch Program, two choices will appear which requires you to search for a specific app you want to open, or write the address of the website you want to visit.

Multimedia

This option allows you to assign multimedia controls to your Razer device. Listed below are the multimedia controls you can choose from:

- Volume Down - Decreases the audio output.
- Volume Up - Increases the audio output.
- Mute Volume - Mutes the audio.
- Mic Volume Up - Increases the microphone volume.
- Mic Volume Down - Decreases the microphone volume.
- Mute Mic - Mutes the microphone.
- Mute All - Mutes both microphone and audio output.
- Play / Pause - Play, pause, or resume playback of the current media.
- Previous Track - Play the previous media track.
- Next Track - Play the next media track.

Windows Shortcuts

This option allows you to assign your preferred key into a Windows Operating System shortcut command. For more information, please visit: support.microsoft.com/kb/126449

☰ Text Function

 
Text Function enables you to type a prewritten text with a touch of a key. Simply write your desired text on the given field and your text will be typed whenever the assigned key is pressed. This function has full Unicode support and you can also insert special symbols from character maps.

🚫 Disable

This option renders the assigned key unusable. Use Disable if you do not want to use the selected key or if it interferes with your gaming.

Lighting

The Lighting subtab enables you to modify your Razer device's light settings.

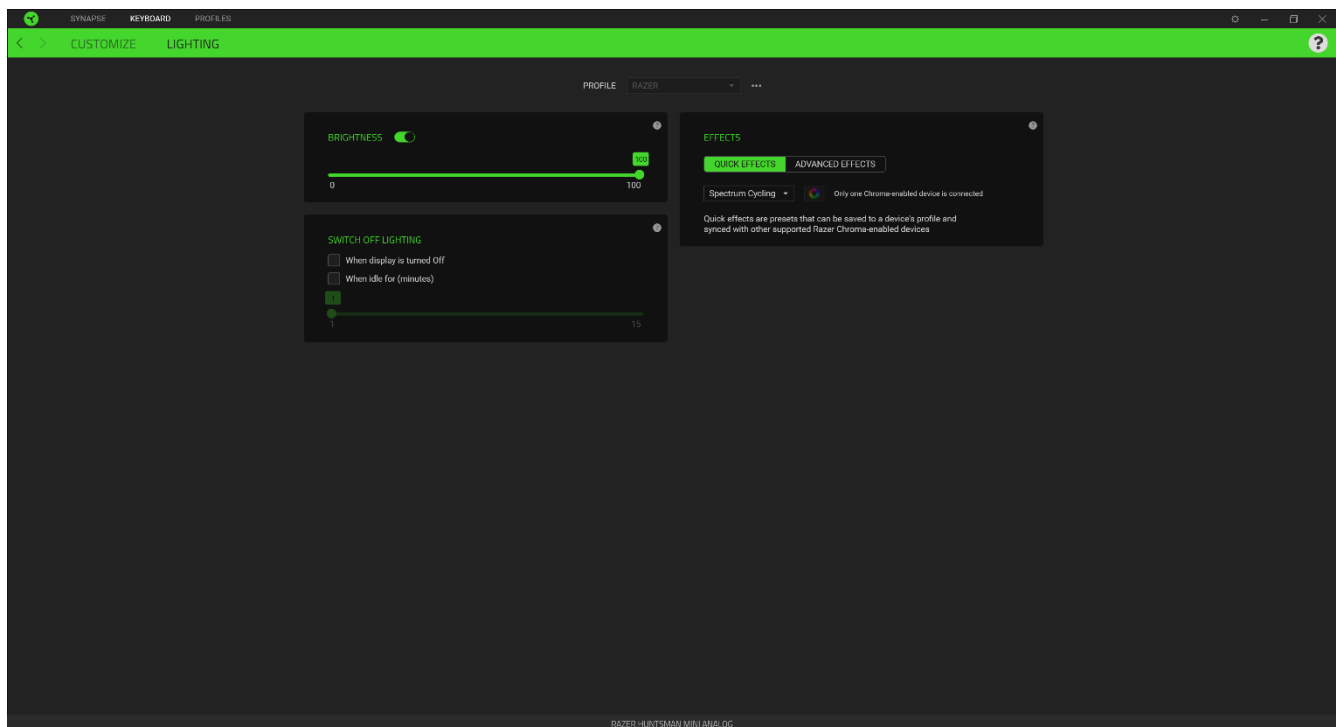

Brightness

You can turn off your Razer device's lighting by toggling the Brightness option or increase/decrease the luminance using the slider.






Switch Off Lighting


This is a power saving tool which allows you to disable your device's lighting in response to your system's display turning off and/or automatically power down when your Razer Huntsman Mini Analog has been idle for a set amount of time.

Quick Effects


A number of quick effects can be selected and applied to your device's lighting, as listed here:

i Only devices that support the selected lighting effect will synchronize. LED indicators are not customizable.

| | Name | Description | How to set up |
|---|-------------------|--|---|
|  | Ambient awareness | The lighting on the keyboard will reflect the averaged color on the selected screen region | Select or customize a screen region |
|  | Audio meter | The keyboard will light up according to the audio level with a default spectrum of colors | Select a Color Boost level |
|  | Breathing | The keyboard fades in and out of the selected color(s) | Select up to 2 colors or randomize colors |
|  | Fire | The keyboard lights up in warm colors to mimic the motion of flames | No further customization required |
|  | Reactive | The LEDs will light up when a key is pressed. The light will fade off after a specified period of time | Select a color and a duration |
|  | Ripple | On key press, light will ripple away from the pressed key | Select a color |
|  | Spectrum cycling | The lighting will cycle between 16.8 million colors indefinitely | No further customization required |
|  | Starlight | Each LED will have a chance of fading in and out at a random time and duration | Select up to 2 colors or randomize colors and select a duration |
|  | Static | The LEDs will remain lit in the selected color | Select a color |
|  | Wave | The lighting will scroll in the direction selected | Select either left-to-right or right-to-left wave direction |
|  | Wheel | The keyboard lighting will rotate in the direction selected with a default spectrum of colors | Select either counterclockwise or clockwise wheel direction |

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button ().

Studio Effects

 
The Studio Effects option allows you to choose a Chroma Effect you want to use on your Razer Chroma-enabled peripheral. To start making your own Chroma Effect, simply press the Chroma Studio button (). [Click here to learn more about the Chroma Studio](#)




PROFILES TAB

The Profiles tab is a convenient way of managing all your profiles and linking them to your games and applications.

Devices

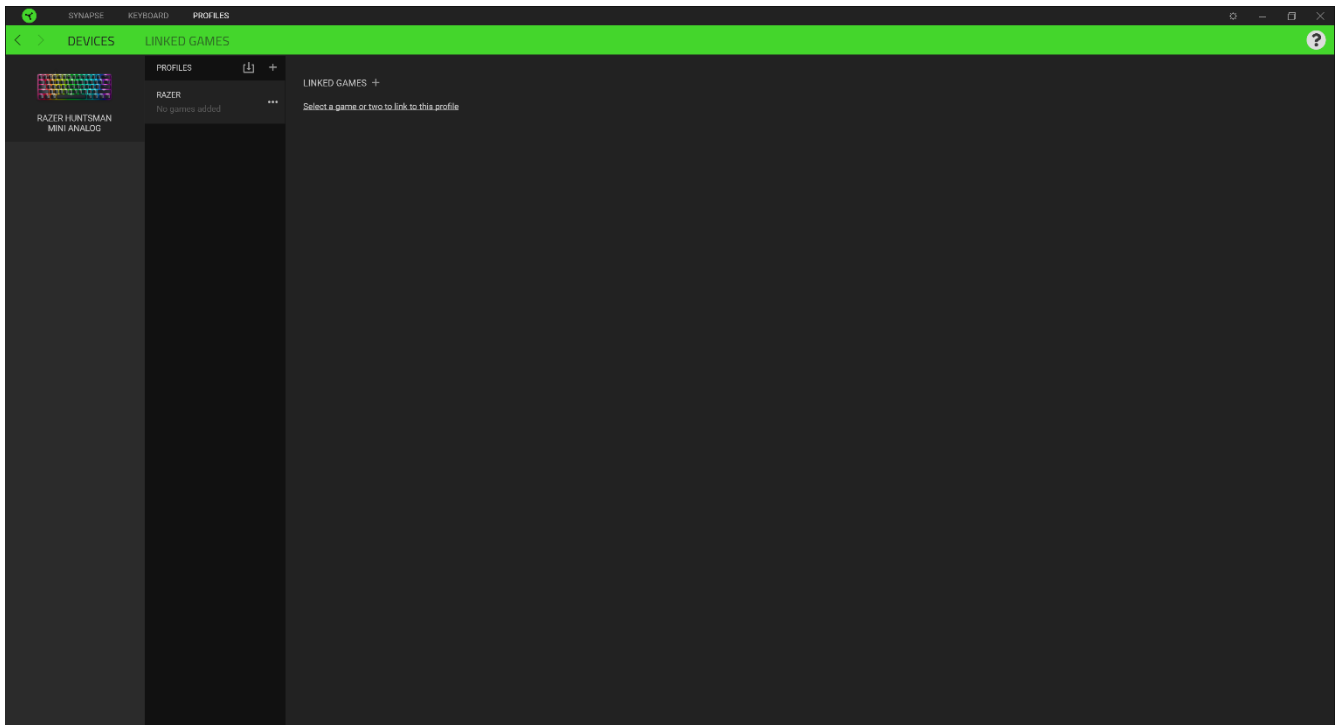
View which games are linked to each device's profiles or which Chroma Effect is linked to specific games using the Devices subtab.



You can import Profiles / Chroma Effects from your computer or from the cloud through the import button (), or create new profiles within the selected device or new Chroma Effects for specific games using the add button (). To rename, duplicate, export, or delete a profile, simply press the Miscellaneous button (). Each profile and/or Chroma Effect can be set to automatically activate when you run an application using the Linked Games option.

Linked Games

 
The Linked Games subtab gives you the flexibility to add games, view peripherals that are linked to games, or search for added games. You can also sort games based on alphabetical order, last played, or most played. Added games will still be listed here even if it is not linked to a Razer device.

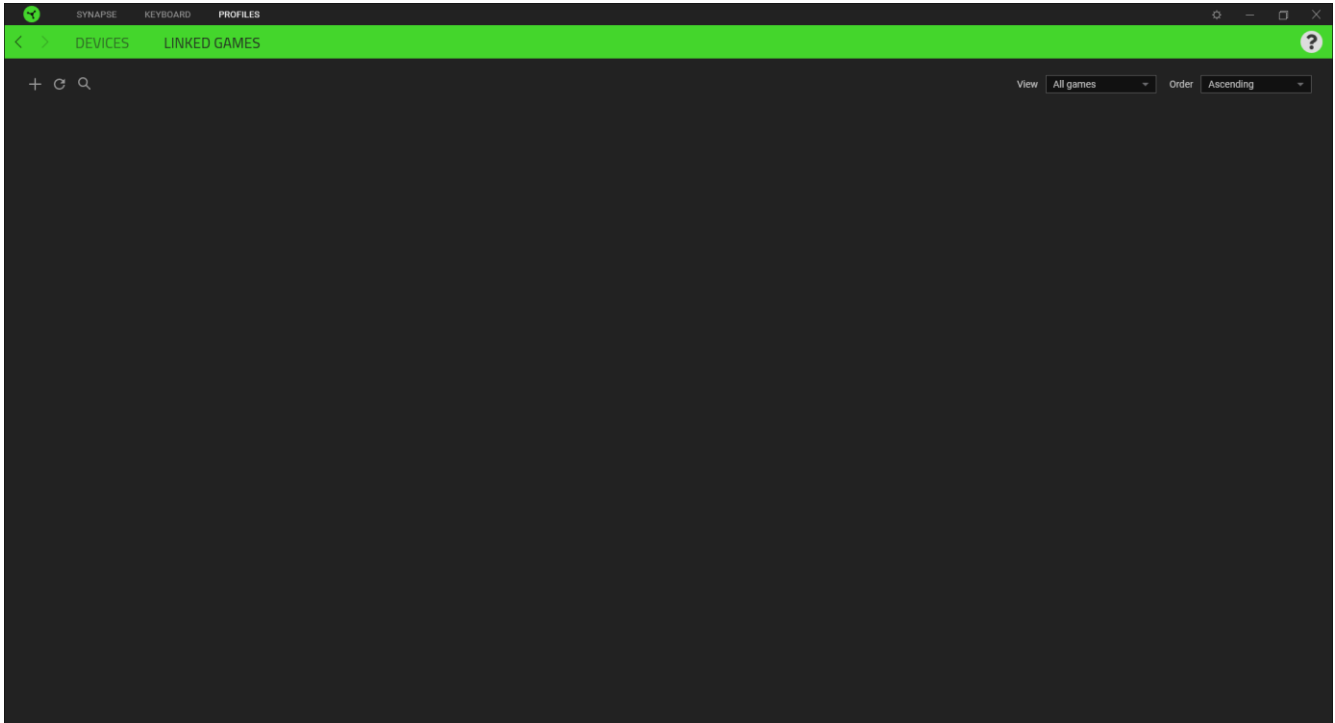


To link games to connected Razer devices or Chroma Effects, simply click on any game from the list, and then click **Select a device and its profile to launch automatically during gameplay** to select the Razer device or Chroma Effect it will link with.


Once linked, you may click on the Miscellaneous button (●●●) of the corresponding Chroma Effect or device to select a specific Chroma Effect or profile.

SETTINGS WINDOW

 The Settings window, accessible by clicking the () button on Razer Synapse 3, enables you to configure the startup behavior and display language of Razer Synapse 3, view the master guides of each connected Razer device, or perform factory reset on any connected Razer device.

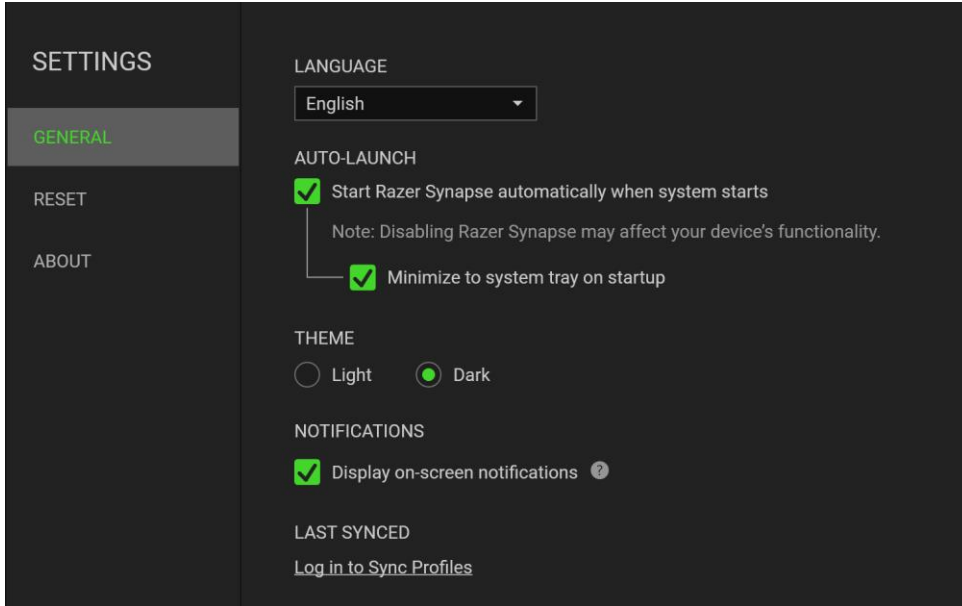


General tab

The default tab of the Settings window. The General tab enables you to change the software's display language, start-up behavior, and display theme; or view the master guide of all connected Razer devices. You may also manually sync your profiles to the cloud () or view the master guide of all connected Razer devices.

Reset tab

The Reset tab allows you to perform a factory reset on all connected Razer devices with on-board memory and/or reset Razer Synapse 3 tutorials to acquaint yourself again with Razer Synapse 3's new features on its next launch.

 *By resetting a Razer device, all profiles stored on the selected device's on-board memory will be erased.*

About tab

The About tab displays brief software information, copyright statement, and provides relevant links for its terms of use. You may also use this tab to check for software updates, or as a quick access to Razer's social communities.

8. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Huntsman Mini Analog, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

COMFORT

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Razer Huntsman Mini Analog.

1. Position your keyboard and monitor directly in front of you with your mouse next to it. Place your elbows next to your side, not too far away and your keyboard within easy reach.
2. Adjust the height of your chair and table so that the keyboard and mouse are at or below elbow height.
3. Keep your feet well supported, posture straight and your shoulders relaxed.
4. During gameplay, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
5. Do not rest your wrists on hard surfaces for long periods.
6. Use a wrist rest to support your wrist while gaming.
7. Customize the keys on your keyboard to suit your style of gaming in order to minimize repetitive or awkward motions while gaming.
8. Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck and legs.

If you should experience any physical discomfort while using your keyboard, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

MAINTENANCE AND USE

The Razer Huntsman Mini Analog requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device from the computer and clean it using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

9. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2022 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.”, and “Razer Chroma” logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Huntsman Mini Analog (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.