



RAZER CLIO X

MASTER GUIDE

CONTENTS

1. WHAT'S INSIDE 1

2. WHAT'S NEEDED 2

3. LET'S GET YOU COVERED 2

4. SETTING UP YOUR HEAD CUSHION 3

5. USING YOUR HEAD CUSHION 6

 
 
6. CONFIGURING YOUR RAZER CLIO X VIA RAZER SYNAPSE 7

7. SAFETY AND MAINTENANCE 21


8. LEGALESE..... 23

1. WHAT'S INSIDE

- Razer Clio X

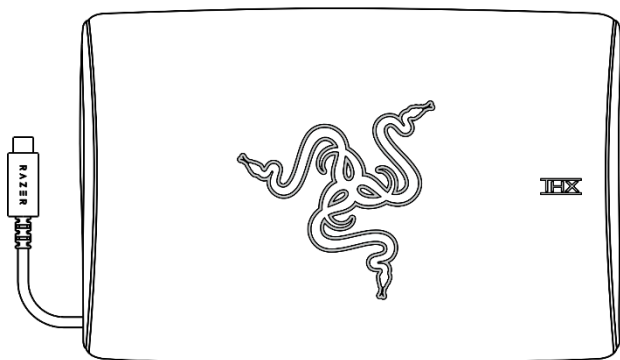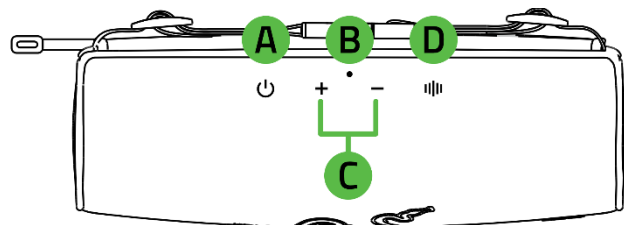


 - A. Power button
- B. Indicator LED
- C. Volume control buttons
- D. EQ Button

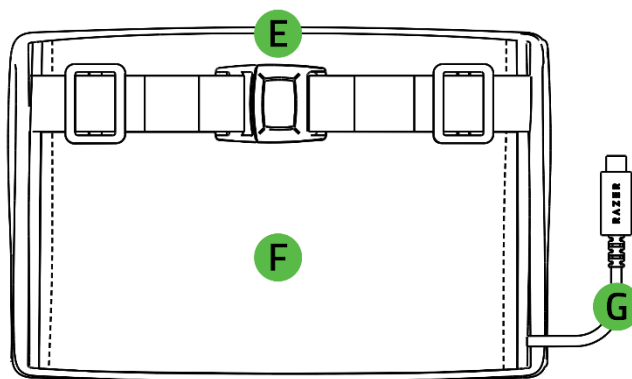

- E. Adjustable chair strap
- F. External power bank pouch
- G. USB Type C power cable

 - USB Type C HyperSpeed Wireless Dongle



- Important Product Information Guide

2. WHAT'S NEEDED

PRODUCT REQUIREMENTS

- High-back gaming chair
- USB Type C-enabled external power bank (20W and above) with Power Delivery (PD 2.0 and above)*

RAZER SYNAPSE REQUIREMENTS

- Windows® 11
- Internet connection for software installation

 
**Power bank not included. Also compatible with [1] a PC with a USB Type C port (not included) or [2] a USB Type C power adapter (20 W or higher with PD 2.0 or higher) when used with a USB Type C extension cable (both sold separately).*

3. LET'S GET YOU COVERED




You've got a great device — now make it even better.
Register your warranty at razerid.razer.com to get covered and unlock exclusive Razer benefits.

Your product's serial number can be found here.

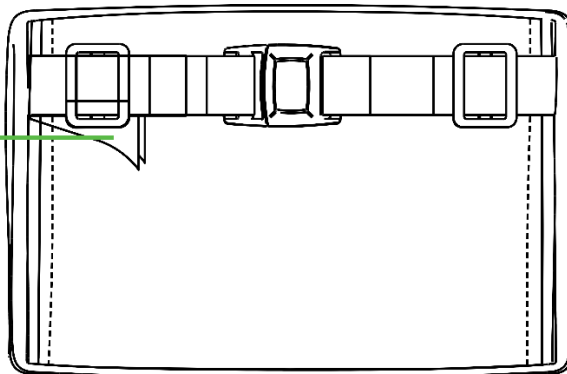

4. SETTING IT UP

 
ATTACHING THE HEAD CUSHION

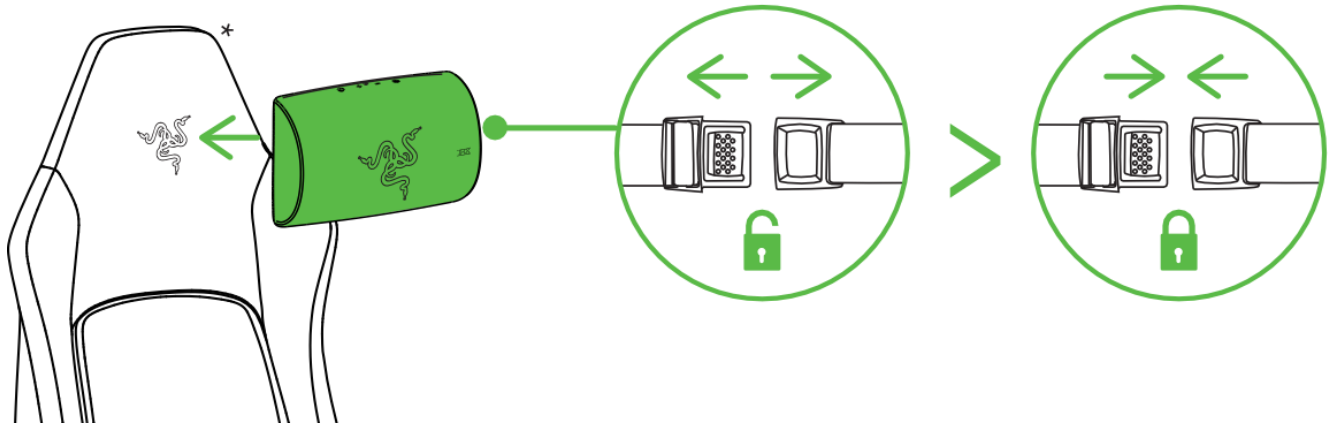

i Make sure the head cushion is securely strapped into your gaming chair.

POWERING THE HEAD CUSHION

 
A. Via external power bank

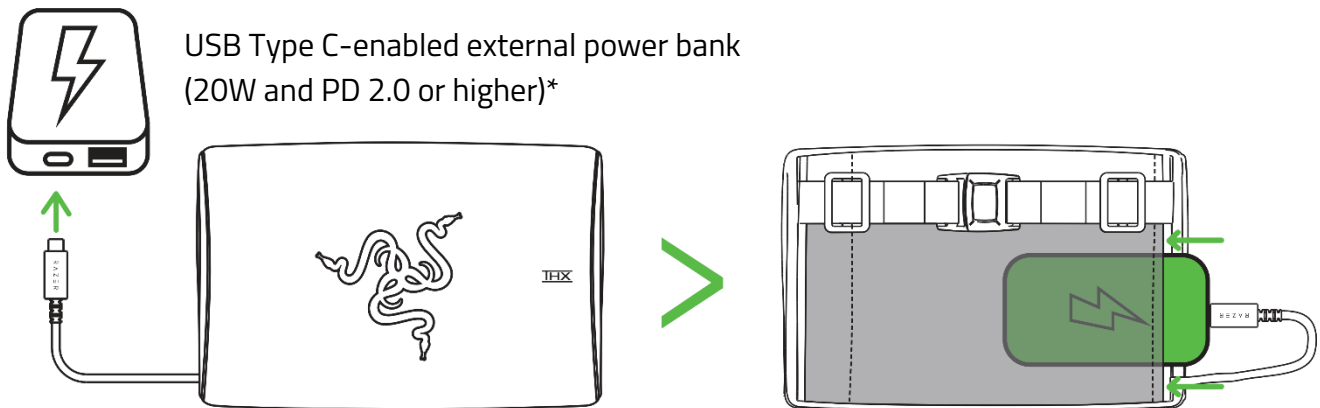

i Make sure the compatible external power bank is securely placed in the designated pouch and that the power cable is properly connected.

*not included.

 B. Via USB Type C (PC or power adapter)

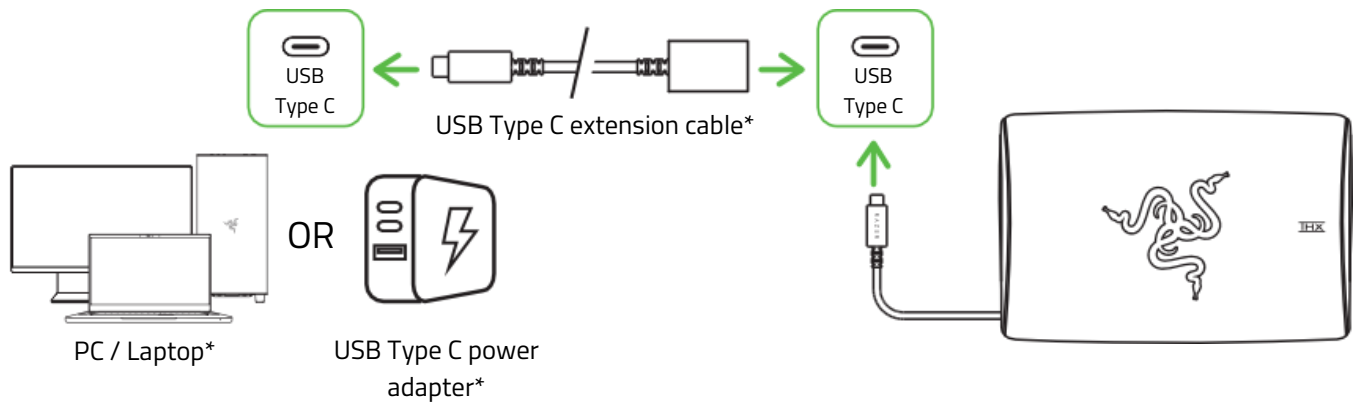


**not included.*

- i** The head cushion is compatible with [1] a PC with a USB Type C port or [2] a USB Type C power adapter (20 W or higher with PD 2.0 or higher). When using either option, ensure the power cable is securely connected, free from strain, and positioned away from walkways or sharp edges.

CONNECTING TO YOUR HEAD CUSHION


- i** Before proceeding, make sure that the head cushion is connected to a power source.

 1.

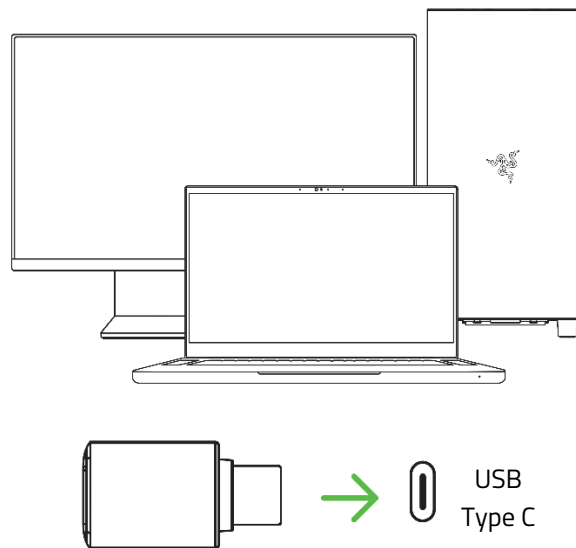

- !** Install Razer Synapse when prompted, or download the installer from [razer.com/synapse](https://www.razer.com/synapse).

 2.

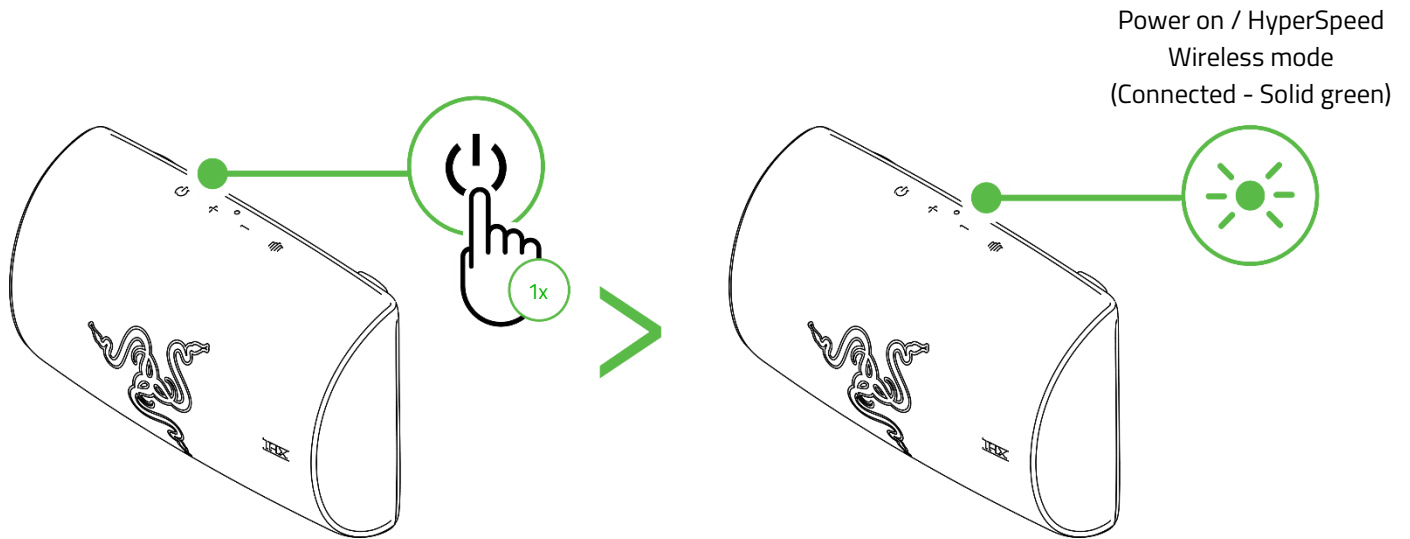

Your head cushion is now ready to use.

 
RAZER SYNAPSE

Customize the audio of your head cushion by adjusting equalizer presets or creating your own. Enhance sound details and choose whether to use the speaker as your primary audio source when standalone, or activate Surround Mode to turn it into a rear speaker that complements your existing soundbar or 2.0/2.1 setup.


i Only available on Windows® 11. Razer Synapse is only accessible when the wireless dongle is connected to your system.

5. USING YOUR HEAD CUSHION


POWER ON / OFF

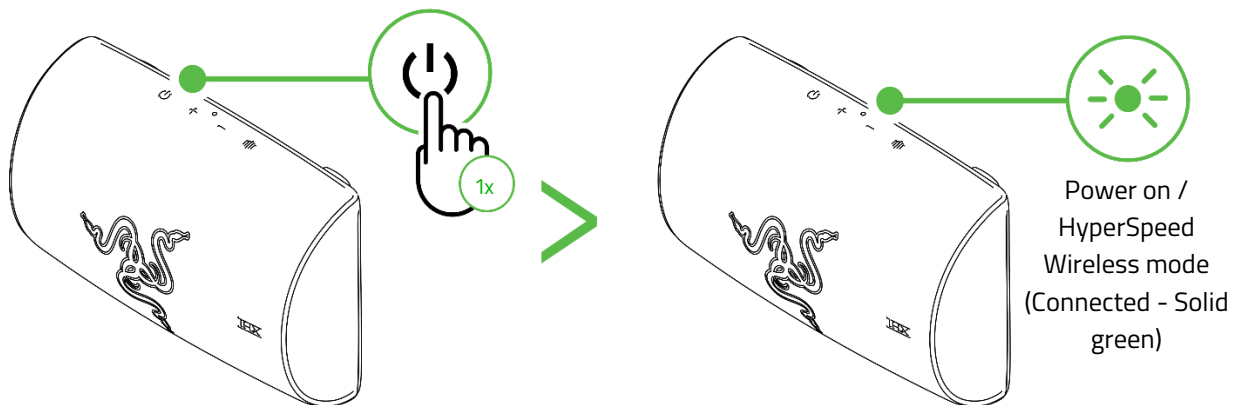

ADJUSTING THE AUDIO VOLUME

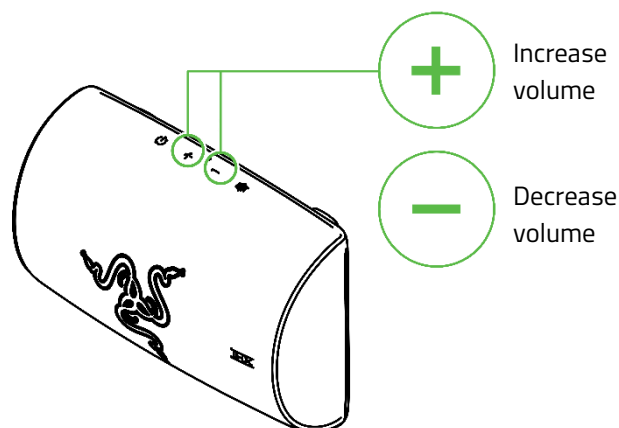 

CYCLING THROUGH EQ PRESETS

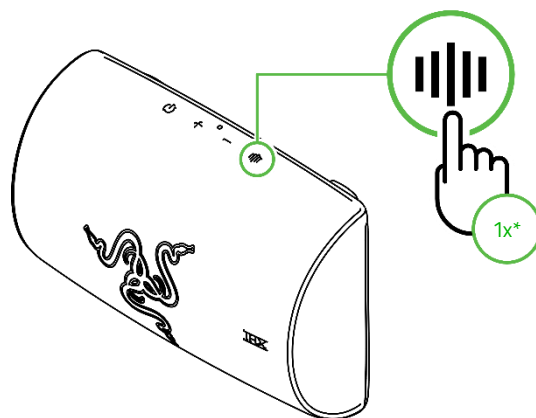 

EQ Presets

Game

Music

Movie

Custom

**Repeat to cycle through presets.*

i You can also use the Razer Synapse app to switch between EQ presets. The Custom preset will only be available after being enabled on Razer Synapse.

6. CONFIGURING YOUR RAZER CLIO X VIA RAZER SYNAPSE

i *Disclaimer: This guide provides an overview of the New Razer Synapse app and may only partially cover some of the features of your device. The New Razer Synapse requires an Internet connection to install, update, access, and save cloud-based features. Registering for a Razer ID account is recommended but optional. All features listed here are subject to change based on the current version, connected device(s), and supported add-ons.*

SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse. Use the following buttons below to navigate the user interface:

— Minimize

Clicking this button will minimize the app to the taskbar while it runs in the background.

□ Maximize

This button expands the browser window to fill the entire screen. To restore the window to its original size, click the maximize button again.

✕ Close

This button will close all relevant tabs and terminate the application completely.

◀ Previous Tab

Clicking this button will return you to the last tab you have visited.

> Next Tab

Clicking this button will move you to the next page if you've recently used the Previous Tab button.

↻ Refresh Tab

This button reloads the current page. Use this if a page isn't displaying correctly or you want to see the latest content.

⬇ Download Update

If this button appears, that means there are changes to the app. Use this if a page isn't displaying correctly or you want to see the latest content.

☐ More

Clicking this button will open a pop-up so you can easily access your Devices, Modules, and Other Installed Apps tabs.

⚙ Settings

Clicking this button will open the Settings tab, so you can quickly change the settings to this app.

👤 Profile

 
This button will open a pop-up to access the Log In, Feedback, Rate This Software, Add WiFi Device, and Exit options.

❓ Info

Hovering over this button will pop up an additional information about a feature or function.


Dashboard

The Dashboard subtab is an overview of your Razer Synapse, where you can access all your Razer devices, modules, and online services.

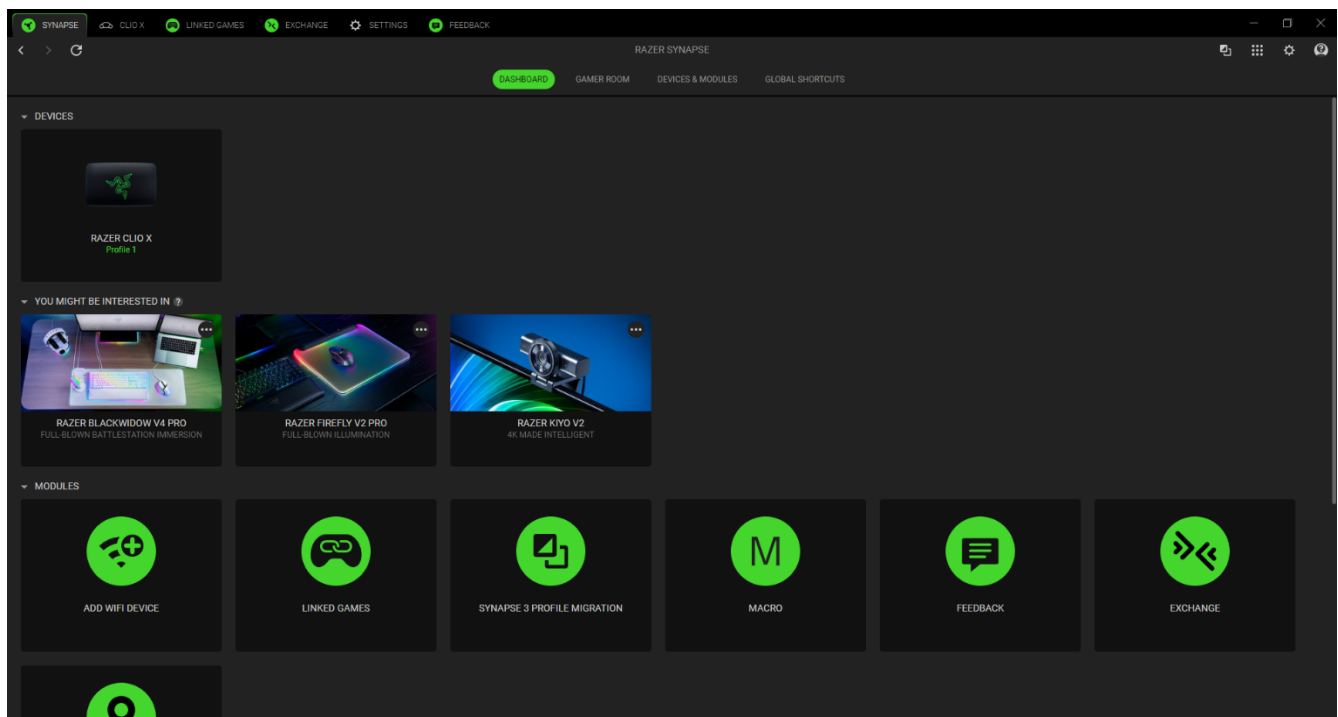

Gamer Room

 The Gamer Room subtab shows all devices with the Razer Aether Light feature. From here, you can view and manage your Gamer Room-supported devices.

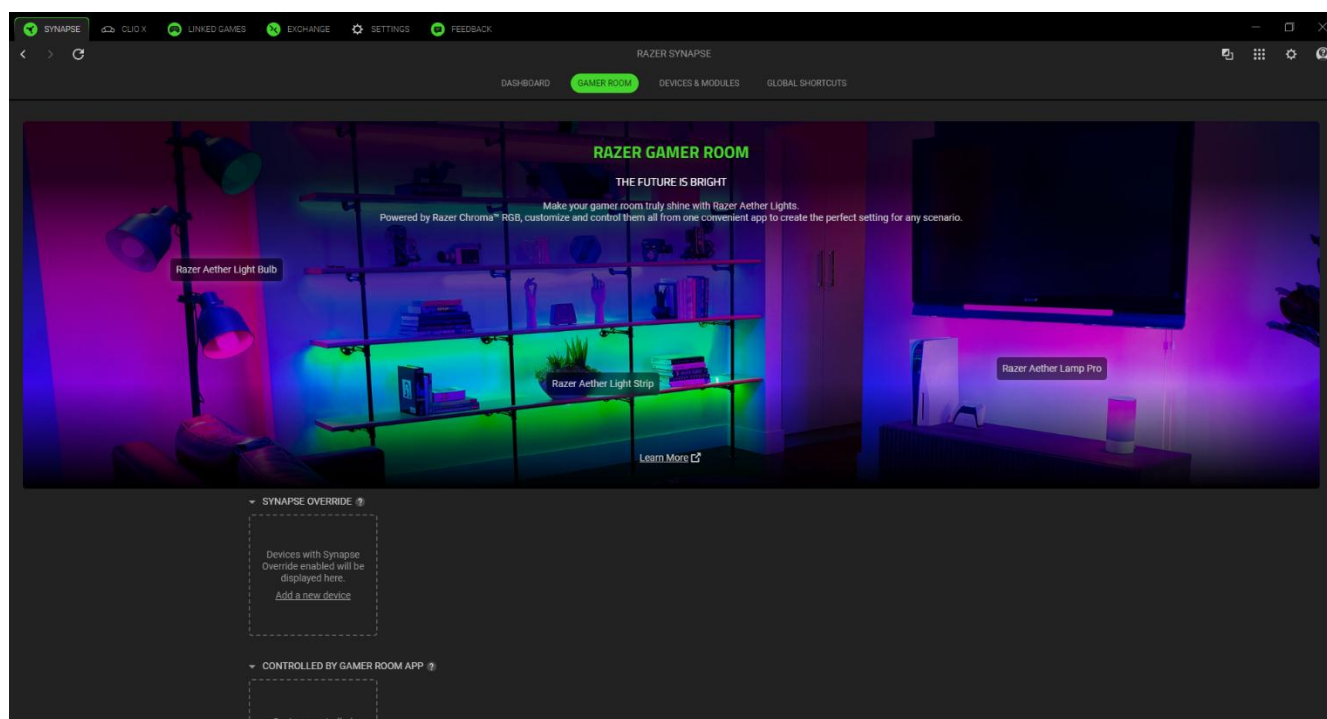

Synapse Override

 
This section allows you to select and customize your device's lighting and make it react to Chroma-enabled games and Chroma Connect apps using Razer Synapse.

Controlled By Gamer Room App

This section displays all supported devices controlled remotely by the Gamer Room app.

Devices & Modules


The Modules subtab displays all installed and available modules for installation.

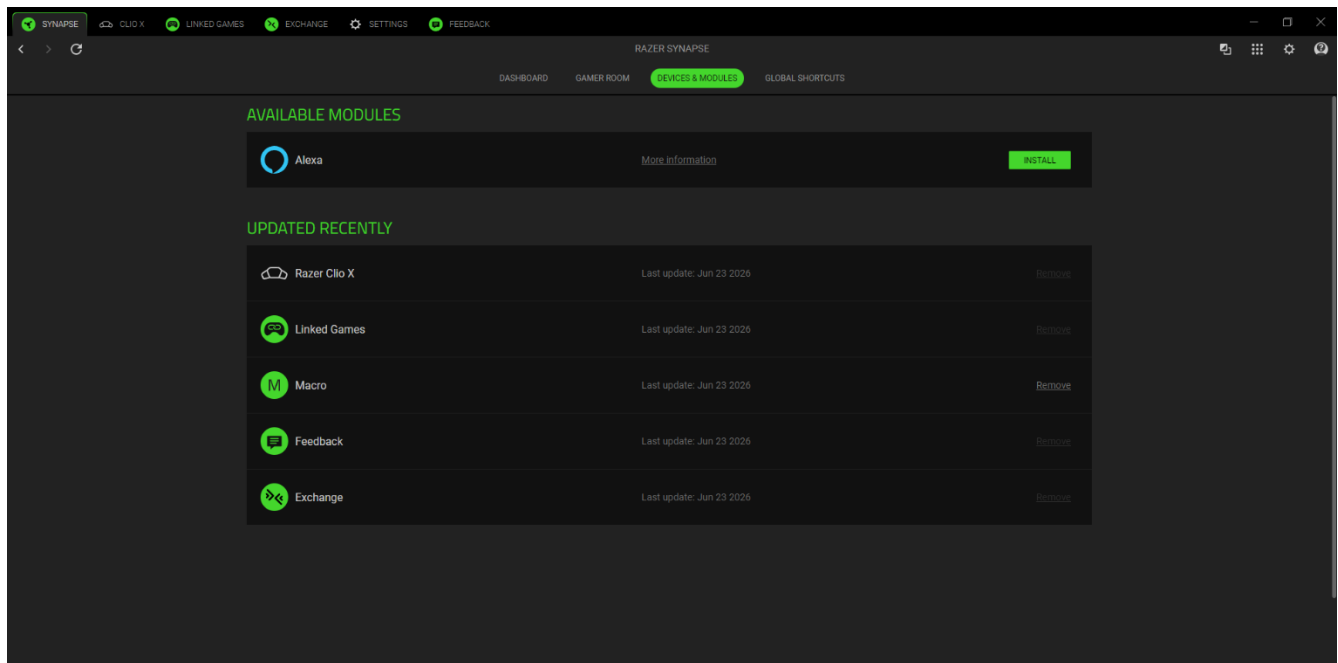

Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs, which apply across all device profiles.

  *Only Razer Synapse-enabled device inputs will be recognized.*

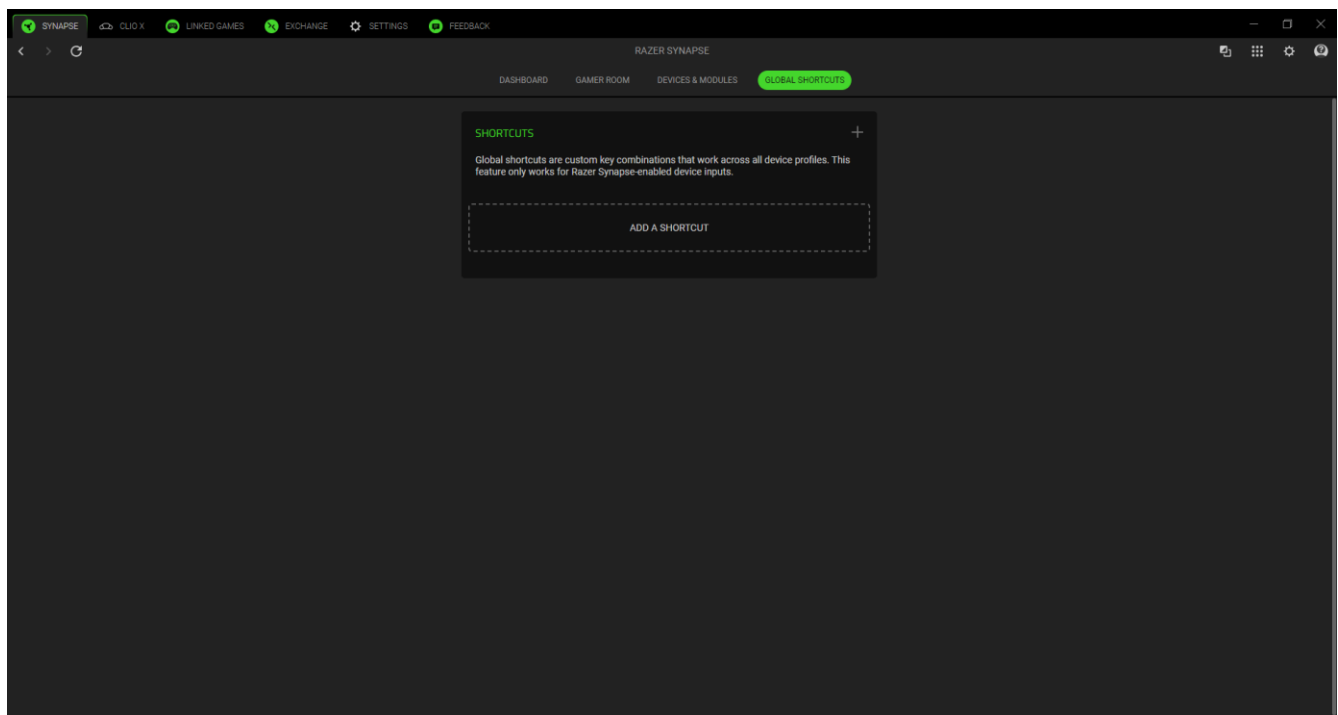

CLIO X

The CLIO X tab is the main tab for your head cushion. You can adjust your device settings from here, such as its overall volume, equalizer preferences, speaker mode, and power consumption. Any changes under this tab will be saved automatically to your local system and cloud storage. Use the following buttons below to access your profile options:

▾ Profiles Dropdown Bar

 
Clicking this dropdown bar will display all the profiles for this device so you can quickly change profiles.

... Miscellaneous

Clicking this button will open a pop-up with options related to your current profile.

Sound

The Sound subtab is for adjusting and modifying your device's audio settings.

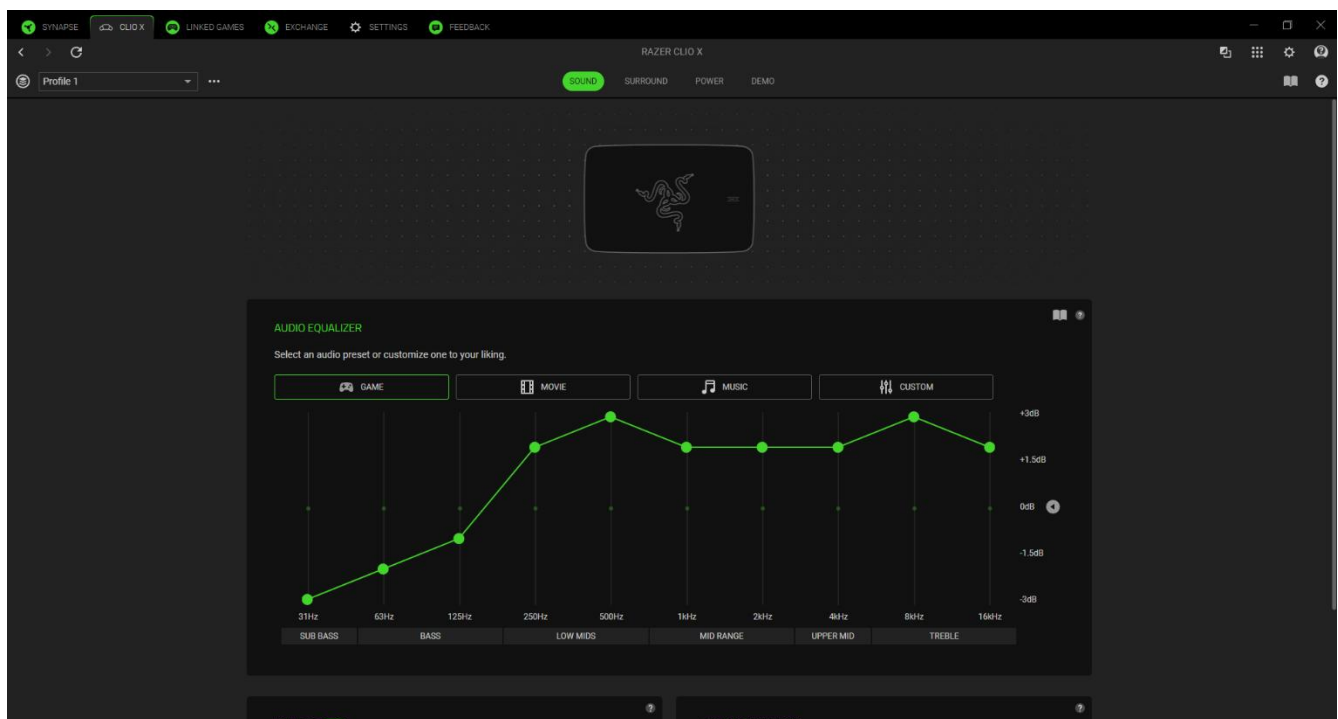

Profile

Profile is a data storage system that keeps all your Razer device's settings. By default, the profile name is based on your system's name. Clicking the dropdown bar (▾) will display all profiles for this device so you can quickly switch between them. To add, import, rename, duplicate, export, or delete a profile, press the profile's corresponding Miscellaneous button (...).

Audio equalizer

Select any available equalizer preset created for the best audio experience designed for gaming immersion, movie viewing, or enjoying your favorite music. Manually adjusting any equalizer preset will automatically set it to custom.

Volume


Adjust the audio volume of the device. You can also adjust the system's overall volume or individual application volumes using the Windows volume mixer.

Sound Properties

Launch the Windows Sound Properties window to manage system sound settings, such as playback and recording device configurations, sound schemes, and default communications activity.

Surround

Combine your Razer Clio X with additional speakers, positioning them as rear speakers for a complete surround sound setup.

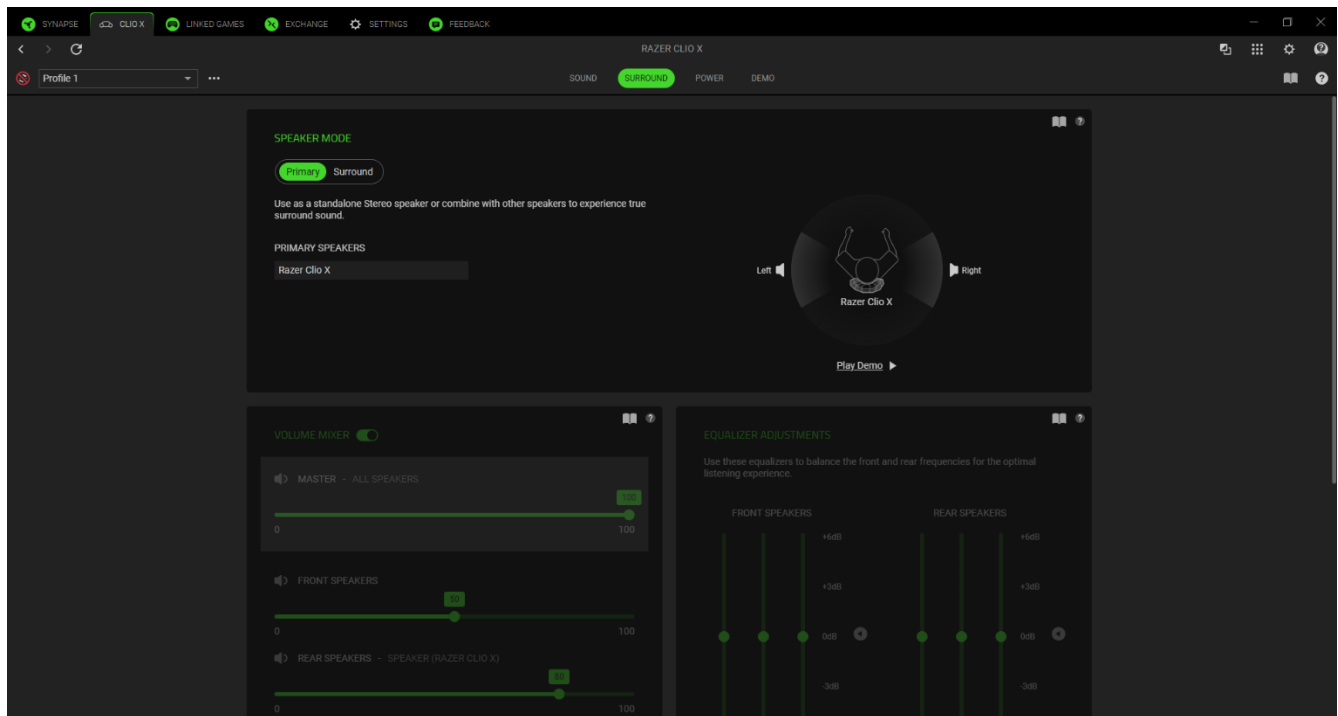

Primary

Set your Razer device as a standalone stereo speaker.

Surround

When enabled, your Razer device will seamlessly function as rear speakers, enhancing the overall audio experience with your preferred front speakers. For this mode to take effect, please select front speakers when prompted.

Volume Mixer

Adjust the overall volume of your sound system, or fine-tune the individual volumes of the front and rear speakers as needed.

Equalizer Adjustments

 
Balance the front and rear speakers' frequencies for audio clarity.

Time Alignment

Adjust the audio output delay on the front or rear speakers to achieve perfectly synchronized sound.


Power

Manage your device's energy consumption when plugged in.

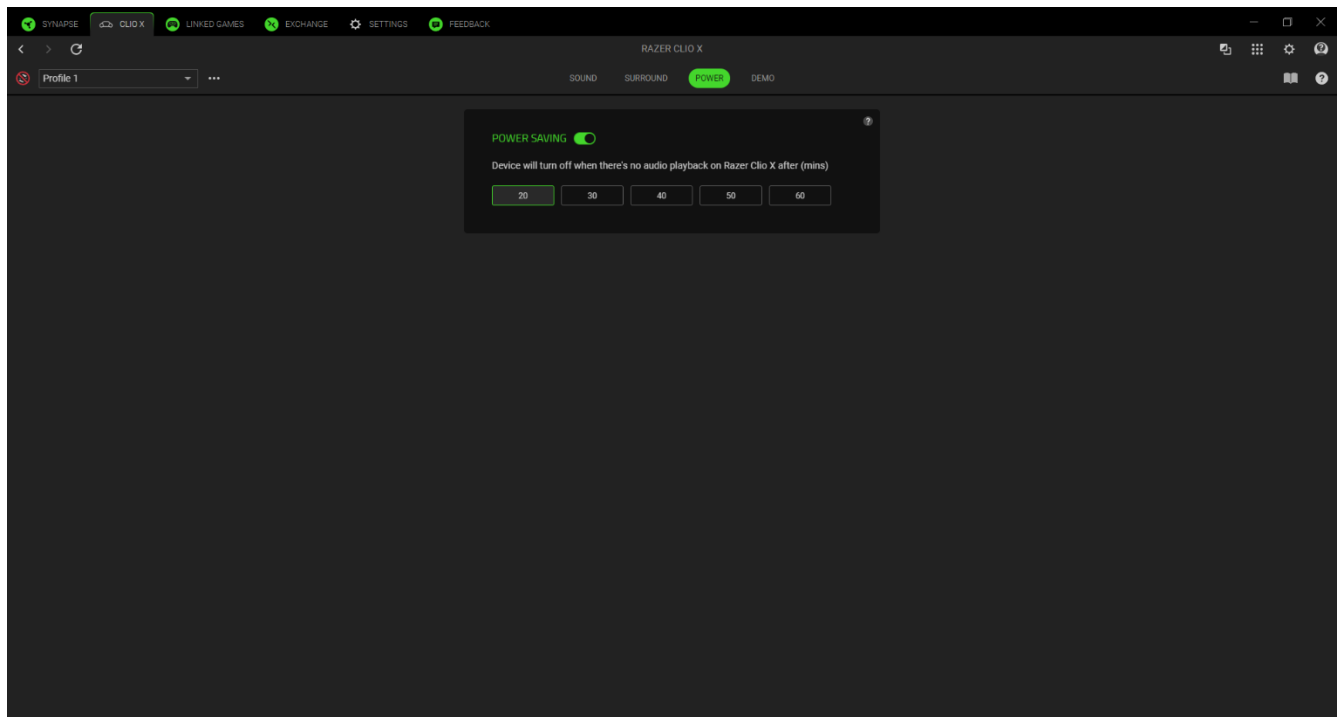

Demo

 Explore all your customizations and enhancements in the Demo subtab.

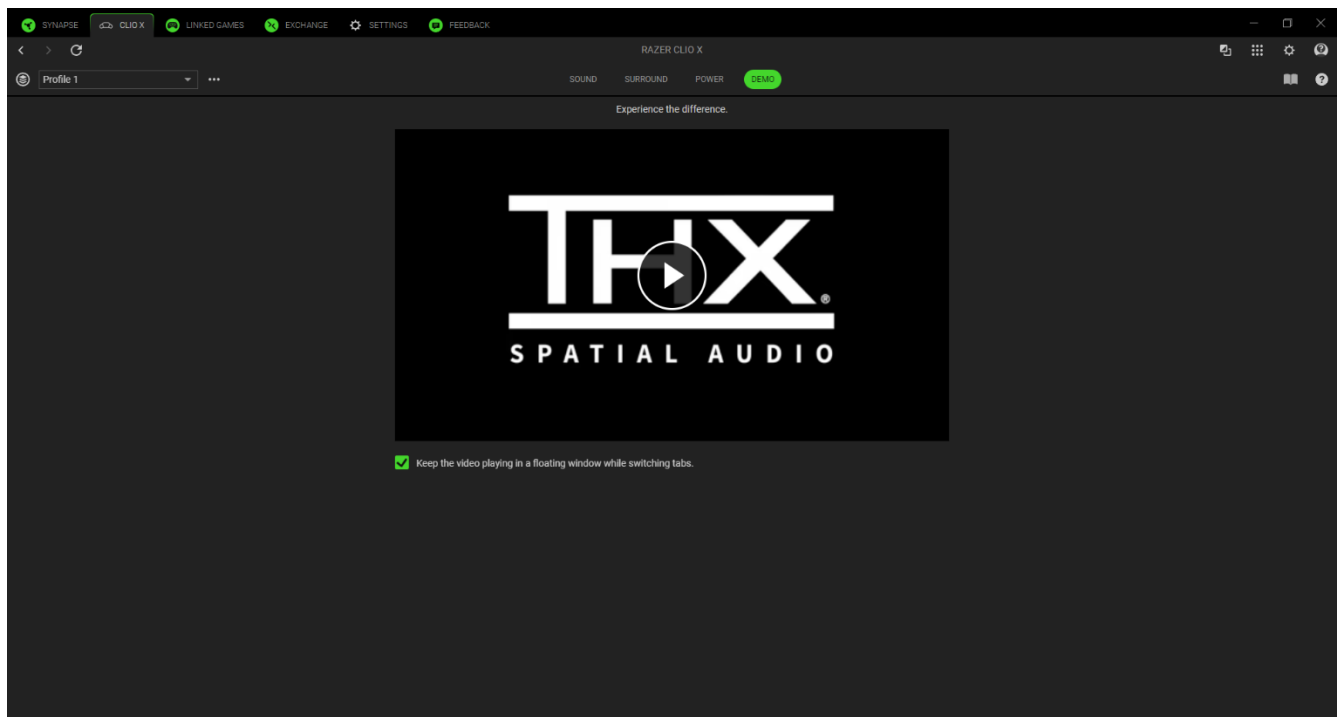


LINKED GAMES

The Linked Games tab allows you to add apps, view peripherals linked to apps, or search for listed apps.

Games

 
The Games subtab enables you to link apps to your peripherals. You can also sort apps based on alphabetical order, last played, or most played. Apps will still be listed here, even if not linked to a Razer device. To add an app that is not listed on the screen, you can use the Add button (**+**) to search for it manually or use the Scan button () to search for it automatically. Click the Search button () to look for a specific game or program from the list.

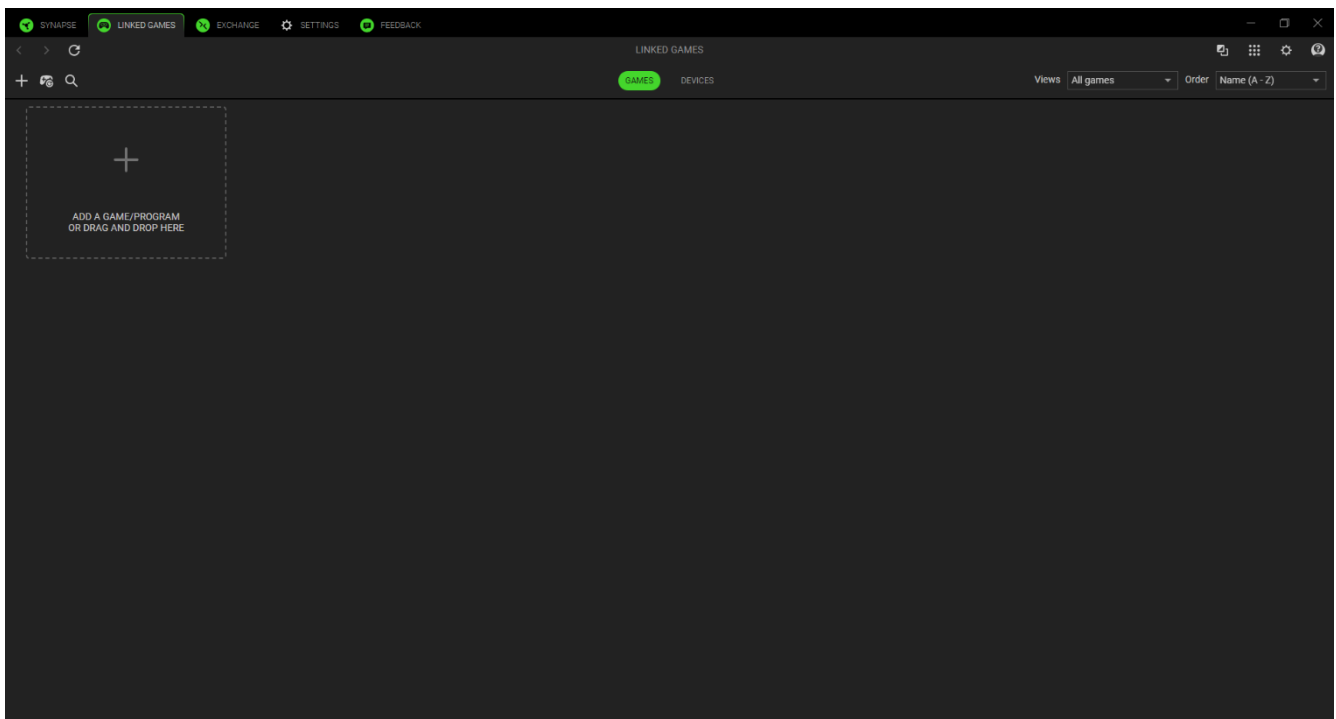

To link an app to your Razer device, click on it from the list and select a device and its profile. This will automatically set your device to the selected profile whenever you launch the app.

Devices

 The Devices subtab lets you view your peripherals and determine which apps are linked to them. By selecting a device, you can see a list of linked apps, add new apps, or remove linked apps. You can filter these apps by using the Views and Order dropdown list. To add an app not listed on your peripheral, you can drag and drop the executable file inside the box or use the Add button (+) to open the search window. While inside the search window, you can click the Refresh button (↻) to rescan installed apps, the Search button (🔍) to look for a specific game or program from the list, or the Browse link to search for the app manually.

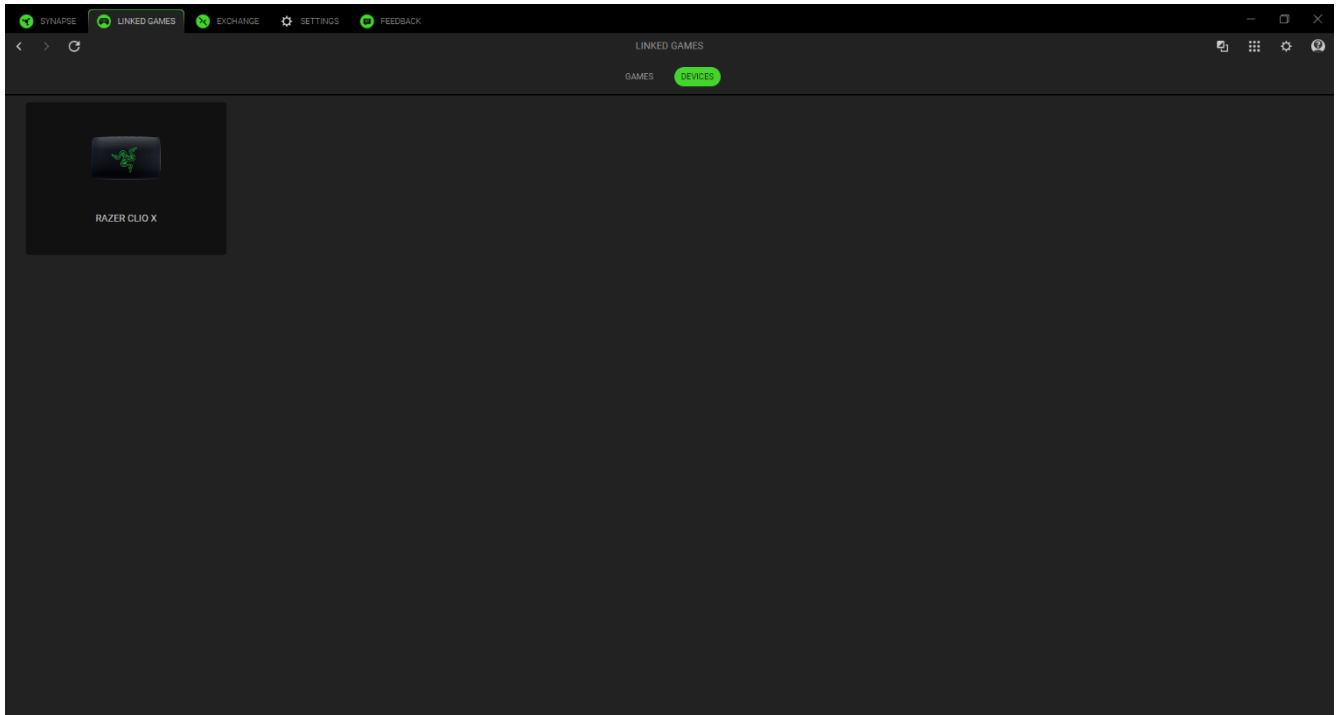


To link an app to your Razer device, click the tick box at the top left corner of the app while inside the search box. This will automatically set your device to the selected profile whenever you launch the app.

EXCHANGE

The Exchange tab is a collection of highly requested macros submitted via the Razer Workshop, as well as other contributors from the community.

Browse

 In the Browse subtab, you can view all available macros along with their brief descriptions, upload dates, number of likes, and number of downloads. Selecting a specific macro will show its specific macro commands. To find a particular macro, you can click the Search (🔍) button. Additionally, you can sort the macros by the number of likes, the number of downloads, or by the most recent uploads.

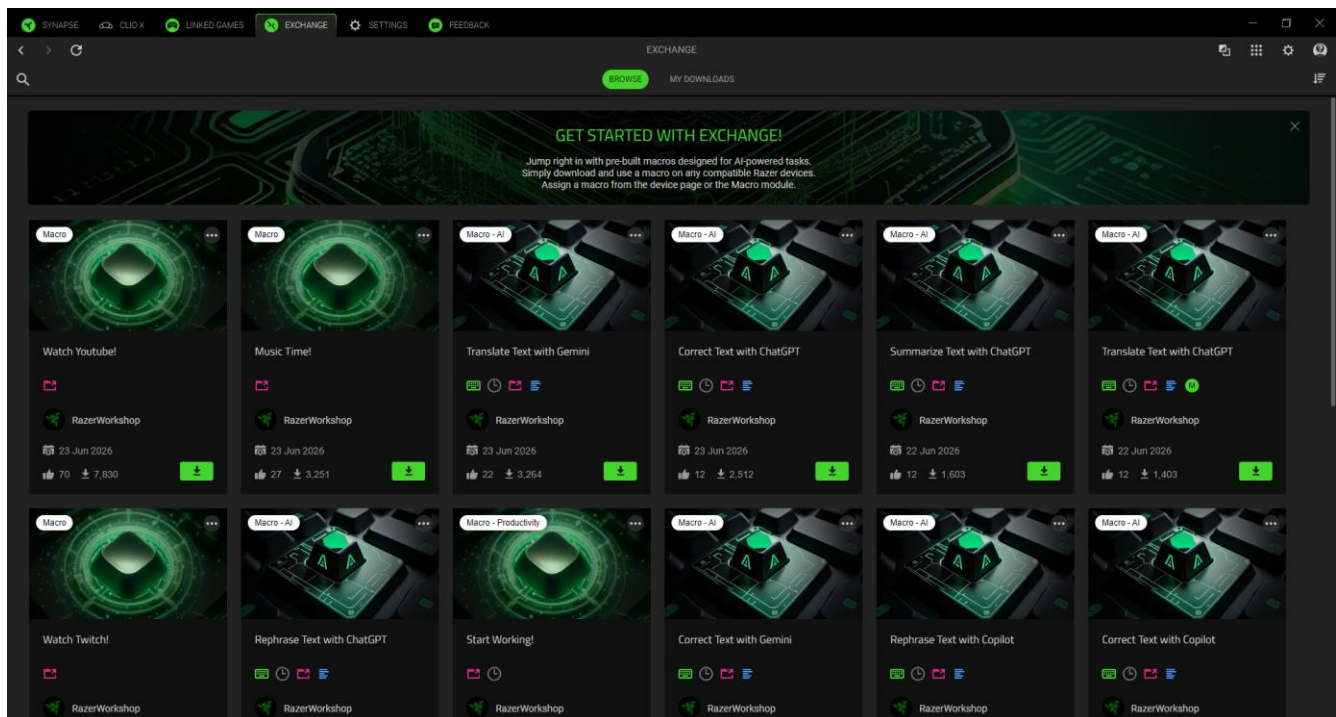

My Downloads


You can find all the macros you have downloaded on the My Downloads subtab. From here you can select the Apply button to jump straight to the Macro

SETTINGS

The Settings tab, accessible by clicking the Settings button (⚙️), enables you to configure numerous options as listed below:

Synapse

The Synapse subtab is where you can find options that are specific to the app.

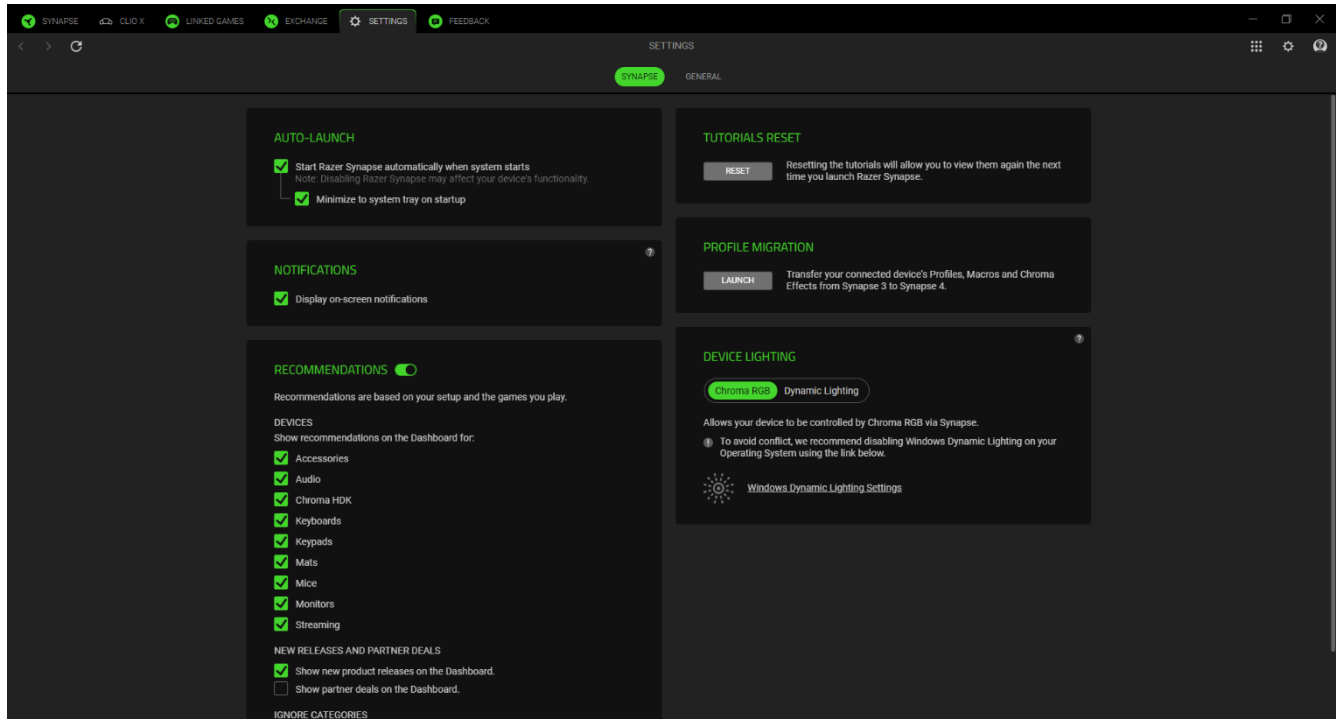

Auto Launch

The Auto Launch option allows you to configure the startup behavior the app.

Notifications

The Notifications option allows the app to display on-screen notifications even if you run full-screen apps.

Recommendations

Recommendations enable us to show the latest products and features on your Dashboard based on your installed devices and linked games.

Tutorials Reset

Selecting the Reset button will reactivate all tutorials that help you acquaint yourself with Razer Synapse's features.

Profile Migration

 
This function lets you transfer all your device's Profiles, Macros, and Chroma Effects from Synapse 3 to the new Synapse.

Device Lighting

This option lets you choose which app will control the lighting effects on your device.

General

The General subtab is the section where you can access miscellaneous options for your app, as well as find additional information about the software.

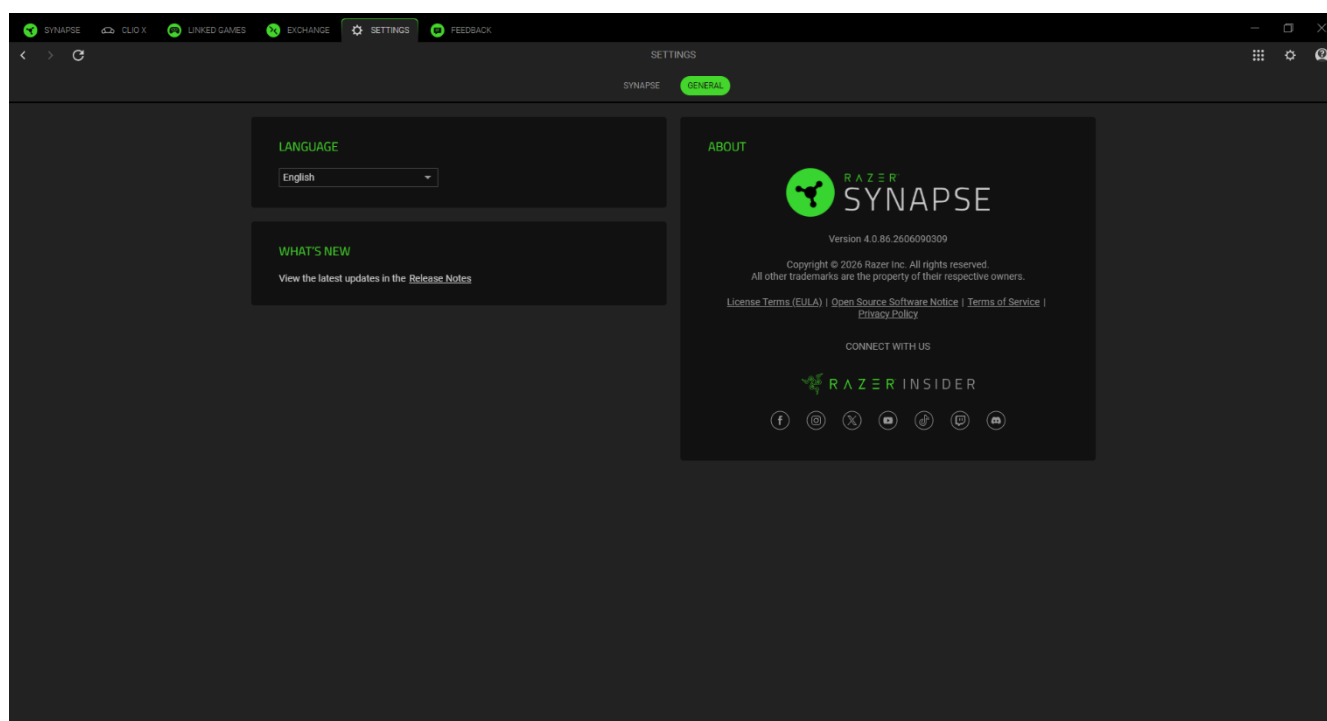

Language

This option lets you change the display language of Razer Synapse.

About

The About section shows the current software version, displays the copyright statement, and provides relevant links for Razer's terms of use. You may also use this option to access Razer's social communities quickly.

FEEDBACK

Help us improve Razer Synapse by giving your comments, suggestions, and problems with the software. You can contact us directly using this tab and even earn rewards for reporting bugs.

SYNAPSE

CLIX X

LINKED GAMES

EXCHANGE

SETTINGS

FEEDBACK

<

>

↺

Select Type

Razer Synapse

Email (Optional)

Device Name

Subject

Detail your feedback

0 / 32000

SUBMIT

Earn rewards for reporting bugs!

Join the Bug Bounty Program

7. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

To achieve maximum safety while using your Razer Clio X, we suggest that you adopt the following guidelines:

- Should you need help operating the Razer Clio X properly and troubleshooting does not work, contact the Razer hotline or go to support.razer.com for assistance.
- Don't disassemble, drop, or subject the head cushion to undue pressure. Don't operate it under abnormal current loads. Doing so will void your warranty.
- Make sure your hands and body are dry before using the head cushion
- To prevent the head cushion's color from fading and drying, avoid exposure to high heat such as a radiator or a fireplace, and keep out of direct sunlight.
- Always make sure the head cushion is strapped tightly and correctly propped up against your chair.
- Use only the recommended power bank or power adapter (20W with Power Delivery (PD 2.0)) with the head cushion.
- During use, make sure the compatible external power bank is securely placed in the designated pouch and the power cable is firmly connected.
- To prevent damaging the head cushion's surface, keep it away from sharp objects or pets with claws and teeth.
- Always unplug the head cushion from the power source before cleaning or storing it.
- Securely connect the power cable (and the extension cable, if applicable). Position the cable away from walkways and sharp edges to prevent hazards while plugged in.
- If you experience any physical discomfort while using the head cushion, please consult a qualified medical doctor immediately.
- Listening to excessively loud volumes over extended periods can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86db to affect your hearing for 8 hours a day. We, therefore, recommend that you reduce the volume to a comfortable level when listening for prolonged periods. Please take good care of your hearing.
- Use caution when operating the head cushion to avoid electrical shock or damage, such as powering it off and unplugging it when not in use and/or during thunderstorms, ensuring that your hands are dry before using (and handling) the device, keeping it away from any source of liquid and/or heat source, and using all other reasonable precautions needed under the circumstances.

MAINTENANCE

The Razer Clio X requires minimum maintenance to keep it in optimum condition. Constant exposure to friction, skin, and bodily fluids can degrade the materials over time. We recommend that you clean the head cushion once a month using a soft or microfiber cloth to prevent sweat and dirt buildup. Don't use soap, harsh cleaning agents, or abrasives to avoid damaging the head cushion.

8. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2026 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and "For Gamers. By Gamers." are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

THX and the THX Logo are the property of THX Ltd., registered in the U.S. and other countries.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Clio X (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.