



RAZER HAMMERHEAD V3 X HYPERSPEED  
FOR PLAYSTATION

MASTER GUIDE

 
# CONTENTS

1. WHAT'S INSIDE .....	7
2. WHAT'S NEEDED .....	8
3. LET'S GET YOU COVERED .....	8
4. GETTING STARTED .....	9
5. USING YOUR EARBUDS.....	13
6. CONFIGURING YOUR RAZER HAMMERHEAD V3 X HYPERSPEED .....	16
7. SAFETY AND MAINTENANCE .....	30
8. LEGALESE.....	31


---

## 1. WHAT'S INSIDE


- Razer Hammerhead V3 X HyperSpeed for Playstation  
A. Intuitive touch sensor

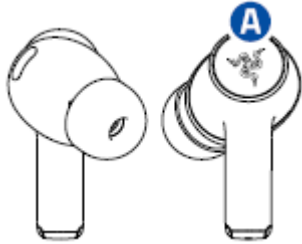

 - Charging case with integrated Razer HyperSpeed Wireless  
B. Status indicator  
C. USB Type C charge/data port  
D. Multi-function button

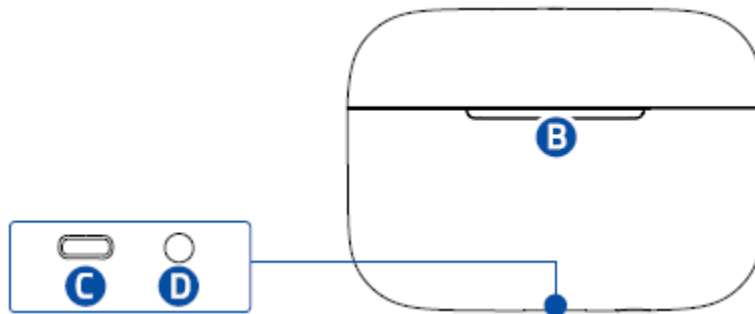

- USB Type C cable

 

- Silicon ear-tips in 3 sizes (S, M\*, L)



*\*Pre-installed with the earbuds*

- Important Product Information Guide

---

## 2. WHAT'S NEEDED

### PRODUCT REQUIREMENTS

- Devices with Bluetooth audio capability or USB Type C port

### RAZER AUDIO APP REQUIREMENTS

 
- iOS 14/Android 10 (or higher) device with Bluetooth connectivity
- Internet connection for app installation

### RAZER SYNAPSE REQUIREMENTS

- Windows 11 (or higher)
- Internet connection for app installation

---

## 3. LET'S GET YOU COVERED

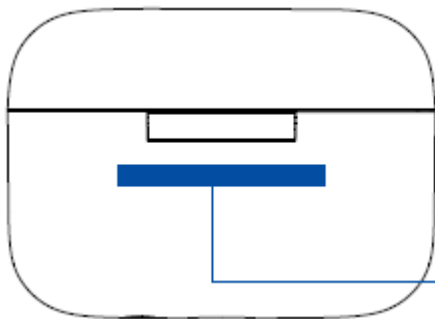

*Your product's serial number  
can be found here.*



You've got a great device — now make it even better. Register your device at [razerid.razer.com](https://razerid.razer.com) to get covered and unlock exclusive Razer benefits.




*A valid Proof of Purchase is required for any Limited Warranty Claim.*

## 4. GETTING STARTED
 
### CHARGE YOUR DEVICES

- i** Please fully charge the Razer Hammerhead V3 X HyperSpeed for Playstation before using it for the first time. For best results, connect the charging case directly to the USB port of your computer using the charging cable provided.

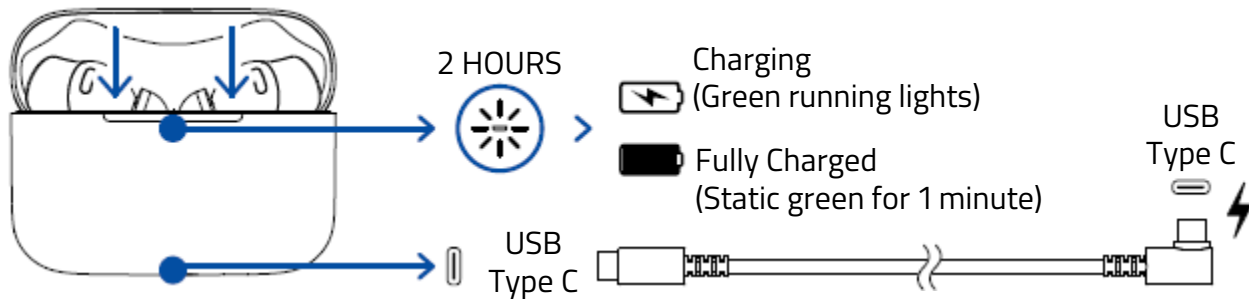


- i** Charging the earbuds using any port on the PS5™ console only works when the console is not in Rest Mode. When the case is fully charged, the status indicator will stay lit for 1 minute and then fade out.

### CONNECT TO YOUR EARBUDS

 
#### A. Via Bluetooth

1.

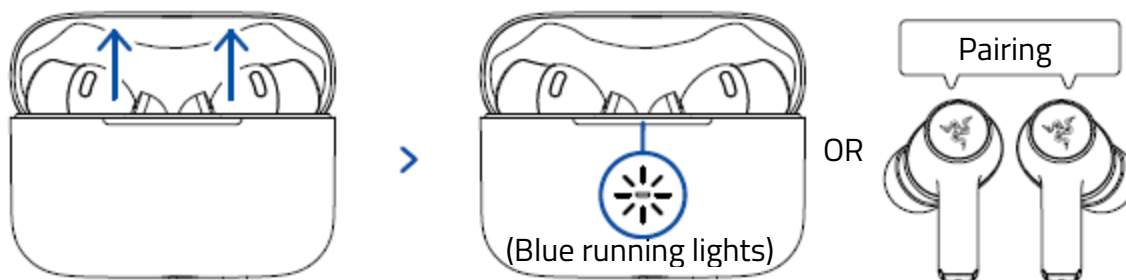

- i** When trying to connect to your Razer product, remember to keep it within 1 meter of your mobile device.

 2.

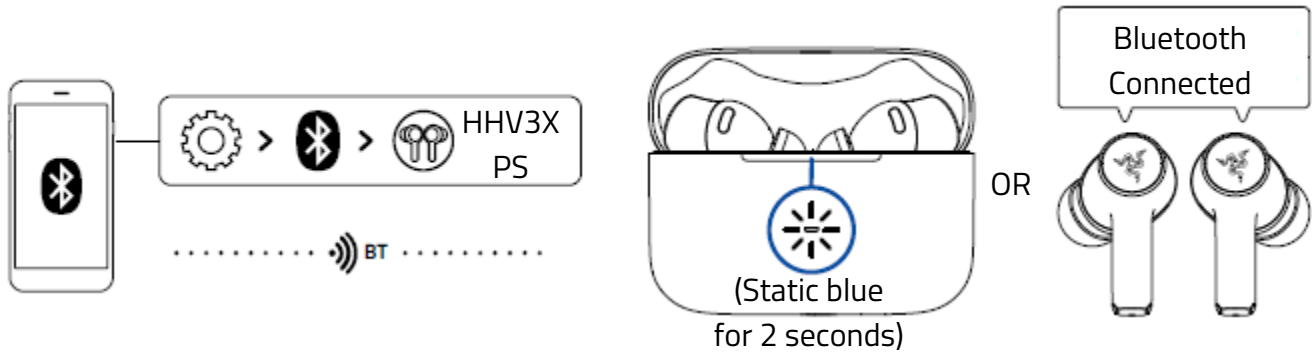

**i** If the earbuds fail to connect to your device, they will remain in search mode for three minutes before powering off. To try again, place the earbuds in the Charging case with integrated Razer HyperSpeed Wireless, keep the lid open, and press the multi-function button at the bottom for 4 seconds until the status indicator displays blue running lights.

### Set Up For Mobile

Download the Razer Audio app to customize your earbuds' EQ settings, auto shutoff feature, gaming mode, and much more — anytime, anywhere.



Razer Audio



OR



 
RZR.TO/AUDAPP  
(For China only)

1. Download the mobile app on your mobile device.
2. Launch the app and follow the onscreen instructions.

**i** When using the Razer Audio app, ensure the earbuds are connected to your mobile device via Bluetooth.

1. This headset uses 2.4GHz radio-frequency bandwidth. When PlayStation®5 and other products uses 2.4GHz radio-frequency band width also, there is a possibility that wireless interference occurs.
2. Razer validated this headset with PlayStation®5 (CFI-1000 series, CFI-2000 series and CFI-7000 series) including wireless testing and Razer has product liability of this headset.
3. As for PlayStation®5 CFI-1000 series, it is recommended to insert USB dongle of this headset to USB port on the front of PlayStation®5.

## B. Via Charging case with integrated Razer HyperSpeed Wireless

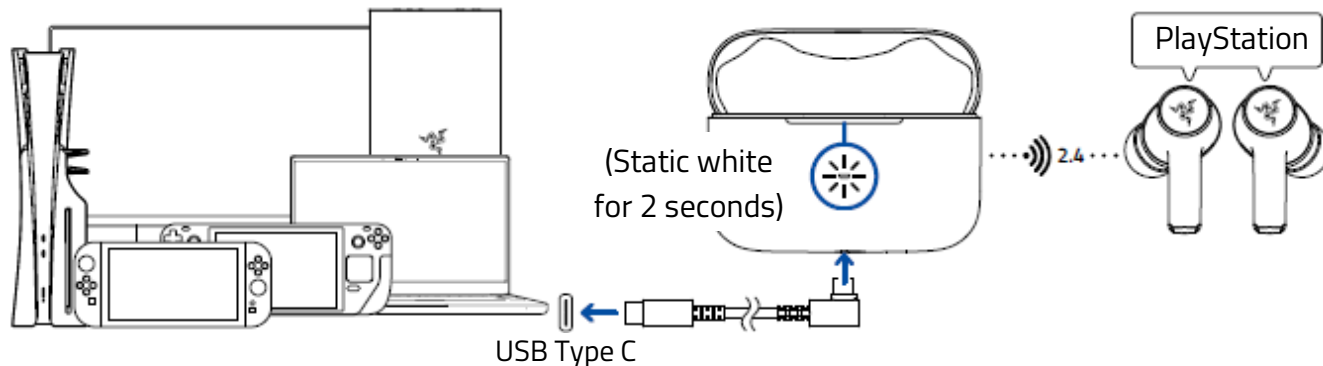

**i** By default, the earbuds will first activate Bluetooth pairing mode before searching for the Charging case with integrated Razer HyperSpeed Wireless. When plugging the Charging case with integrated Razer HyperSpeed Wireless into your PS5™ console, make sure it doesn't obstruct the console's USB Type-A port.

### On PC

<b>Sound settings</b>	Output > Razer Hammerhead V3 X HyperSpeed for PlayStation
	Input > Razer Hammerhead V3 X HyperSpeed for PlayStation

### On PS5™ consoles

<b>PS5 Settings &gt; Sound</b>	Audio Output > Output device > Razer Hammerhead V3 X HyperSpeed for PlayStation
	Microphone > Input device > Razer Hammerhead V3 X HyperSpeed for PlayStation

**i** When using the earbuds with compatible devices, set the Razer Hammerhead V3 X HyperSpeed as the default input and output device (if applicable).

### Personalize your PC experience

Use the Razer Synapse app to customize your earbuds' EQ, enable audio enhancements, and fine-tune other advanced features. Install Razer Synapse when prompted, or download the installer from [razer.com/synapse](https://razer.com/synapse)

Activate THX® Spatial Audio+\*

 
Unleash the full potential of your Razer Hammerhead V3 X HyperSpeed by enabling 360° positional audio for a natural and lifelike experience through Razer Synapse.



*\*Only available on Windows 11 and above.*


## 5. USING YOUR EARBUDS

### SWITCH BETWEEN AUDIO SOURCES

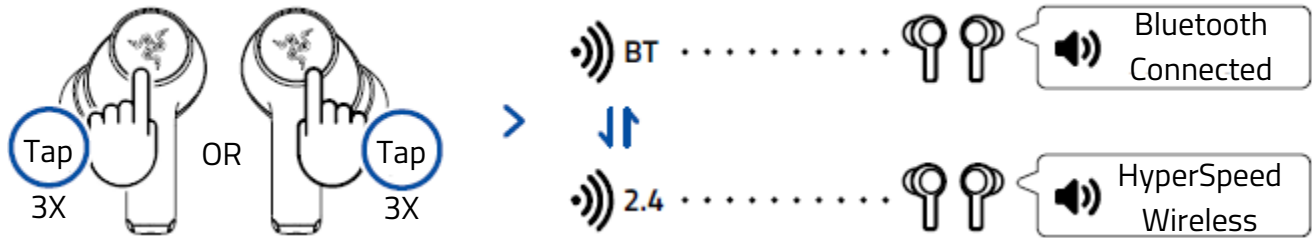

**i** For best performance, keep your earbuds within a very close distance of each audio source.


### REPLACING THE SILICONE EAR-TIPS

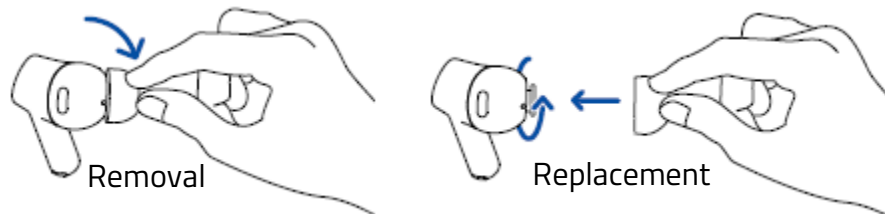 


**i** Due to individuals' different ear canal sizes, it's recommended to interchange the ear-tips to a larger or smaller size to improve comfort and sound quality and achieve a proper seal.

### CHECKING THE BATTERY LEVELS
 
#### CHARGING CASE BATTERY LEVEL

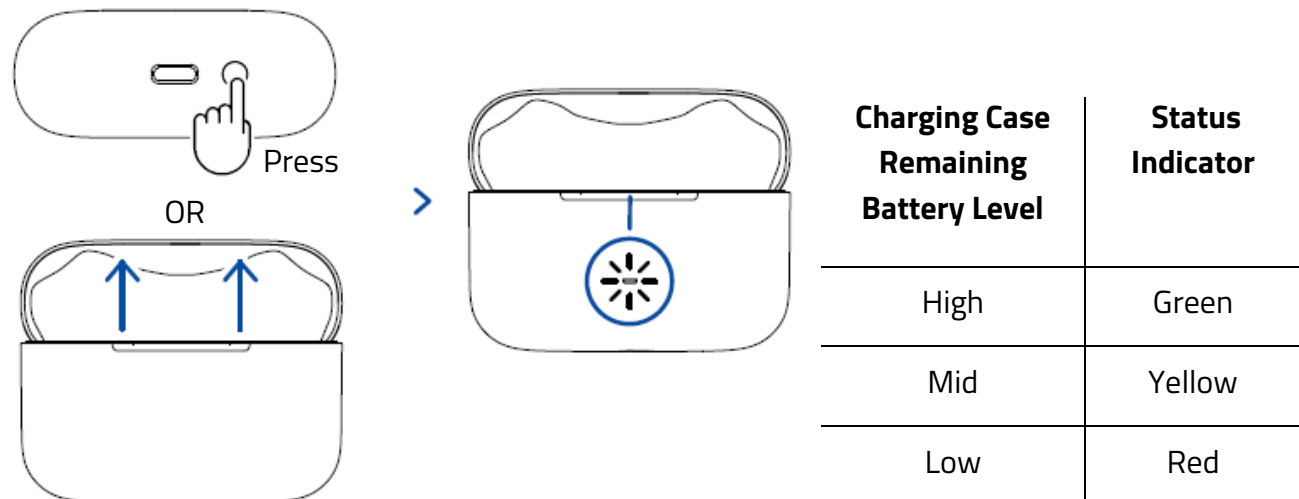

## EARBUDS BATTERY LEVEL

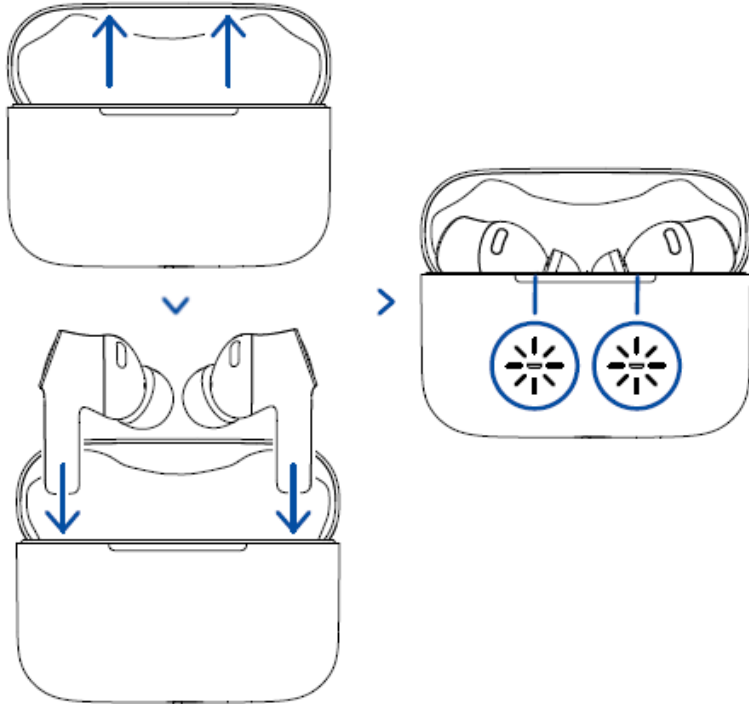 

Earbuds Remaining Battery Level	Individual Status Indicator
High	Green
Mid	Yellow
Low	Red

## FUNCTION BUTTON QUICK REFERENCE

The default gestures for the earbuds are listed below:

Action	Effect
Tap	Play/pause when playing media
	Accept incoming call or end current call**
	Keep current call and reject incoming call**
	End current call and switch to call on hold**
Tap and hold for 2 seconds	Power on the corresponding earbud
	Mute/unmute earbud microphone
	Accept incoming call**
Double tap	Return to previous track when playing media (left earbud)
	Skip to the next track when playing media (right earbud)
	Reject incoming call**

	End current call**
	Put current call on hold and answer incoming call**
	Switch between current call and call on hold**
Double-tap, then hold the last tap for 2 seconds	Decrease volume (left earbud)
	Increase volume (right earbud)
Triple tap	Switch between wireless modes
Triple tap, then hold the last tap for 3 seconds	Reinitiate Bluetooth pairing mode

The following gesture is available for the Charging case with integrated Razer HyperSpeed Wireless.

Action	Effect
Tap and hold the Multi-function button for 4 seconds	Reinitiate Bluetooth pairing mode***
Triple tap, then hold the last tap for 2 seconds	Perform a factory reset


*\*\*Only available in Bluetooth mode*

*\*\*\*With the lid open and the earbuds inside*

Find out more about your gaming-grade earbuds at [support.razer.com](https://support.razer.com)

---

## 6. CONFIGURING YOUR RAZER HAMMERHEAD V3 X HYPERSPEED

 *Disclaimer: This guide provides an overview of the New Razer Synapse app and may only partially cover some of the features of your device. The New Razer Synapse requires an Internet connection to install, update, access, and save cloud-based features. Registering for a Razer ID account is recommended but optional. All features listed here are subject to change based on the current version, connected device(s), and supported add-ons.*

### SYNAPSE

The Synapse tab is your default tab when you first launch Razer Synapse. Use the following buttons below to navigate the user interface:

– Minimize

Clicking this button will minimize the app to the taskbar while it runs in the background.

▢ Maximize

This button expands the browser window to fill the entire screen. To restore the window to its original size, click the maximize button again.

× Close

This button will close all relevant tabs and terminate the application completely.

< Previous Tab

Clicking this button will return you to the last tab you have visited.

> Next Tab

Clicking this button will move you to the next page if you've recently used the Previous Tab button.

↻ Refresh Tab

This button reloads the current page. Use this if a page isn't displaying correctly or you want to see the latest content.

↓ Download Update

If this button appears, that means there are changes to the app. Use this if a page isn't displaying correctly or you want to see the latest content.

## More

Clicking this button will open a pop-up so you can easily access your Devices, Modules, and Other Installed Apps tabs.

## Settings

Clicking this button will open the Settings tab, so you can quickly change the settings to this app.

## Profile

 
This button will open a pop-up to access the Log In, Feedback, Rate This Software, Add WiFi Device, and Exit options.

## Info

Hovering over this button will pop up an additional information about a feature or function.


## Dashboard

The Dashboard subtab is an overview of your Razer Synapse, where you can access all your Razer devices, modules, and online services.

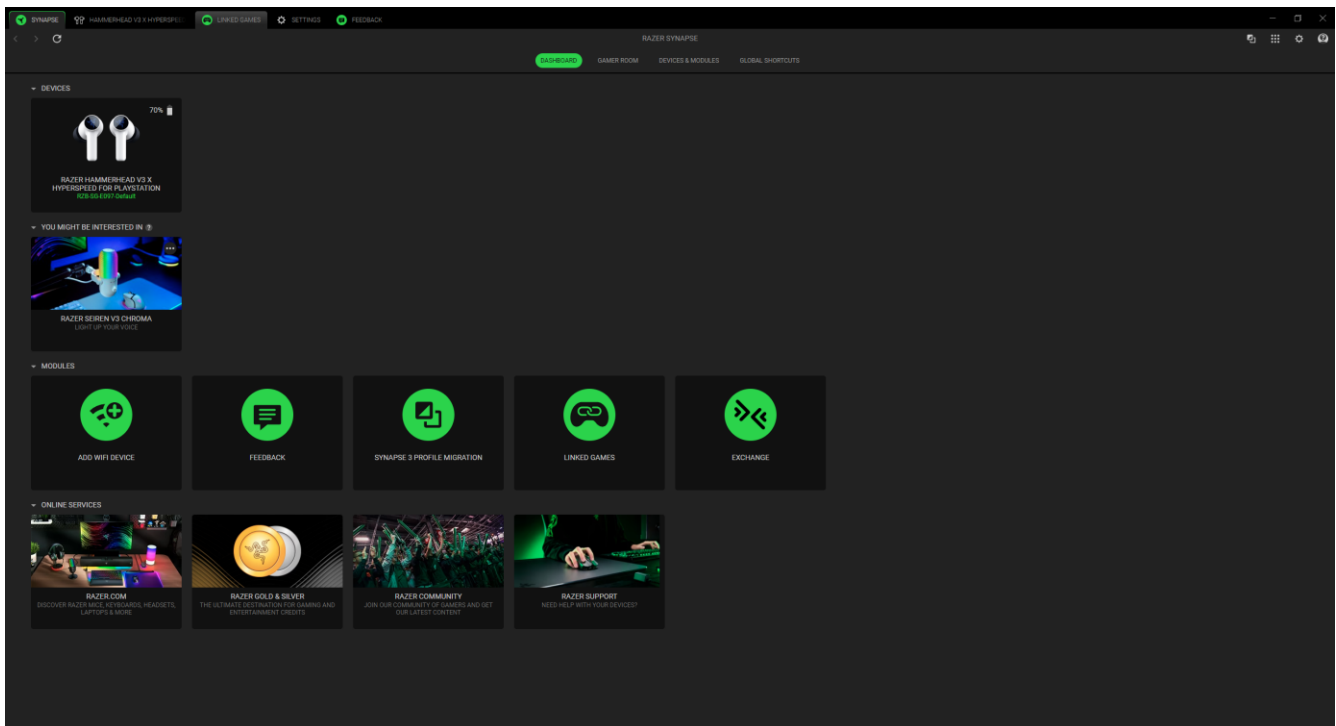

## Gamer Room

 The Gamer Room subtab shows all devices with the Razer Aether Light feature. From here, you can view and manage your Gamer Room-supported devices.

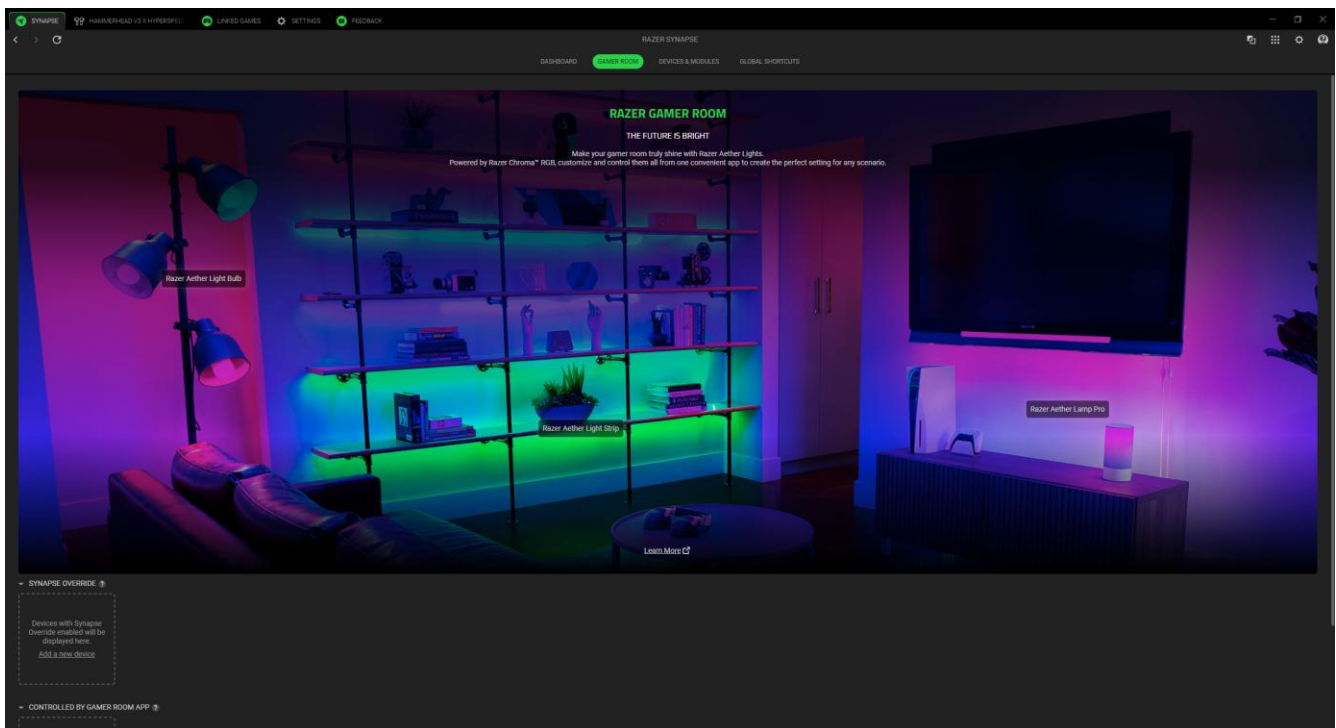

### *Synapse Override*

 
This section allows you to select and customize your device's lighting and make it react to Chroma-enabled games and Chroma Connect apps using Razer Synapse.

### *Controlled By Gamer Room App*

This section displays all supported devices controlled remotely by the Gamer Room app.

## Devices & Modules


The Modules subtab displays all installed and available modules for installation.

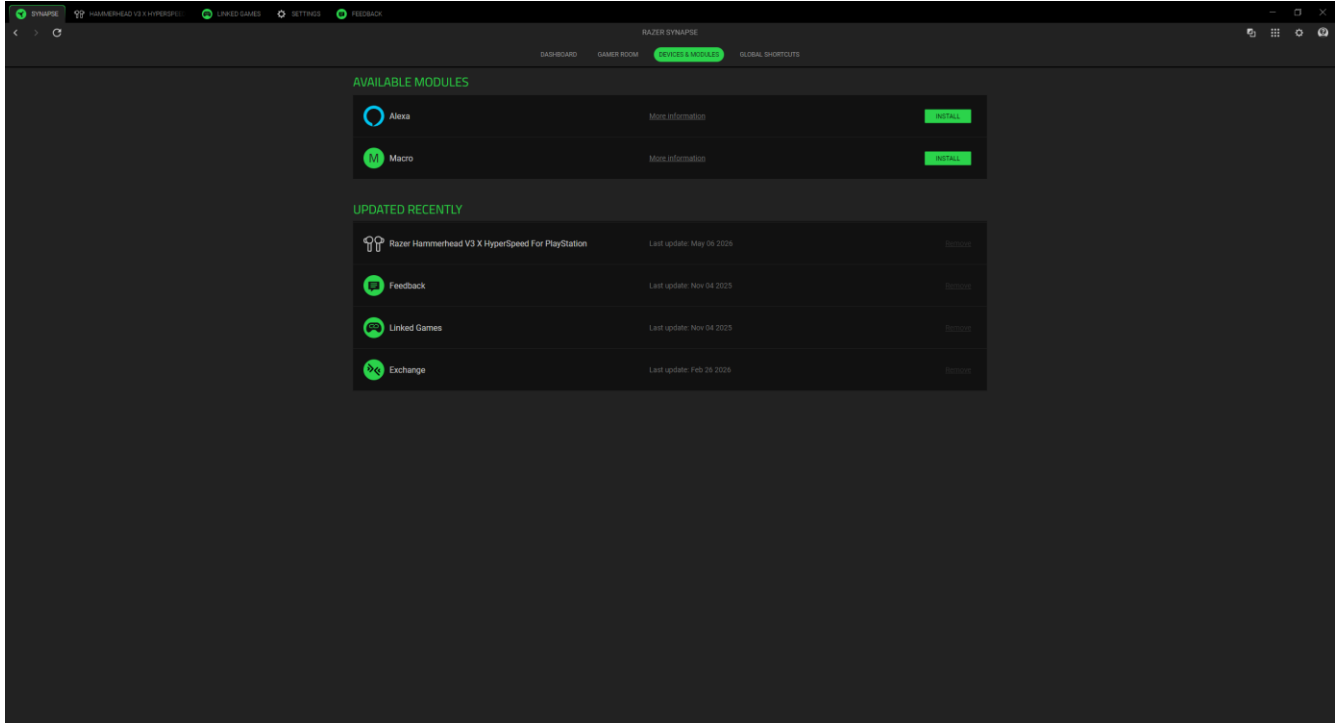

## Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs, which apply across all device profiles.

 **i** *Only Razer Synapse-enabled device inputs will be recognized.*

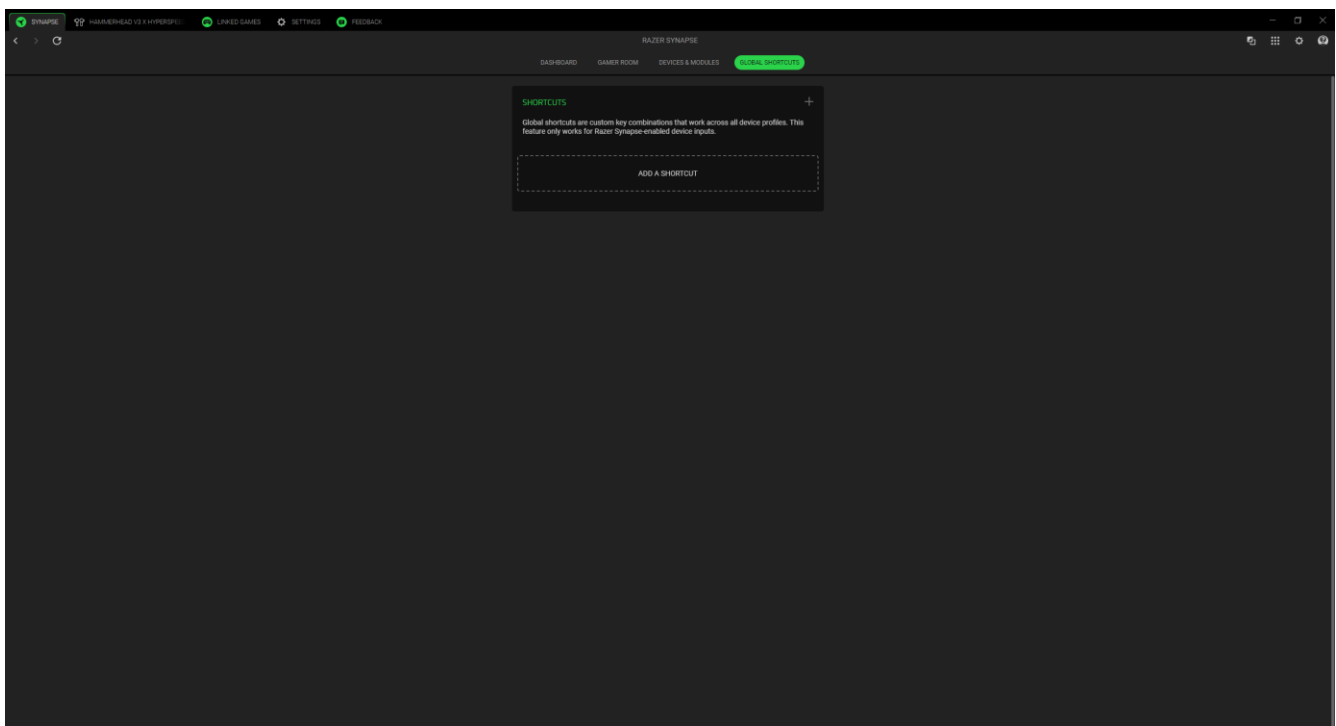

## HAMMERHEAD V3 HYPERSPEED

The Hammerhead V3 X HyperSpeed tab is the main tab for your Razer earbuds. You can change your device settings from here, such as lighting (if supported), setting and customizing EQ profiles, and adjusting the overall system volume or individual volume of all active applications. Any changes under this tab will be saved automatically to your local system and cloud storage. Use the following buttons below to access your profile options:

▾ Profiles Dropdown Bar

 
Clicking this dropdown bar will display all the profiles for this device so you can quickly change profiles.

⋮ Miscellaneous

Clicking this button will open a pop-up with options related to your current profile.

### Sound

The Sound subtab is for adjusting and modifying your device's audio settings.

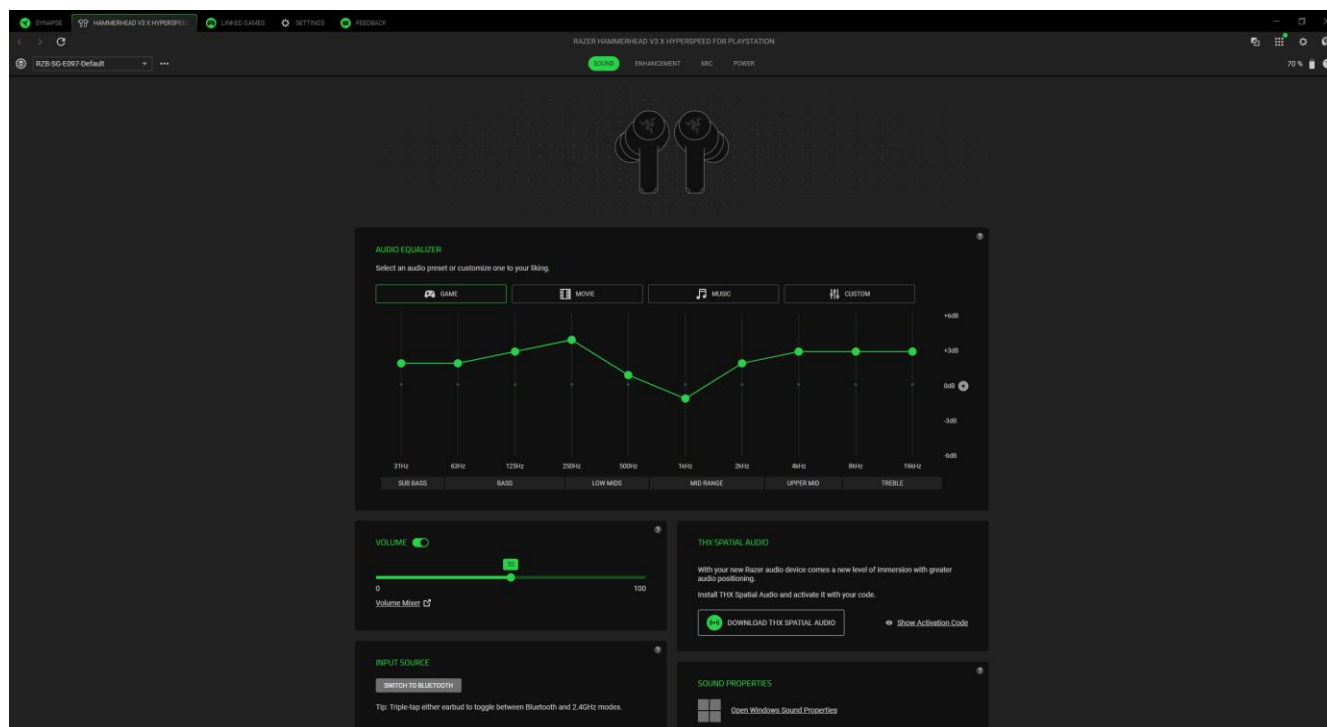

### Profile

Profile is a data storage system that keeps all your Razer device settings. By default, the profile name is based on your system's name. Clicking the dropdown bar (▾) will display all profiles for this device so you can quickly switch between them. To add, import, rename, duplicate, export, or delete a profile, press the profile's corresponding Miscellaneous button (⋮).

### *Audio equalizer*

Select any available equalizer preset created for the best audio experience designed for gaming immersion, movie viewing, or enjoying your favorite music. Manually adjusting any equalizer preset will automatically set it to Custom.

### *Volume*

Adjust the audio volume of the device. You can also adjust the system's overall volume or individual application volumes using the Windows volume mixer.

### *THX Spatial Audio*

The following functions are only available for devices that come with THX Spatial Audio: [Learn which devices include 7.1 Surround Sound](#)

### *Input Source*

 
Select the audio source for your earbuds. If it is set to Bluetooth, you cannot configure this device in Synapse.

### *Sound Properties*

Launch the Windows Sound Properties window to manage system sound settings, such as playback and recording device configurations, sound schemes, and default communications activity.

## Enhancement

The Enhancement subtab is for customizing your audio system's incoming audio settings and frequency response.

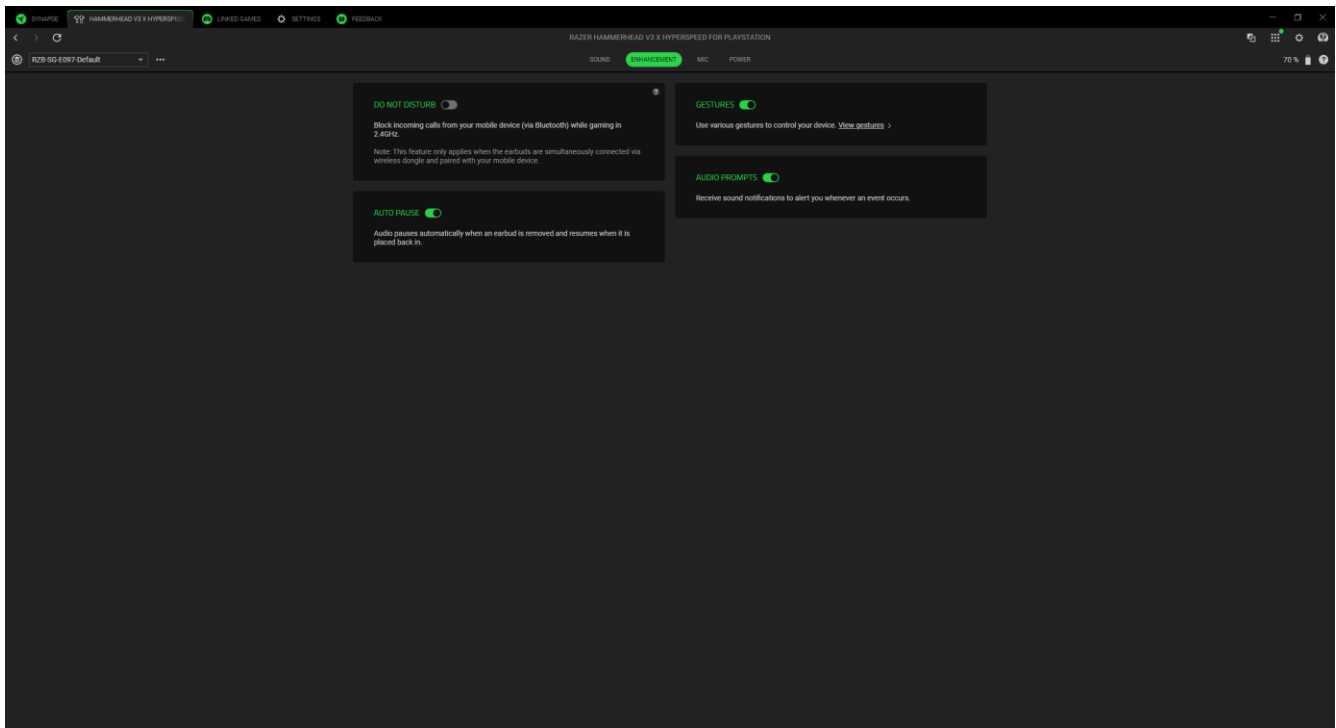

### *Do Not Disturb*

Block calls from your mobile device (via Bluetooth) while connected to the wireless dongle. This feature only works when the headset is connected to the wireless dongle and a mobile device simultaneously.

### *Auto Pause*

Toggle on to automatically pause audio when an earbud is removed and resume when it is placed back in.

### *Audio Prompts*

 
Enable/disable sound notifications to alert you whenever an event occurs.

### *Gestures*

Toggle the switch to enable various gestures for controlling your earbuds.

## Mic

The Mic subtab enables you to change all outgoing mic audio settings.

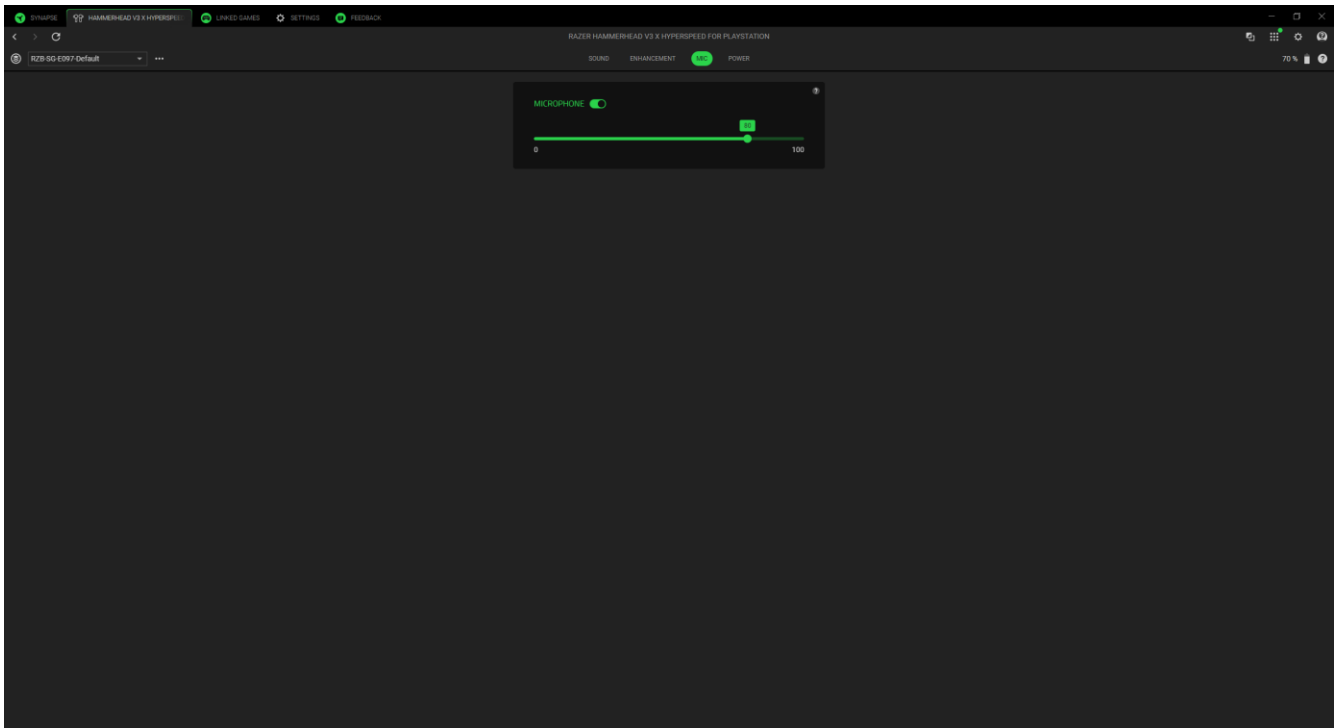


### *Microphone*

Adjust the microphone volume or disable it by using the toggle. You can also activate the **Mic Preview** to test the microphone's input audio intensity.

## Power

 For wireless devices, the Power subtab allows you to manage your device's energy consumption when running on batteries.

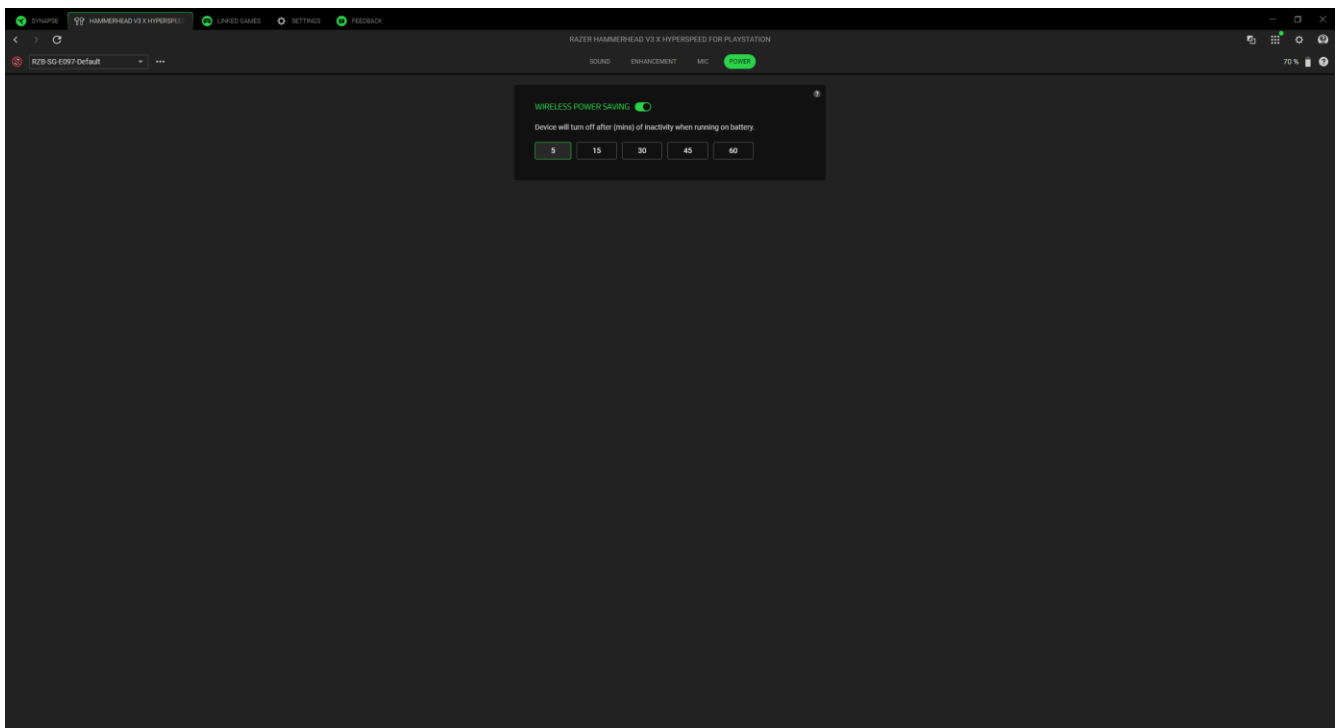

### *Wireless Power Saving*

 
Set the device to power off when it has been idle for a certain amount of time.

## LINKED GAMES

The Linked Games tab allows you to add apps, view peripherals linked to apps, or search for listed apps.

### Games


The Games subtab enables you to link apps to your peripherals. You can also sort apps based on alphabetical order, last played, or most played. Apps will still be listed here, even if not linked to a Razer device. To add an app that is not listed on the screen, you can use the Add button (+) to search for it manually or use the Scan button (📶) to search for it automatically. Click the Search button (🔍) to look for a specific game or program from the list.

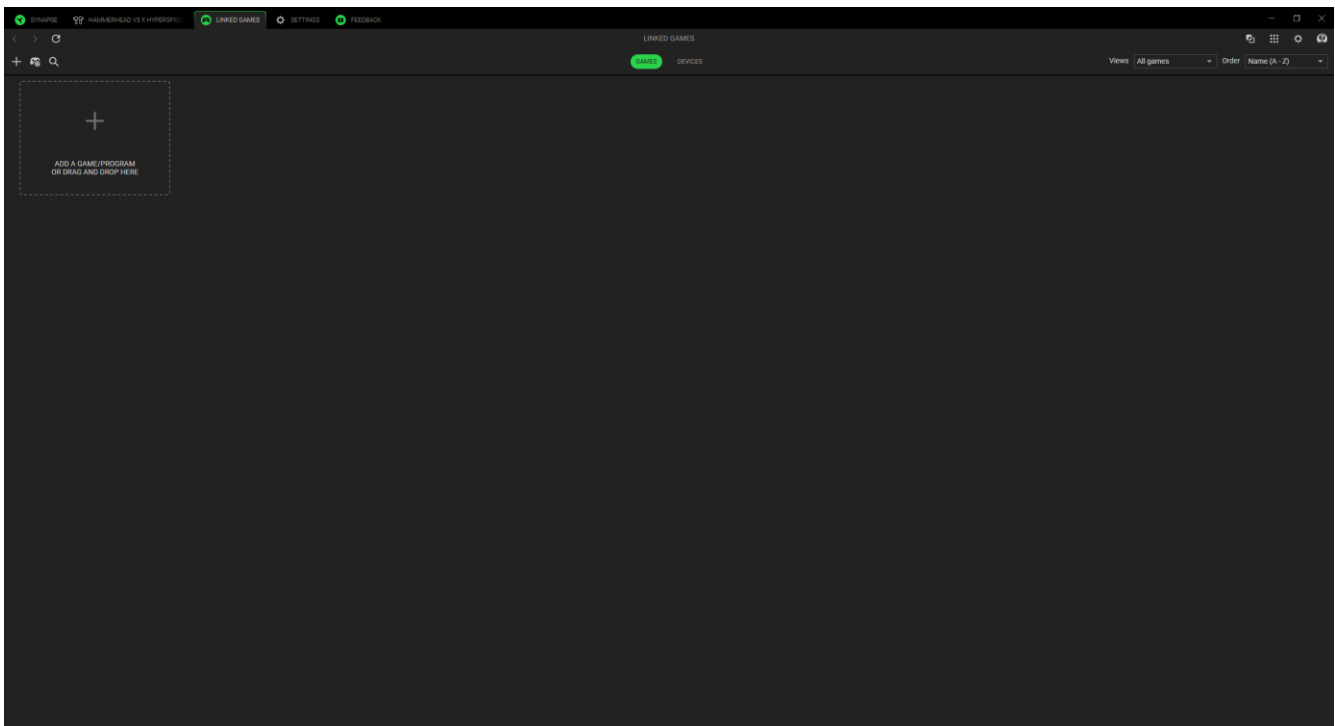

To link an app to your Razer device, click on it from the list and select a device and its profile. This will automatically set your device to the selected profile whenever you launch the app.

## Devices

 The Devices subtab lets you view your peripherals and determine which apps are linked to them. By selecting a device, you can see a list of linked apps, add new apps, or remove linked apps. You can filter these apps by using the Views and Order dropdown list. To add an app not listed on your peripheral, you can drag and drop the executable file inside the box or use the Add button (+) to open the search window. While inside the search window, you can click the Refresh button (↻) to rescan installed apps, the Search button (🔍) to look for a specific game or program from the list, or the Browse link to search for the app manually.

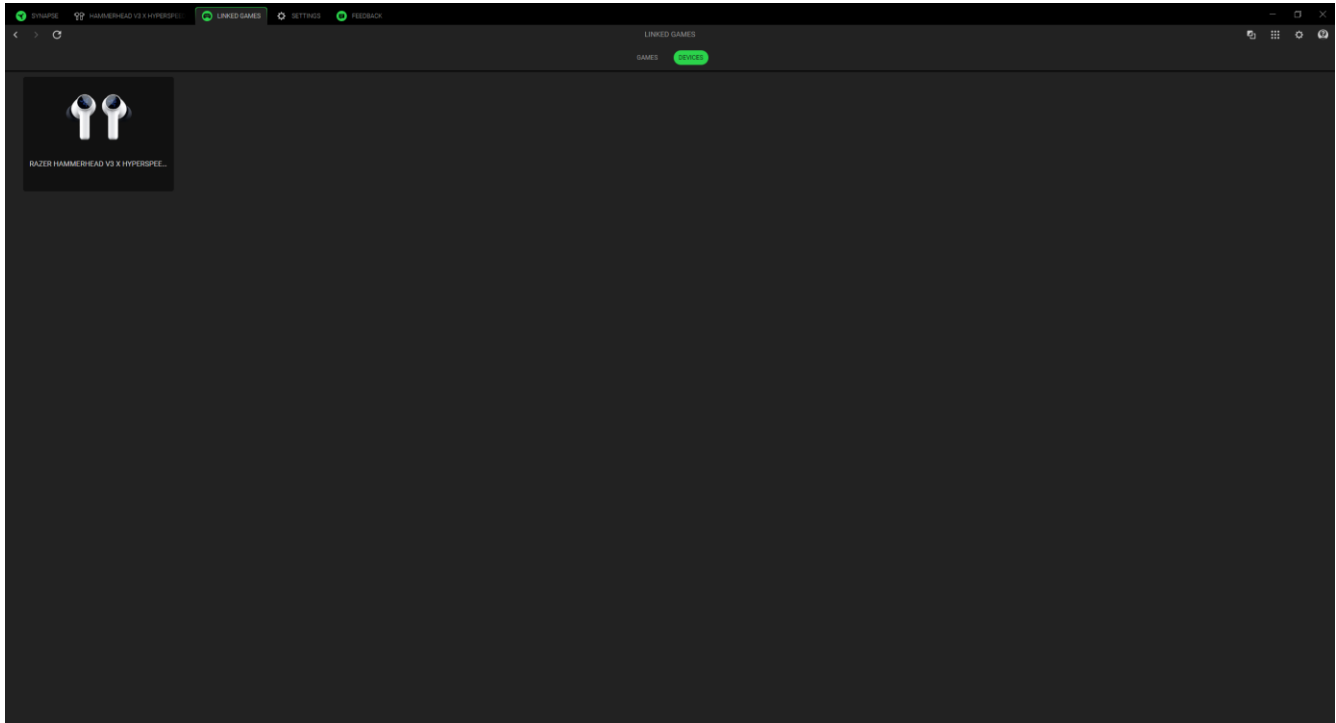


To link an app to your Razer device, click the tick box at the top left corner of the app while inside the search box. This will automatically set your device to the selected profile whenever you launch the app.

## SETTINGS

 The Settings tab, accessible by clicking the ( ⚙ ) button, enables you to configure numerous options as listed below:

### Synapse

The Synapse subtab is where you can find options that are specific to the app.

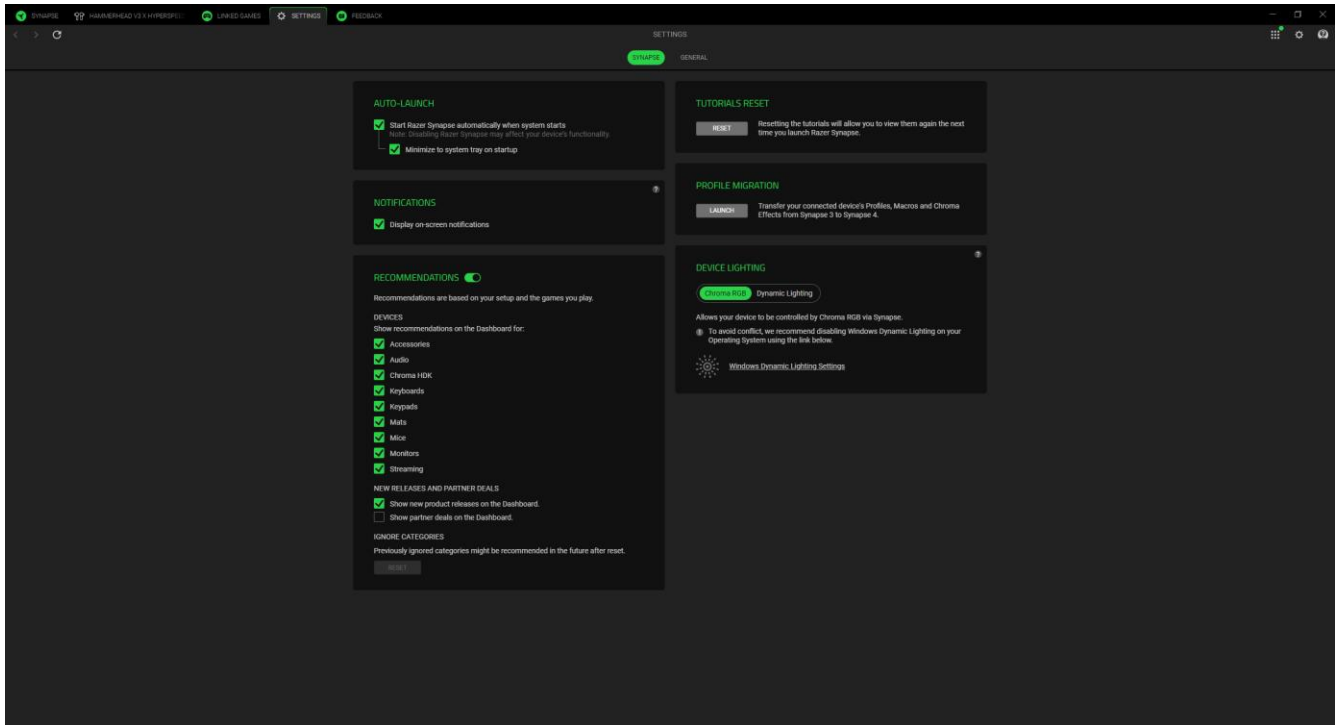

### Auto Launch

The Auto Launch option enables you to configure the app's startup behavior.

### Notifications

The Notifications option allows the app to display on-screen notifications even if you run full-screen apps.

### Recommendations

Recommendations enable us to show the latest products and features on your Dashboard based on your installed devices and linked games.

### Tutorials Reset

Selecting the Reset button will reactivate all tutorials that help you acquaint yourself with Razer Synapse's features.

### Profile Migration

 
This function lets you transfer all your device's Profiles, Macros, and Chroma Effects from Synapse 3 to the new Synapse.

## Device Lighting

This option lets you choose which app will control the lighting effects on your device.

## General

The General subtab is the section where you can access miscellaneous options for your app, as well as find additional information about the software.

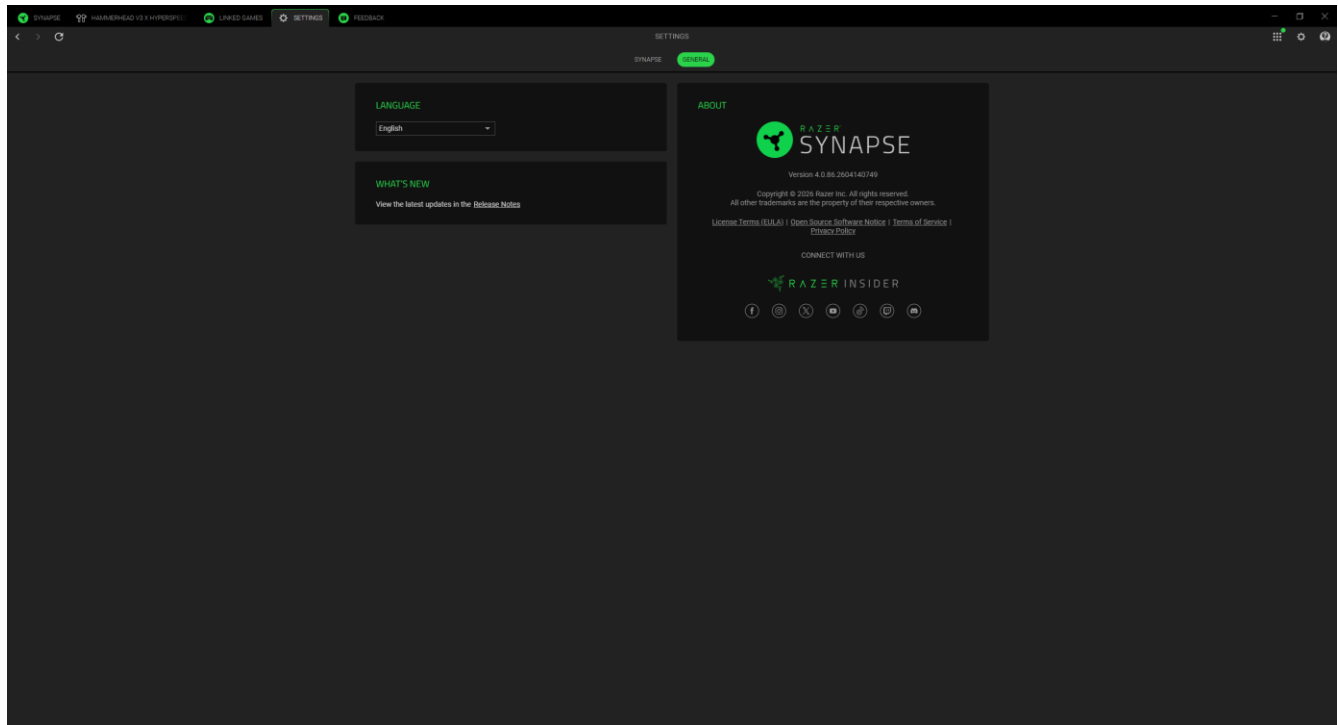

## Language

 
This option lets you change the display language of Razer Synapse.

## About

The About section shows the current software version, displays the copyright statement, and provides relevant links for Razer's terms of use. You may also use this option to access Razer's social communities quickly.

## FEEDBACK

Help us improve Razer Synapse by giving your comments, suggestions, and problems with the software. You can contact us directly using this tab and even earn rewards for reporting bugs.

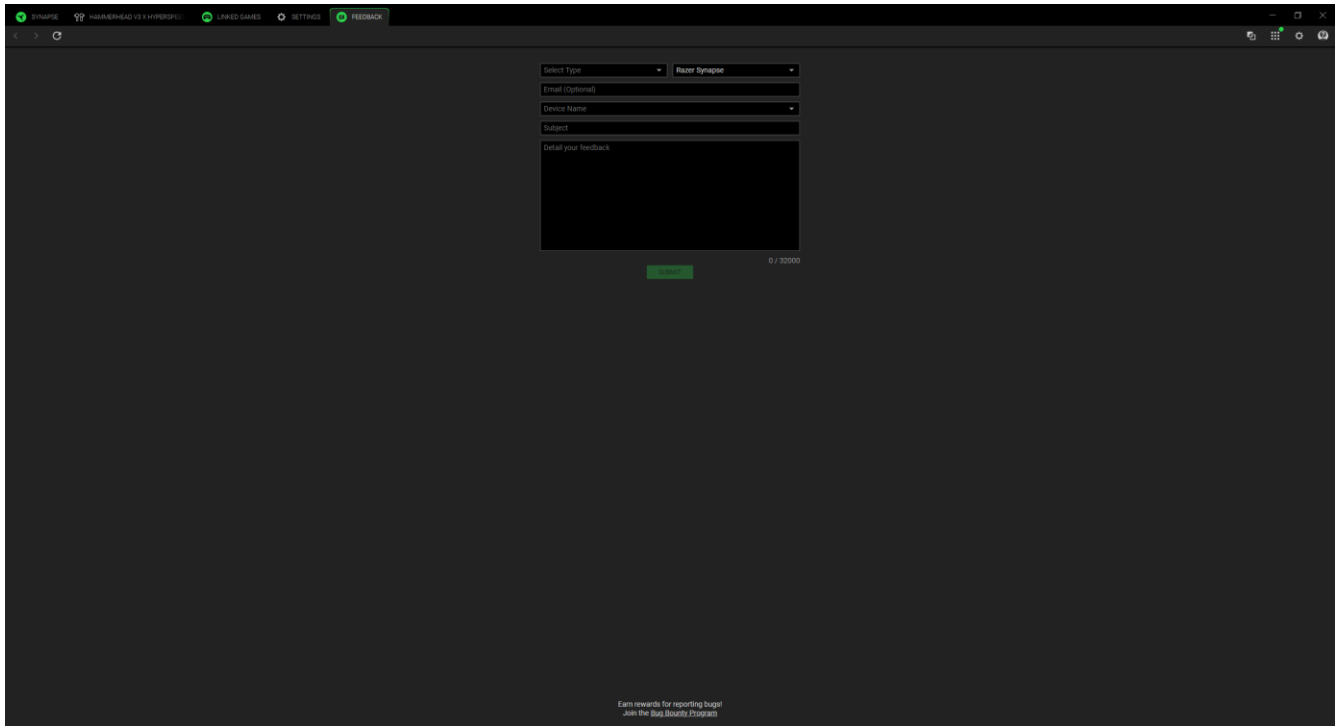

The screenshot shows the Razer Synapse Feedback form interface. At the top, there are navigation tabs: SYNAPSE, HALL OF FAME, LINKED GAMES, SETTINGS, and FEEDBACK. The FEEDBACK tab is active. The form includes a dropdown menu for 'Select Type' with 'Razer Synapse' selected. Below this are input fields for 'Email (Optional)', 'Device Name', and 'Subject'. A large text area is labeled 'Detail your feedback'. A green 'Submit' button is located at the bottom right of the form, next to a character count '0 / 50000'. At the bottom center of the page, there is a small text prompt: 'Earn rewards for reporting bugs! Join the Bug Bounty Program'.

---

## 7. SAFETY AND MAINTENANCE

### SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer earbuds, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to [support.razer.com](https://support.razer.com) for assistance.

Don't take apart the device, and don't attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the device away from liquid, humidity, or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device to stabilize the temperature to an optimal level.

We recommend stretching your Razer earbuds gently apart before placing them over your head to minimize headband stress. However, please avoid overstretching the earbuds beyond its technical limits.

The device isolates external ambient sounds even at low volumes, resulting in lowered awareness of your external surroundings. Please remove the device when engaging in activities requiring active awareness of your surroundings.

Listening to excessively loud volumes over extended periods can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86db to affect your hearing for 8 hours a day. We, therefore, recommend that you reduce the volume to a comfortable level when listening for prolonged periods. Please, take good care of your hearing.

### MAINTENANCE AND USE

Your Razer earbuds require minimal maintenance to keep them in optimum condition. Once a month, we recommend you clean the device using a soft cloth or cotton swab to prevent dirt buildup. Don't use soap or harsh cleaning agents.

---

## 8. LEGALESE

### **COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION**

©2026 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and “For Gamers. By Gamers.” are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

Android, Google, Google Logo, Google Play, and the Google Play logo are trademarks of Google LLC.

Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Razer is under license.

Windows and the Windows logo are trademarks or registered trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent, or other intellectual property right. Your Razer Hammerhead V3 X HyperSpeed (the “Product”) may differ from pictures, whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

### **LIMITED PRODUCT WARRANTY**

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://razer.com/warranty).

### **LIMITATION OF LIABILITY**

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential, or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

### **GENERAL**

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in

so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.