



RAZER WIRELESS CHARGING PUCK


MASTER GUIDE

CONTENTS

1. WHAT'S INSIDE	2
2. WHAT'S NEEDED	2
3. LET'S GET YOU COVERED	2
4. SETTING UP YOUR RAZER WIRELESS CHARGING PUCK	3
5. SAFETY AND MAINTENANCE	4
6. LEGALESE	5

1. WHAT'S INSIDE

- Razer Wireless Charging Puck

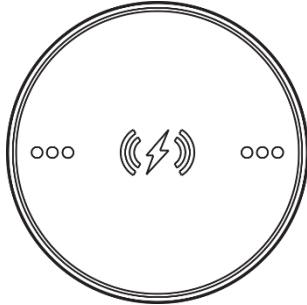

- Important Product Information Guide

2. WHAT'S NEEDED

- Compatible Razer wireless charging-enabled mice*

*For an updated list of compatible Razer mice, visit support.razer.com

 
3. LET'S GET YOU COVERED



Register your product and score exclusive benefits


razerid.razer.com/warranty

*Your product's
serial number can
be found here.*

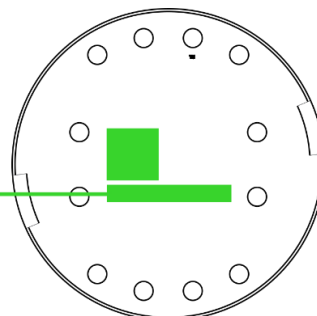


4. SETTING UP YOUR RAZER WIRELESS CHARGING PUCK

 
1. Unlock the cover puck.

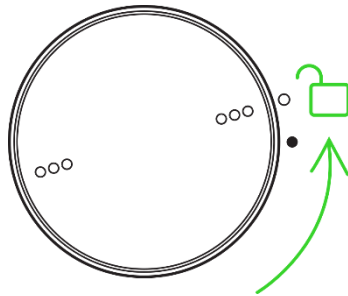

 2. Replace the cover puck with the wireless charging puck.

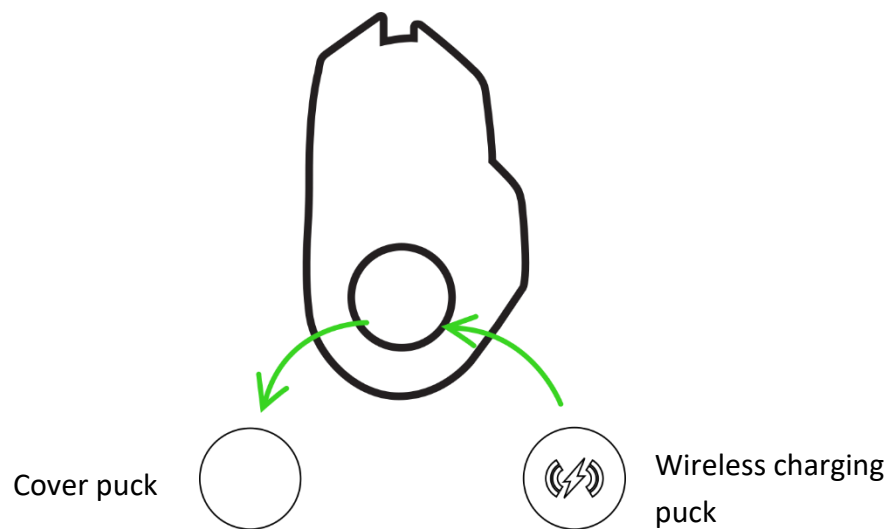

 3. Lock the wireless charging puck.

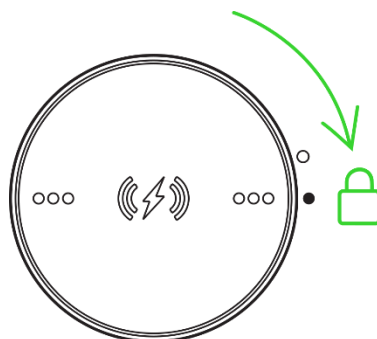

5. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

To achieve maximum safety while using your Razer Wireless Charging Puck, we suggest that you adopt the following guidelines:

- Should you have trouble operating the accessory properly and troubleshooting does not work, detach the accessory and contact the Razer hotline or go to support.razer.com for support.
- Don't take apart the accessory and don't attempt to operate it under abnormal current loads. Doing so will void your warranty.
- Don't use or place the accessory near water, moisture, or other wet surfaces.
- Don't use or place the accessory near any heat, naked flame, or other hot surfaces such as radiators, stoves, fireplaces, and candles.
- The accessory should only be used with compatible Razer wireless charging-enabled mice. Razer shall not be responsible for any damages incurred to any device when using the wireless charging puck.
- Keep the accessory away from liquid, humidity, or moisture. Operate the accessory only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, detach the accessory in order to let the temperature stabilize to an optimal level.

6. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2025 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.”, and “Razer Chroma” logo are trademarks or registered trademarks of Razer Inc. or affiliated companies in the United States and other countries. All other trademarks are the property of their respective owners.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Wireless Charging Puck (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.