



RAZER BLADE STEALTH – RAZER CORE
WIN 10 ANNIVERSARY UPDATE PROCEDURE

RAZER BLADE WITH CORE WIN 10 UPDATE, VERSION 1607 GUIDE

WHEN USING THE RAZER CORE PLEASE FOLLOW THE STEPS BELOW TO UPDATE YOUR RAZER STEALTH TO THE LATEST WIN 10 ANNIVERSARY EDITION

1. Unplug the Razer Core by pulling out the Thunderbolt3 cable from the Blade system.
2. Go to Settings-> Update and Security-> Windows update to check for any new Win 10 Updates.
3. Win 10 will download the latest Win 10 update, version 1607 once its available.



4. Once the update is downloaded and installed, windows will ask to schedule a restart. **BEFORE** you restart insure your Razer Core is not connected.

Windows Update

Updates are available.

- Feature update to Windows 10, version 1607.

[Details](#)

A restart has been scheduled

If you want, you can restart now. Or, you can reschedule the restart to a more convenient time. Be sure your device is plugged in at the scheduled time. Depending on the size of the update, the install might take a while.

We'll schedule a restart during a time you usually don't use your device (right now 3:30 AM tomorrow looks good).

Select a restart time

Time:

3	30	AM
---	----	----

Day:

Tomorrow

Restart now

5. After the restart, your OS will be updated to Win 10 version 1607.
6. Click on the URL below and download the appropriate driver from the manufacture of the external graphics card in your Razer Core.
http://drivers.razersupport.com//index.php?_m=downloads&_a=view&parentcategoryid=595&pcid=592&nav=0,350,592
7. After the download is completed, disconnect the WIFI or any internet connection from your Blade system.
8. Connect the Core to the Blade system via Thunderbolt 3 cable, without any LAN or Ethernet cable plugged in Core.
9. Install the graphics driver downloaded in Step 6.
10. Restart your system. This restart may take some time.
11. Connect the WIFI back to your system and plug in the LAN or Ethernet cable to your Razer Core if needed.