

How to factory reset Razer peripherals in Razer Synapse 4

This video is a step-by-step process on how to factory reset Razer peripherals in Razer Synapse 4.

Before we proceed.

Ensure that you've exported your device profile before doing a factory reset.

Make sure your Razer device is connected to your computer.

Let's get started.

Launch Razer Synapse 4.

Navigate to the device you want to reset.

Click on the help "?" icon located at the top-right corner of the Razer Synapse 4 window.

Click on the "RESET" button.

Confirm the reset action when prompted.

That's it! You have successfully reset your Razer device in Razer Synapse 4.