

This video is a step-by-step process on how to add, remove and customize lighting effects on the Razer Chroma App.

The Razer Chroma App enables you to create and edit Chroma Effects that you can apply to all supported Razer Chroma-enabled devices.

Before we begin, make sure to connect a device that is supported by the Razer Chroma.

Let's get started.

Open Razer Chroma.

Log in with your Razer ID to take full advantage of the Razer Chroma features.

Select "STUDIO" from the top menu bar.

Select any effect under "ADD EFFECT" to add it to the Effect Layers section.

The lighting effects you selected are stacked as layers, with the topmost layer becoming the most visible.

Drag and drop layers to reorder them.

You can also rename each layer or group them into folders. To rename a layer, click on the three-dot icon and select Rename. Type in your preferred name and press "enter" to save.

You also have options to change the effect, duplicate, or delete a layer.

Apply your preferred Chroma effect to your Razer device using the following application tools:

Selector – Enables you to select and view the properties of LEDs. You can select LEDs by clicking and dragging the cursor. Precise LED selections can be made through Ctrl + Click.

Pen - Lets you draw effects as precise shapes or patterns on LEDs. Select an effect from the list then draw directly on the LEDs.

Paint Bucket - Fills a specific section or the entire device with the selected property. The filled region will be highlighted when you hover over a selection.

Move and reposition your devices to replicate their exact placement on your desktop. This is to determine how other effects will travel across your devices.

You can also modify and customize the Chroma effect using the "Effect Settings" column found at the right side.

Under "PROPERTIES", set the color, playback, and other properties to further customize an effect. You can also reset an effect to its default settings by clicking the "Reset" button.

View your Chroma effect before applying it to your Razer Chroma-enabled devices. Click "Save" to apply the Chroma Effect.

To remove an entire effect layer, select the effect you wish to remove under "EFFECT LAYERS". Click the ellipsis and select "Delete".

To remove an entire effect from a selection or Razer device, select the effect you wish to remove under "EFFECT LAYERS".

Press and hold down "Ctrl" using the "Selector tool" and click on the LED(s) where you wish to remove the effect. The selected LED(s) will be highlighted in yellow.

Click the "Clear Selection" tool then select "SAVE".

That's it! You have successfully added, removed and customized lighting effects using the Razer Chroma App.