

How to clean your Razer peripherals

This video is a step-by-step guide on how to clean your Razer peripherals.

To maintain the peak performance of your Razer device, regularly clean it to remove accumulated dirt.

You will need the following:

Compressed air can.

Lint-free microfiber cleaning cloth.

Soft brush.

Here are general reminders before we begin:

Do not use rough abrasives, harsh cleaning agents, chemicals, and solvents such as thinner or benzene.

Do not place your device in the washing machine or clean it under running water.

Do not use a colored cloth to avoid color transfer or staining the material.

Do not fold, roll, or compress your device.

Do not expose the device to direct sunlight for drying. Instead, ensure it is completely air-dried before use.

Avoid liquid seeping through device openings such as speakers and ports.

Now, let's get started.

For the Razer mouse and keyboard, see the link in the description for instructions.

For the Razer mouse mat, use a lint-free microfiber cloth with a bit of tap water to wipe your mat in a circular motion.

If you are using a Razer Chroma-powered mat:

Unplug it from your system before cleaning.

Make sure to clean the feet of your mouse regularly for the best possible glide.

For Razer headsets:

Use the microfiber cloth to wipe your headset in circular motion.

Clean the inner earcup with the microfiber cloth too.

For stubborn dirt, dilute your regular detergent with water and soak the cloth for a few minutes.

Squeeze the liquid out of the cloth before using it to wipe away the dirt from the headphones.

Clean the silicone tips and cords.

Remove the debris from the grill of the earbuds.

Clean the contacts on the earbuds and the case using a Q-tip with a small amount of alcohol.

Allow the alcohol to dry before putting the earbuds to charge.

To clean your speakers:

Unplug your device from the power source and disconnect any connected devices.

Wipe the surface of your speaker unit with the microfiber cloth.

Here are the cleaning steps for the Razer Controller, microphone, webcam, and capture card.

Unplug all connections and switch off the device.

Gently but thoroughly wipe the surface of your device using a lint-free microfiber cloth.

Use compressed air to blow dust away from the hard-to-reach areas.

For the Razer Stream Controller, Razer Mixer, Razer Blue Screen, Razer Lighting, and Razer Emote Display, use a soft cloth or cotton swab to clean the device.

Make sure to unplug the Razer Mixer and Razer Emote Display before cleaning.

For Razer Smart Glasses,

Wipe it with a soft cloth with a bit of warm water.

Use the included cleaning cloth to wipe the lenses.

For Razer gaming chairs:

Use a soft brush or dry cloth to remove crumbs, dust, and grime. Alternatively, use a vacuum cleaner.

Wipe away dirt using a soft or microfiber cloth with a bit of warm water.

If the gaming chair is stained,

Wipe the stained area with a clean microfiber cloth.

Use a soft brush and gently agitate the stain with mild leather cleaner.

Wipe the cleaning agent off and let it dry.

There you have it!

You're ready for top-notch gaming again with your newly cleaned Razer peripheral!