

This video is a step-by-step process on how to toggle between PC and Bluetooth modes on Razer Nommo V2 speakers.

Let's get started.

First, to connect your Razer Nommo V2 speaker via PC mode, connect your speaker to any USB Type-A ports on your PC.

Then, press the Power button to power on the gaming speakers. The status indicator will turn solid green, indicating that the gaming speakers are in PC mode.

Set the Razer Nommo V2 as the default Output device on your PC.

The Razer Nommo V2 is now ready for use in PC mode.

To switch to Bluetooth mode, press the Power button twice. The status indicator will blink in blue, and an audio prompt will be heard to indicate that the gaming speakers are in pairing mode.

Activate Bluetooth on your device and select "Razer Nommo V2 (BT)" from the available devices.

Wait until both devices are connected. The status indicator will turn solid blue, and an audio prompt will be heard to indicate that the gaming speakers are now connected to your device.

The Razer Nommo V2 is now ready for use in Bluetooth mode.

While powered on, double press the Power button to switch between PC mode and Bluetooth mode.

To toggle to Bluetooth mode via Razer Synapse, launch Razer Synapse.

On the "Dashboard", select your Razer Nommo V2 speaker under "DEVICES".

On the "SOUND" tab, click on "SWITCH TO BLUETOOTH" under INPUT SOURCE.

Note that Razer Synapse won't be able to revert to PC mode when the gaming speakers have been set to Bluetooth mode. To set the gaming speakers to PC mode, double press the Power button.

There you have it! You have successfully toggled between PC and Bluetooth modes on your Razer Nommo V2 speaker.