

RAZER WOLVERINE V4 PRO

MASTER GUIDE

CONTENTS

1. WHAT'S INSIDE 2

2. WHAT'S NEEDED 4

3. LET'S GET YOU COVERED 4

4. GETTING STARTED 5


5. USING THE CONTROLLER 7


6. SAFETY AND MAINTENANCE 11

7. LEGALESE 12

1. WHAT'S INSIDE

- Razer Wolverine V4 Pro

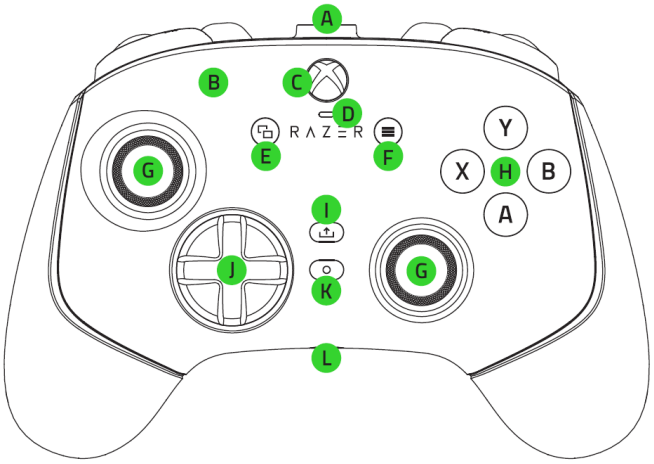

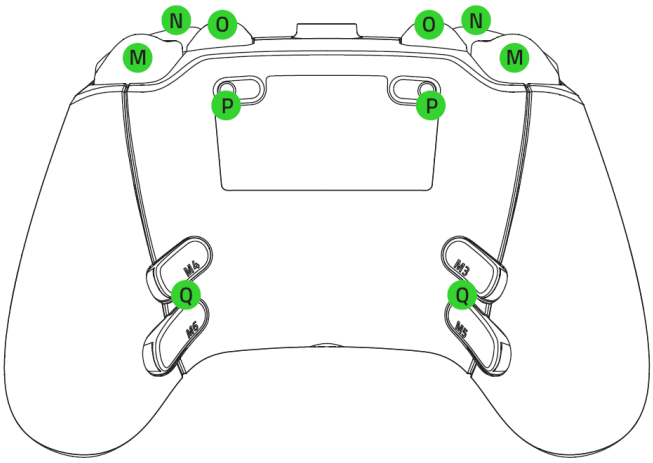


A. Type C port
B. Interchangeable magnetic faceplate
C. XBOX button
D. Status indicator
E. View button
F. Menu button
G. High Resolution capacitive thumbsticks
H. Razer Mecha-Tactile action buttons
I. Share button
J. Razer Mecha-Tactile 8-way floating D-pad
K. Function button
L. 3.5 mm headset port
M. Adjustable Razer Pro HyperTriggers (LT / RT)
N. Dual claw mappable grip bumpers (M1 / M2)
O. Bumpers (LB / RB)
P. Trigger stop switches
Q. Removable mappable mouse click back buttons (M3 / M4 / M5 / M6)


- Razer HyperSpeed Wireless 2.4GHz USB Type A dongle



- USB Type A to USB Type C cable



- 4 Replaceable thumbstick caps (2 tall concave/2 short convex)

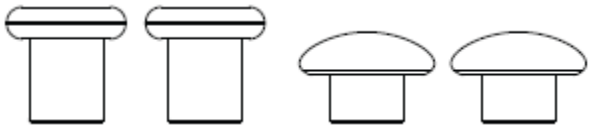

- 4 Back button covers



- Important Product Information Guide

2. WHAT'S NEEDED

PRODUCT REQUIREMENTS

- XBOX Series™ X|S or PC (Windows® 11 or higher)
- USB Type A port
- Internet connection for app installation

SAFETY STATEMENT

IMPORTANT! Before using your XBOX console with this product, read its instruction manual for safety, health, and other information regarding the use of your XBOX console.

3. LET'S GET YOU COVERED




1 YEAR WARRANTY

You've got a great device — now make it even better. Register your device at razerid.razer.com to get covered and unlock exclusive Razer benefits.

A valid Proof of Purchase is required for any Limited Warranty Claim.


4. GETTING STARTED

CHARGE YOUR CONTROLLER

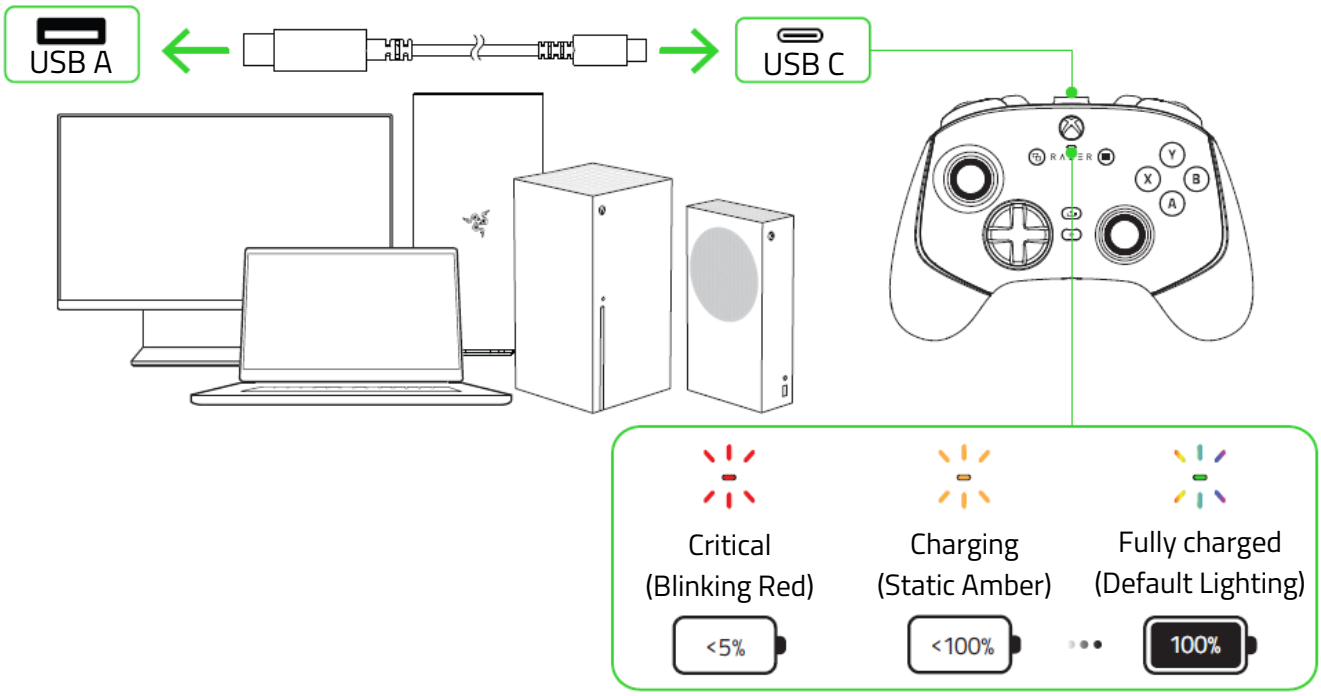


The battery status indicator will appear only when the controller is off, and just once when the applicable power level is reached. Charge this device with the included charging cable using a PC or gaming console. Avoid using fast chargers or wall adapters. For best results, please fully charge the controller before using it for the first time. A depleted battery will be fully charged in approximately 3 hours.

CONNECT TO YOUR DEVICE

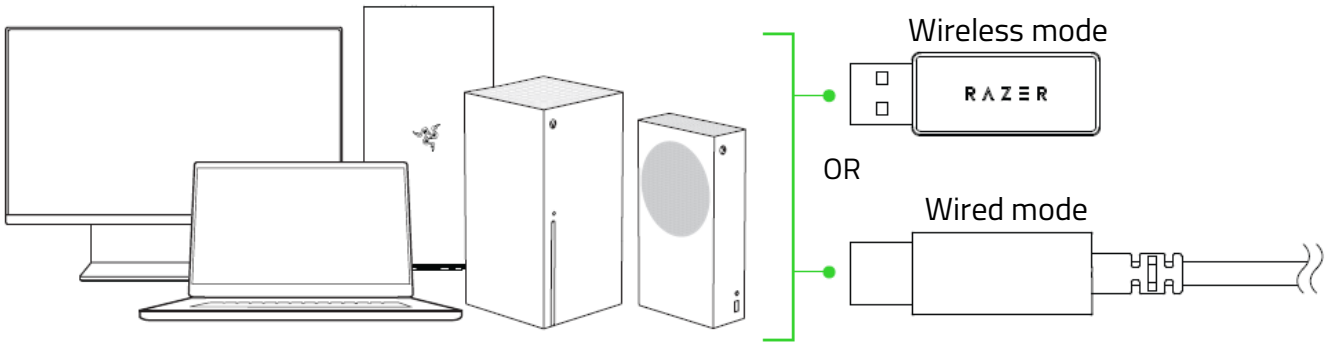

When you power on the Razer Wolverine V4 Pro, it will prioritize a wired connection. If no wired connection is found, it will switch to wireless mode. Install Razer Synapse when prompted or download the installer from razer.com/synapse

POWER YOUR CONTROLLER ON/OFF

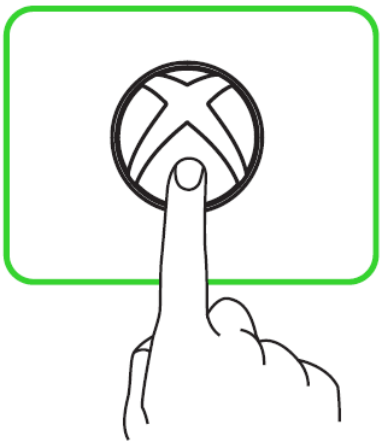


Press and hold


RECOGNIZE THE CONNECTION STATUS



Pairing to dongle
(Blinking White)

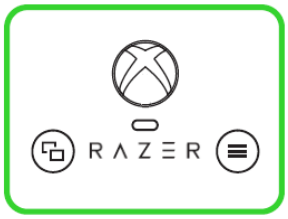

XBOX Mode
(Static White)

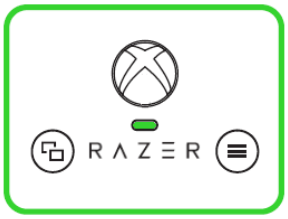

XInput PC Mode
(Static Green)



HID PC Mode
(Static Purple)

UNLOCK YOUR CONTROLLER'S FINAL FORM

Unleash your controller's full potential by installing the Razer™ Controller app on your XBOX Series™ X|S or Razer Synapse on your PC to customize its sensitivity clutch settings, multifunction button assignments, and much more.


RAZER CONTROLLER
APP FOR XBOX

RAZER SYNAPSE
FOR PC


Find out more about your gaming-grade controller at support.razer.com

5. USING THE CONTROLLER

UTILIZE THE TRIGGER STOP SWITCHES

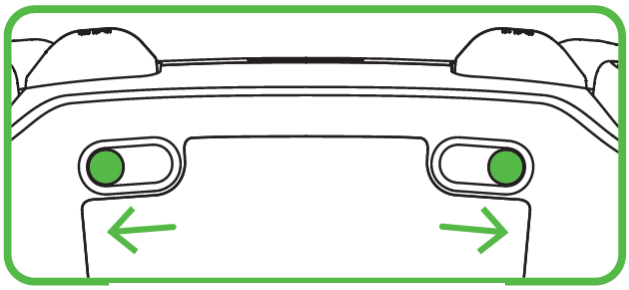



Locked

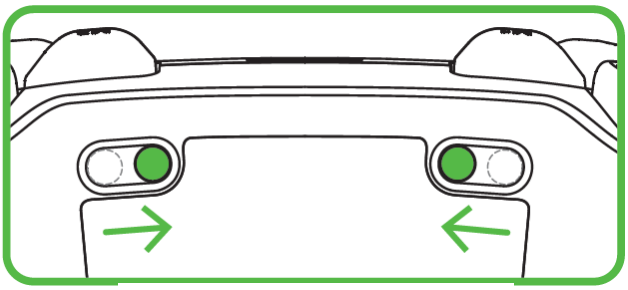

Unlocked


CHANGE THE REPLACEABLE THUMBSTICK CAPS

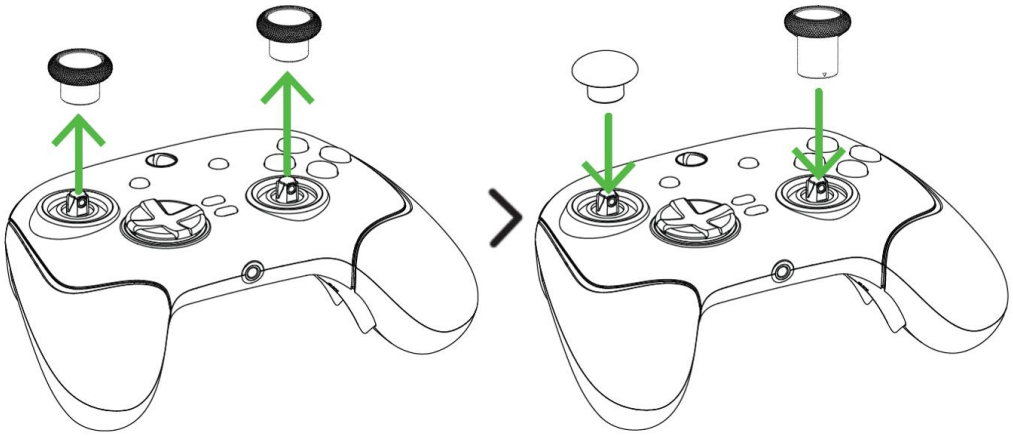

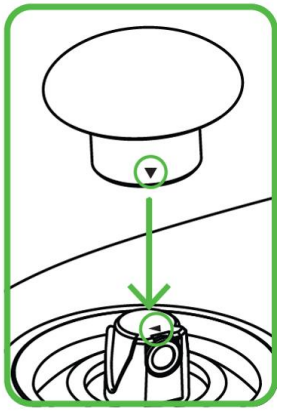


Align

CUSTOMIZE THE MULTI-FUNCTION BACK BUTTON

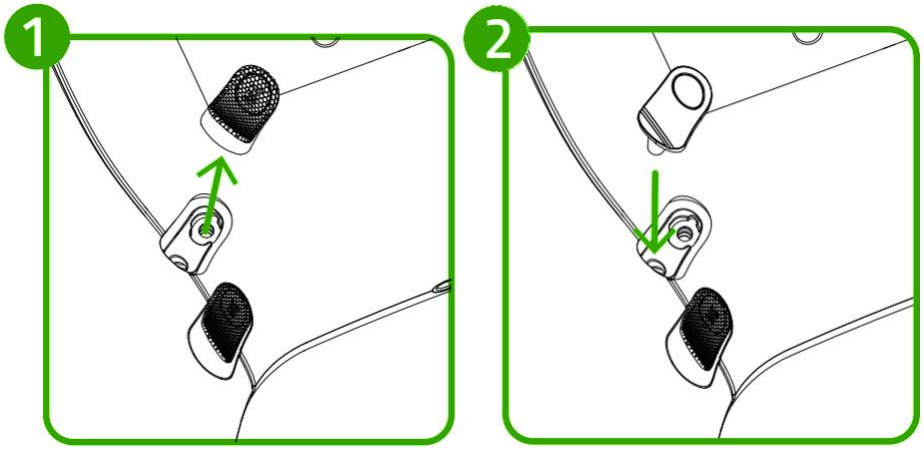

PERSONALIZE THE INTERCHANGEABLE MAGNETIC FACEPLATE

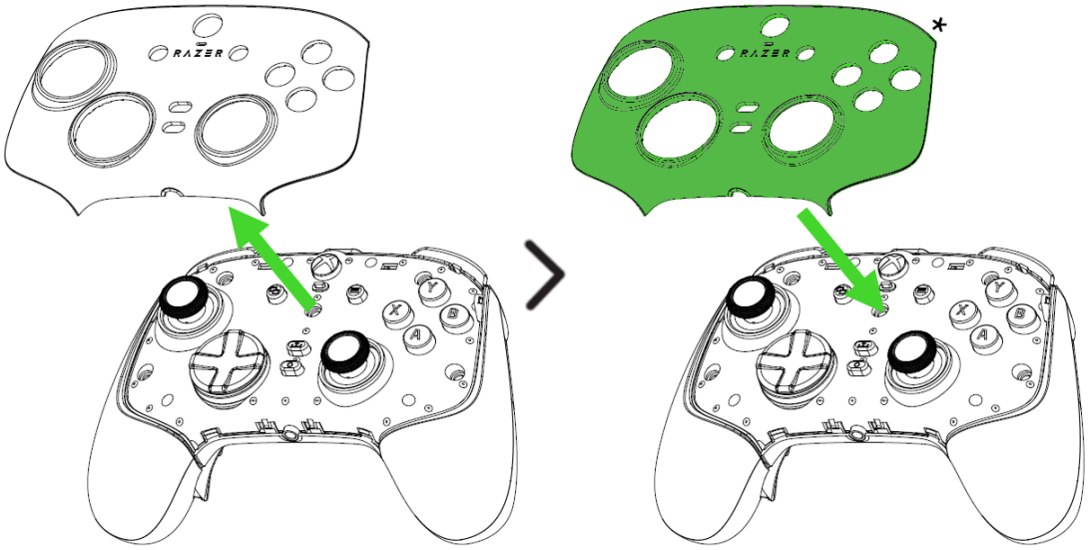

**Sold separately*

KNOW THE FUNCTION BUTTON COMMANDS


Input	Function
Hold + Press	Volume Up
Hold + Press	Volume Down
Hold + A Press	Switch to Profile A
Hold + B Press	Switch to Profile B
Hold + X Press	Switch to Profile X
Hold + Y Press	Switch to Profile Y
Hold + RB Press	Increase Haptics Strength
Hold + LB Press	Decrease Haptics Strength

Hold + Hold + Press X	Use GIP XBOX Mode
Hold + Hold + Press A	Use XInput PC Mode
Hold + Hold + Press Y	Use HID PC Mode

REASSIGN THE MULTI-FUNCTION (M1-M6) MAPPING


By default, the M1-M6 bumpers and buttons are unmapped. Use the steps below or Razer Synapse to configure them.

1. Hold down the Function button and the claw grip bumper/mouse click back button you want to remap.

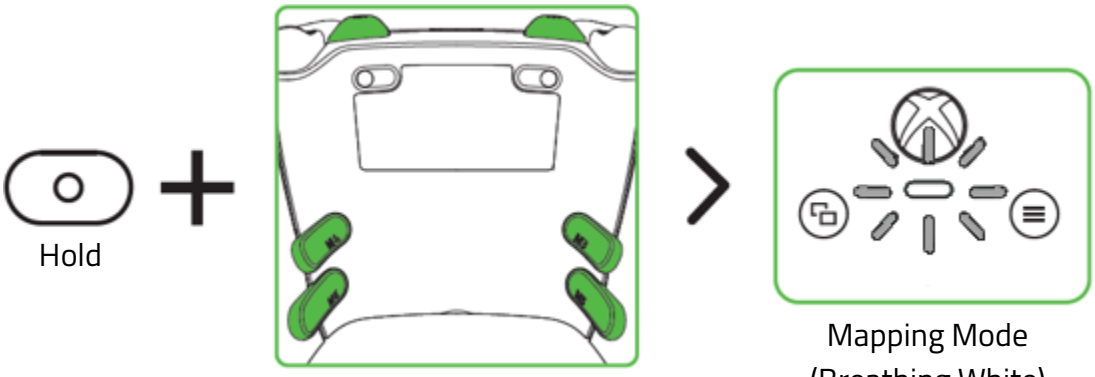

Mapping Mode
(Breathing White)


2. Press the button you want to assign to it.

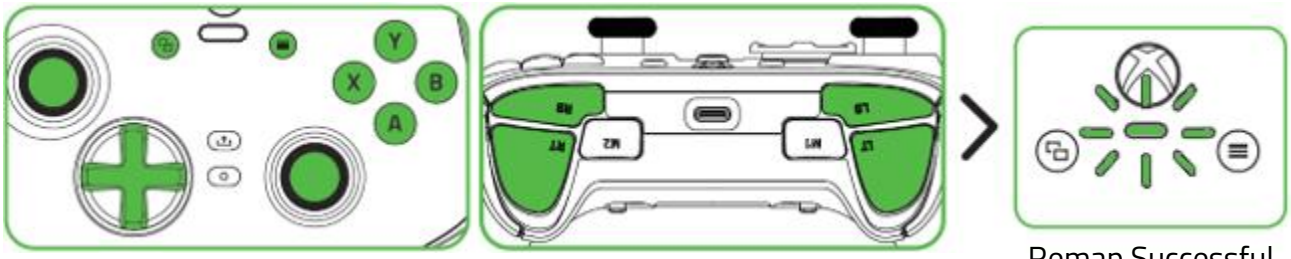

Remap Successful
(Blinking Green)

USE THE SENSITIVITY CLUTCH FUNCTION

Holding down the assigned button will lower the chosen analog stick's sensitivity by up to 50%.

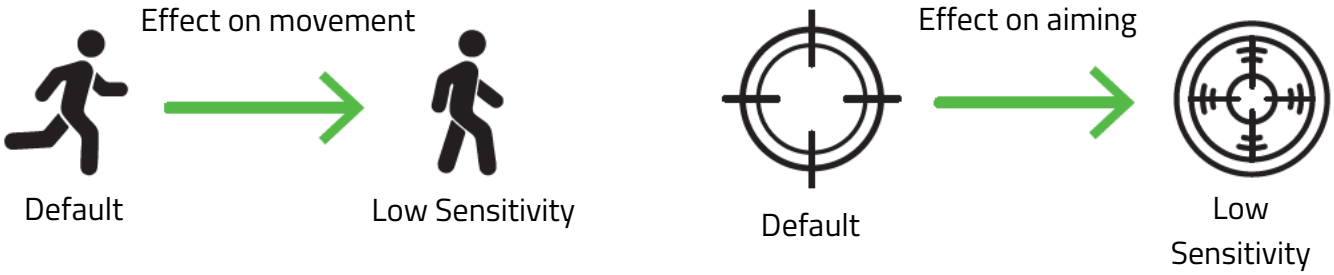

The sensitivity clutch function can be customized using the Razer Controller app for XBOX or Razer Synapse for PC.

6. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using the Razer Wolverine V4 Pro, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support. Do not attempt to service or fix the device yourself at any time.

Do not take apart the device and do not attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the controller and all its parts and accessories out of the reach of small children to avoid accidents and/or injuries.

Keep the device and its components away from liquid, humidity or moisture. Operate the device and its components only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and switch off the device in order to let the temperature stabilize to an optimal level.

Charge this device with the included charging cable using a PC or gaming console. Avoid using fast chargers or wall adapters.

MAINTENANCE AND USE

The Razer Wolverine V4 Pro requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton to prevent dirt buildup. Do not use soap or harsh cleaning agents.

7. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2026 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers." and "Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries.

Microsoft, XBOX, XBOX "Sphere" Design, XBOX Series X|S, XBOX One and Windows 11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Wolverine V4 Pro (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.