

RAZER HAMMERHEAD V3 X HYPERSPEED

MASTER GUIDE

CONTENTS

1. WHAT'S INSIDE 2

2. WHAT'S NEEDED 3

3. LET'S GET YOU COVERED 3

4. GETTING STARTED 4

5. USING YOUR EARBUDS 8

6. SAFETY AND MAINTENANCE 11

7. LEGALESE 12

1. WHAT'S INSIDE

- Razer HammerHead V3 X HyperSpeed
  A. Intuitive touch sensor

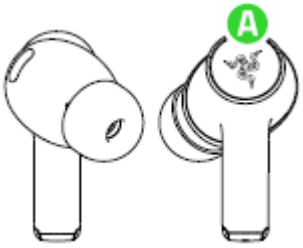

- Charging case with integrated Razer HyperSpeed Wireless
  B. Status indicator
  C. USB Type C charge/data port
  D. Multi-function button

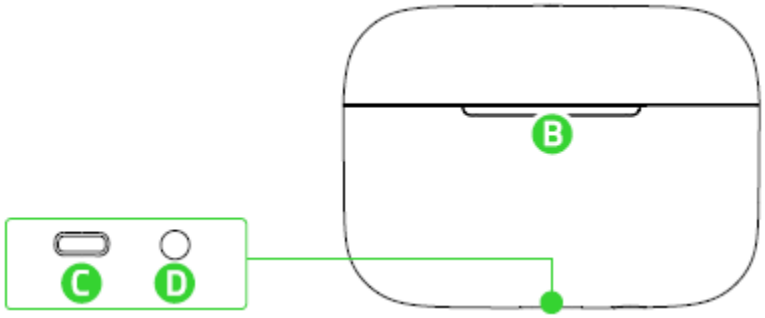

- USB Type A to USB Type C cable



- Silicon ear-tips in 3 sizes (S, M*, L)



- Important Product Information Guide

**Pre-installed with the earbuds*

2. WHAT'S NEEDED

PRODUCT REQUIREMENTS

- Devices with Bluetooth audio capability or USB Type A port

RAZER AUDIO APP REQUIREMENTS

- iOS 18/Android 14 (or higher) device with Bluetooth connectivity
- Internet connection for app installation

RAZER SYNAPSE REQUIREMENTS

- Windows 11 (or higher)
- Internet connection for app installation

3. LET'S GET YOU COVERED

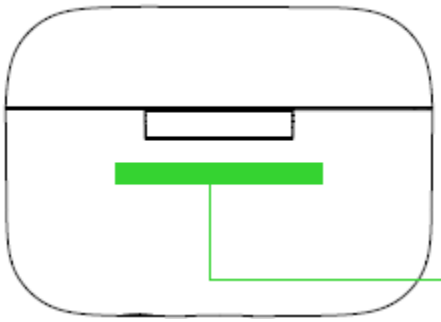

Your product's serial number can be found here.



You've got a great device — now make it even better. Register your device at razerid.razer.com to get covered and unlock exclusive Razer benefits.

A valid Proof of Purchase is required for any Limited Warranty Claim.

4. GETTING STARTED

CHARGE YOUR DEVICES

Please fully charge the Razer HammerHead V3 X HyperSpeed before using it for the first time. For best results, connect the charging case directly to the USB port of your Xbox/computer using the charging cable provided. Avoid using fast chargers or wall adapters. A depleted battery will be fully charged in approximately 2 hours.

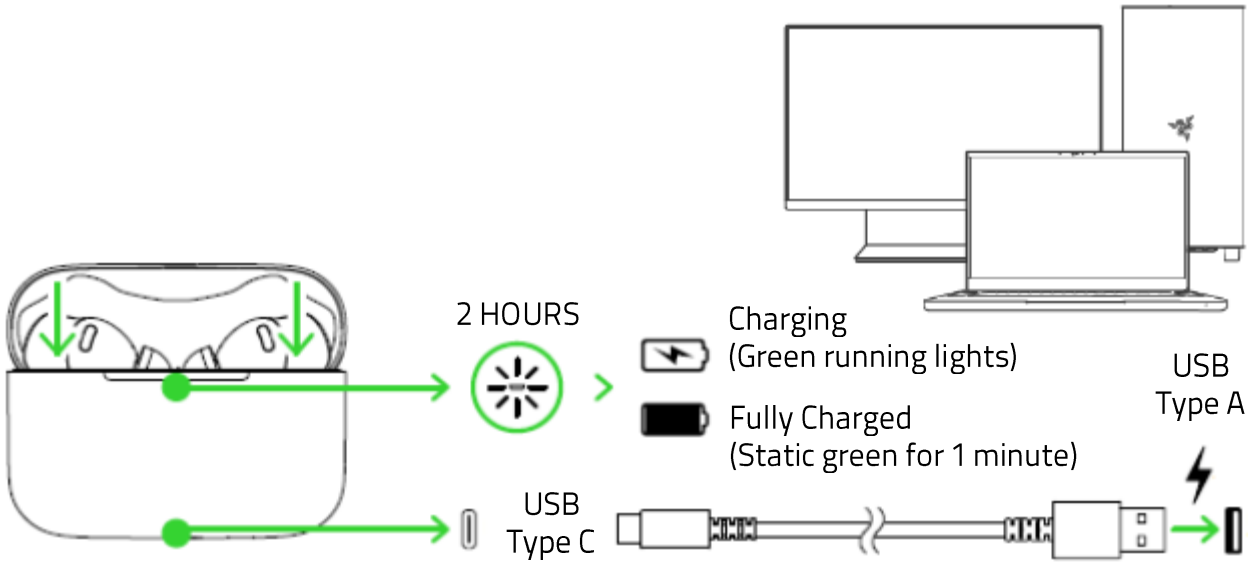

Charging the earbuds using any port on the Xbox console only works when the console is not in Sleep Mode. When the case is fully charged, the status indicator will stay lit for 1 minute and then fade out.

CONNECT TO YOUR EARBUDS

A. Via Bluetooth

Via Bluetooth

1.

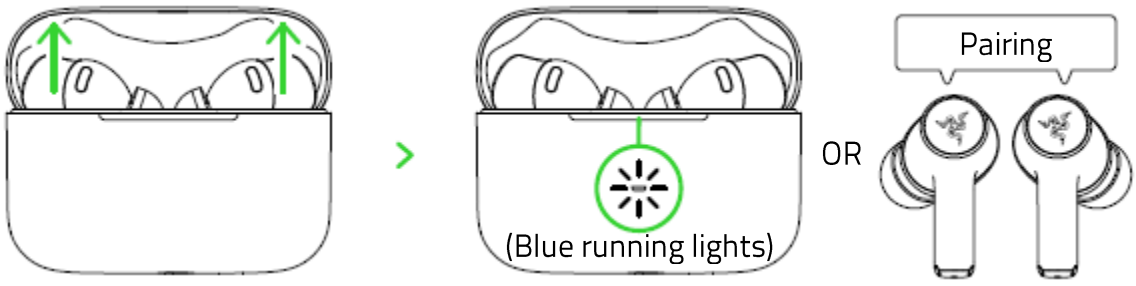

When trying to connect to your Razer product, remember to keep it within 1 meter of your mobile device.

2.

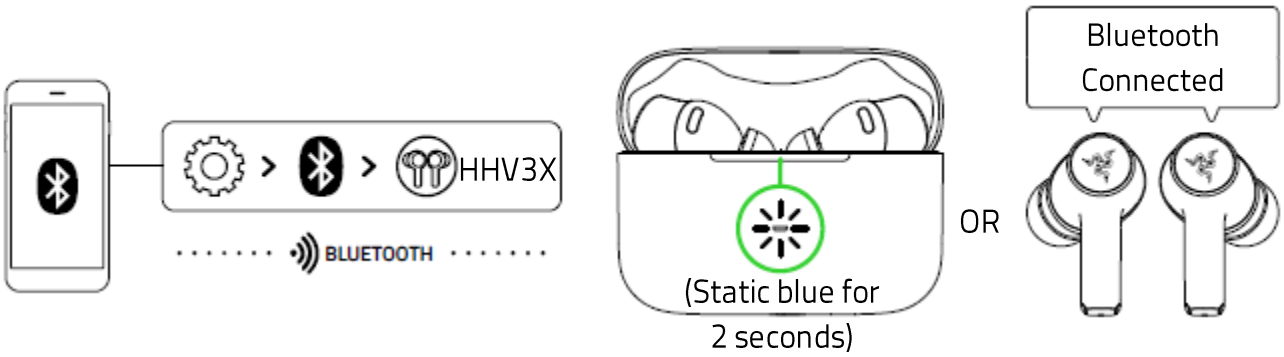

If the earbuds fail to connect to your device, they will remain in search mode for three minutes before powering off. To try again, place the earbuds in the Charging case with integrated Razer HyperSpeed Wireless, keep the lid open, and press the multi-function button at the bottom for 4 seconds until the status indicator displays blue running lights.

Set Up For Mobile

Download the Razer Audio app to customize your earbuds' EQ settings, auto shutoff feature, gaming mode, and much more — anytime, anywhere.



Razer Audio

A. Download the mobile app on your mobile device.
B. Launch the app and follow the on-screen instructions.

When using the Razer Audio app, ensure the earbuds are connected to your mobile device via Bluetooth.

B. Via Charging case with integrated Razer HyperSpeed Wireless

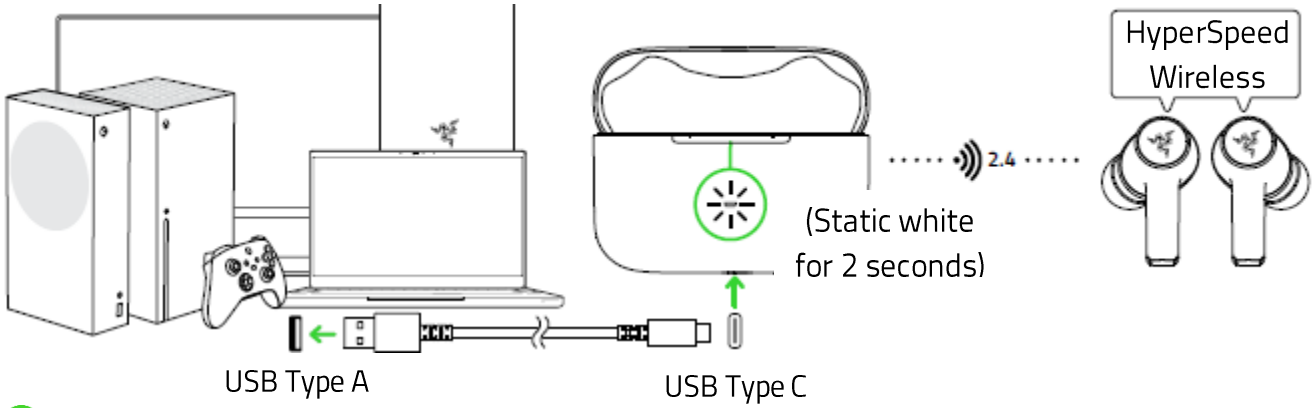

By default, the earbuds will first search for the Charging case with integrated Razer HyperSpeed Wireless before activating Bluetooth pairing mode. When plugging the Charging case with integrated Razer HyperSpeed Wireless into your Xbox console, make sure it doesn't obstruct the console's USB Type-A port.

On XBOX consoles

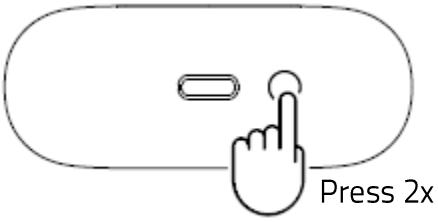

On PC

Sound settings	Output > Razer HammerHead V3 X HyperSpeed
	Input > Razer HammerHead V3 X HyperSpeed

When using the earbuds with compatible devices, set the Razer HammerHead V3 X HyperSpeed as the default input and output device (if applicable).

Personalize your PC experience

Use the Razer Synapse app to customize your earbuds' EQ, enable audio enhancements, and fine-tune other advanced features. Install Razer Synapse when prompted, or download the installer from razer.com/synapse

*Activate THX® Spatial Audio+**

Unleash the full potential of your Razer HammerHead V3 X HyperSpeed by enabling 360° positional audio for a natural and lifelike experience through Razer Synapse.



**Only available on Windows 11 and above.*

5. USING YOUR EARBUDS

SWITCH BETWEEN AUDIO SOURCES

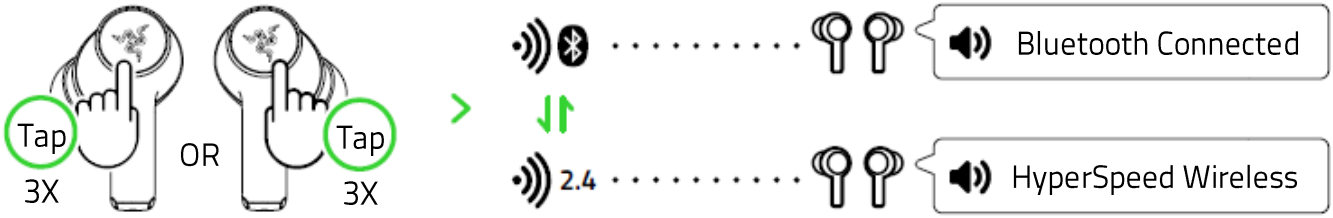

For best performance, keep your earbuds within a very close distance of each audio source.

REPLACING THE SILICONE EAR-TIPS

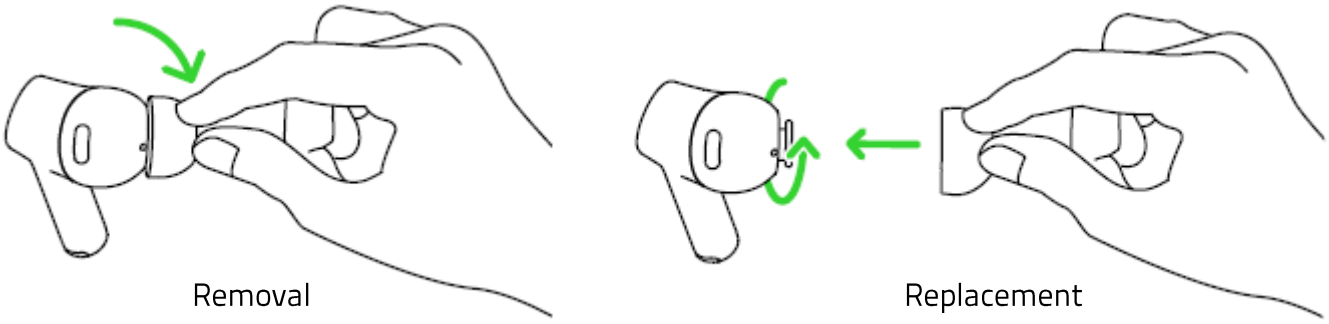

Due to individuals' different ear canal sizes, it's recommended to interchange the ear-tips to a larger or smaller size to improve comfort and sound quality and achieve a proper seal.

CHECKING THE BATTERY LEVELS

CHARGING CASE BATTERY LEVEL

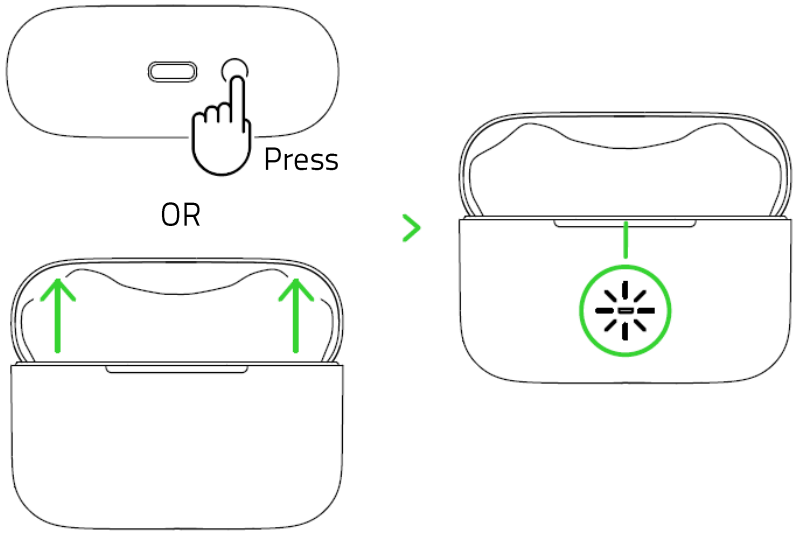

Charging Case Remaining Battery Level	Status Indicator
High	Green
Mid	Yellow
Low	Red

EARBUDS BATTERY LEVEL

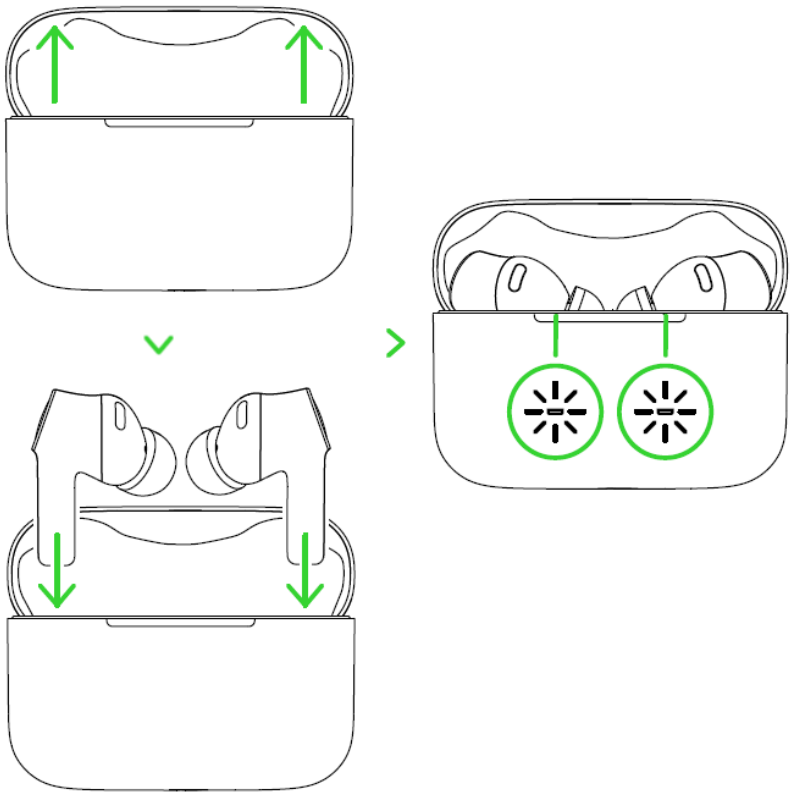

Earbuds Remaining Battery Level	Individual Status Indicator
High	Green
Mid	Yellow
Low	Red

FUNCTION BUTTON QUICK REFERENCE

The default gestures for the earbuds are listed below:

Action	Effect
Tap	Play/pause when playing media
	Accept incoming call or end current call**
	Keep current call and reject incoming call**
	End current call and switch to call on hold**
Tap and hold for 2 seconds	Power on the corresponding earbud
	Mute/unmute earbud microphone
	Accept incoming call**
Double tap	Return to previous track when playing media (left earbud)

	Skip to the next track when playing media (right earbud)
	Reject incoming call**
	End current call**
	Put current call on hold and answer incoming call**
	Switch between current call and call on hold**
Double tap, then hold the last tap for 2 seconds	Decrease volume (left earbud)
	Increase volume (right earbud)
Triple tap	Switch between wireless modes
Triple tap, then hold the last tap for 3 seconds	Reinitiate Bluetooth pairing mode

The following gesture is available for the Charging case with integrated Razer HyperSpeed Wireless.

Action	**Effect**
Tap and hold the Multi-function button for 4 seconds	Reinitiate Bluetooth pairing mode***
Triple tap, then hold the last tap for 2 seconds	Perform a factory reset

***Only available in Bluetooth mode*

****With the lid open and the earbuds inside*

Find out more about your gaming-grade earbuds at support.razer.com

6. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer earbuds, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for assistance.

Don't take apart the device, and don't attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the device away from liquid, humidity, or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device to stabilize the temperature to an optimal level.

We recommend stretching your Razer earbuds gently apart before placing them over your head to minimize headband stress. However, please avoid overstretching the earbuds beyond its technical limits.

The device isolates external ambient sounds even at low volumes, resulting in lowered awareness of your external surroundings. Please remove the device when engaging in activities requiring active awareness of your surroundings.

Listening to excessively loud volumes over extended periods can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86db to affect your hearing for 8 hours a day. We, therefore, recommend that you reduce the volume to a comfortable level when listening for prolonged periods. Please, take good care of your hearing.

MAINTENANCE AND USE

Your Razer earbuds require minimal maintenance to keep them in optimum condition. Once a month, we recommend you clean the device using a soft cloth or cotton swab to prevent dirt buildup. Don't use soap or harsh cleaning agents.

7. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2026 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and "For Gamers. By Gamers." are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X|S, Xbox One and Windows 11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

Android, Google, Google Logo, Google Play, and the Google Play logo are trademarks of Google LLC.

Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Razer is under license.

Windows and the Windows logo are trademarks or registered trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent, or other intellectual property right. Your Razer HammerHead V3 X HyperSpeed (the "Product") may differ from pictures, whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential, or incidental damages, arising in any way out of distribution of,

sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.